


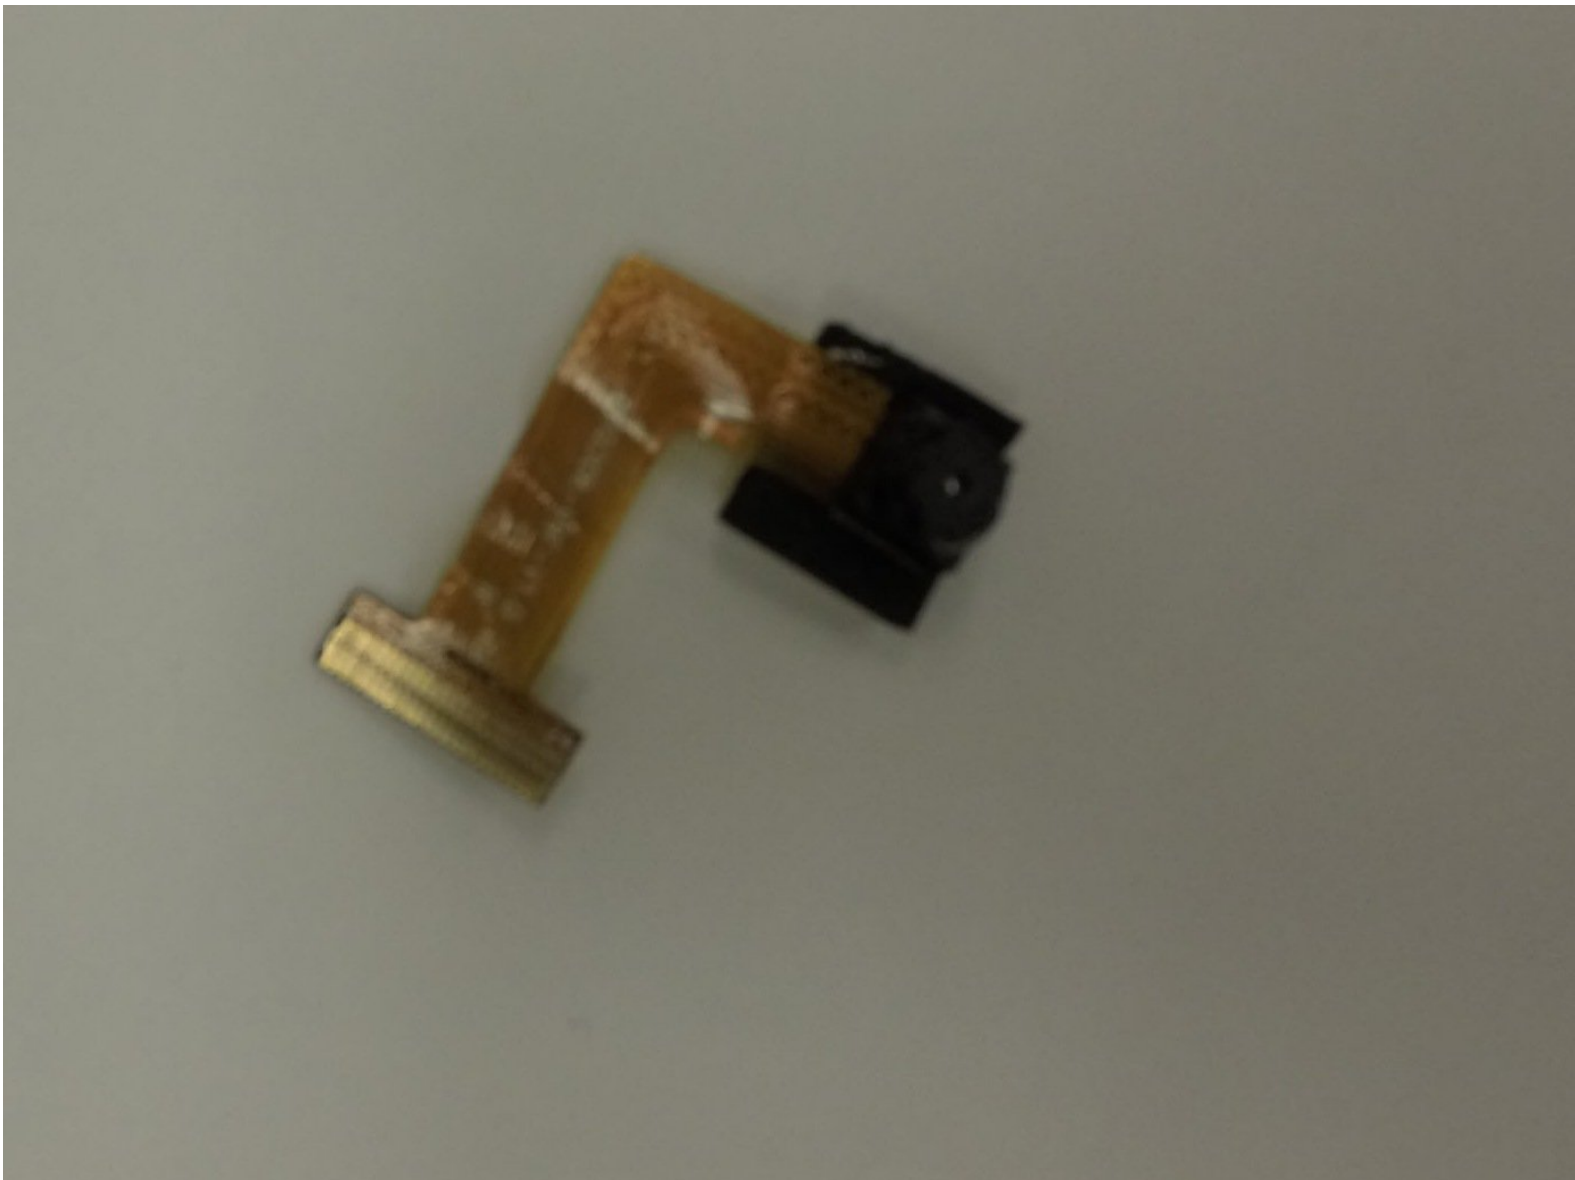

Hipstreet Equinox 2 Camera Replacement

Follow this guide to replace the camera in your tablet.

Written By: Brandon Snodgrass



INTRODUCTION

The camera could be broken from a fall or maybe when your screen cracked the camera was damaged as well. This guide will show the steps to easily replace the camera.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Rear Case




- Remove the two 3mm screws using a PH00 screwdriver.

Step 2

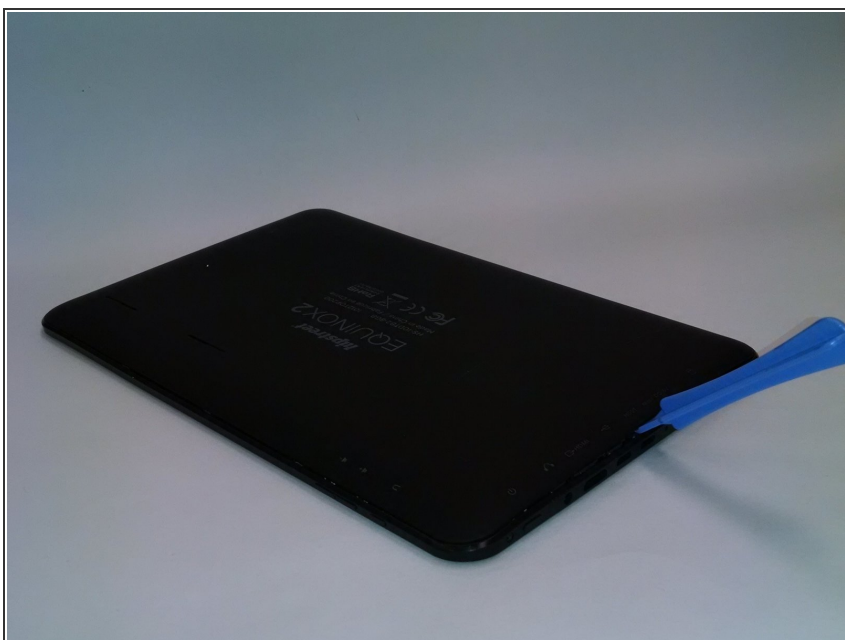

- Use the blue plastic opening tool to gently pry the back case off.

Step 3 — Camera

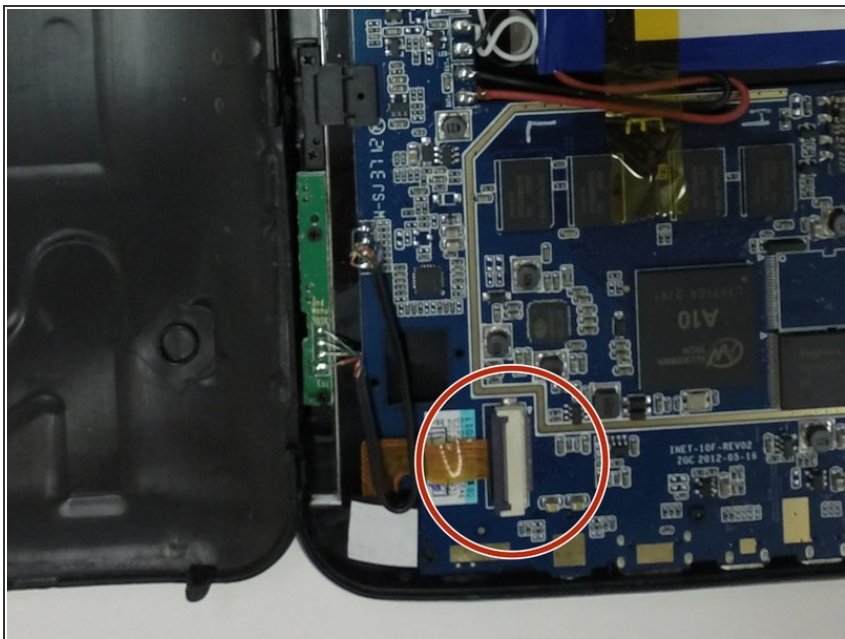

- Lift the tab on the wire ribbon shown here

Step 4



- Pull up gently on the camera housing shown on this picture, it is glued in place.

To reassemble your device, follow these instructions in reverse order.