


Samsung Gusto 2 Speaker Replacement

Speaker replacement and the connections for the speaker.

Written By: Michael Huang



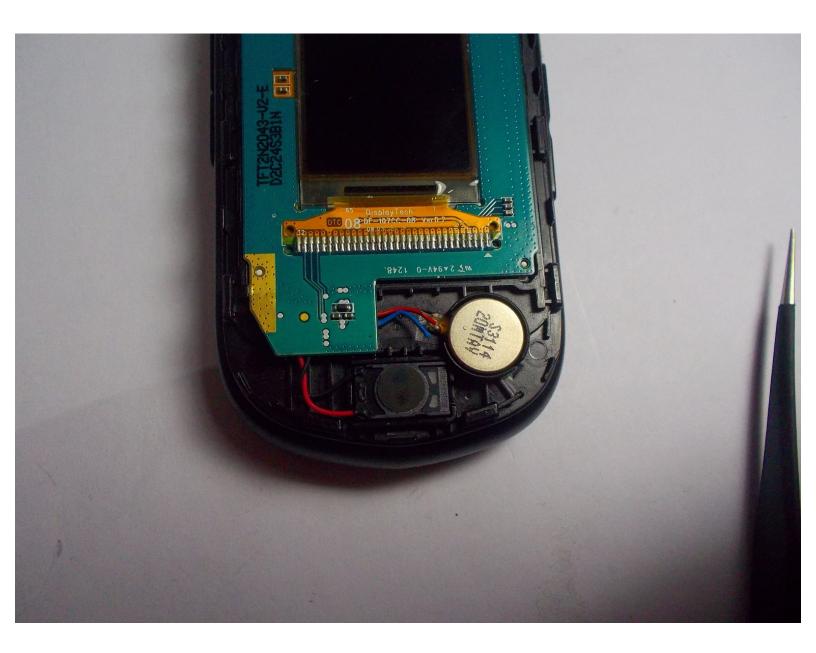

- Spudger (1)
- Tweezers (1)
- Phillips #0 Screwdriver (1)

Step 1 — Speaker





- Flip open the phone as shown in picture 1.
- Remove the two screws highlighted in picture 1.


Step 2



- Take your spudger and forcefully insert it between the black and silver part of the phone.
- Once the spudger is successfully wedged in between these two pieces, circle the frame of the phone.

Step 3



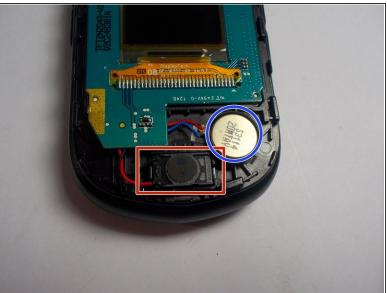

- The phone should be exposed like picture 1 once the case was removed.
- The highlighted sections correspond to the bullet colors. To replace either simply disconnect the wires attached, and lift the piece off.
- Speaker Component
- Vibration Component

To reassemble your device, follow these instructions in reverse order.