


# **Vivitar Vivicam T027 Lens Replacement**

You will need a set of tweezers, a Phillips #00...

Written By: Nicole Knoebel

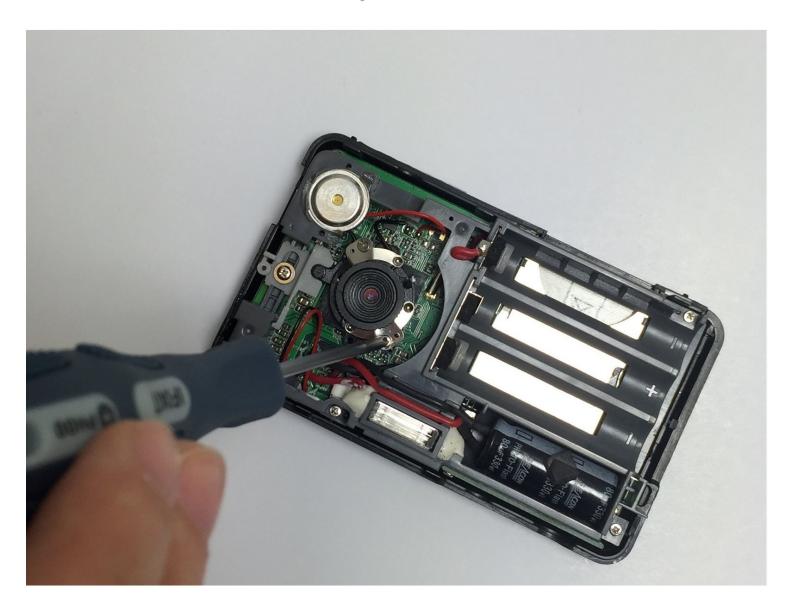

#### **INTRODUCTION**

You will need a set of tweezers, a Phillips #00 screwdriver and a Phillips #000 screwdriver to replace your camera's lens.



Phillips #00 Screwdriver (1) Phillips #000 Screwdriver (1) Tweezers (1)

#### Step 1 — Lens




Use a Phillips #00 screwdriver to remove the 3 mm screws at the sides of the camera.

#### Step 2



- Remove sticker on top of camera as it covers a screw.
- in total on the sides of the camera.


#### Step 3

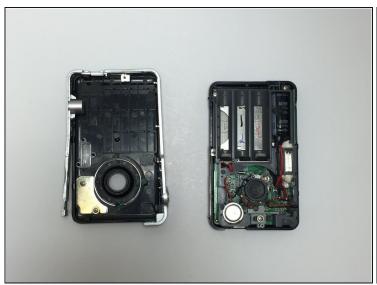




• Separate the front piece of the camera from the back, revealing the motherboard.

### Step 4

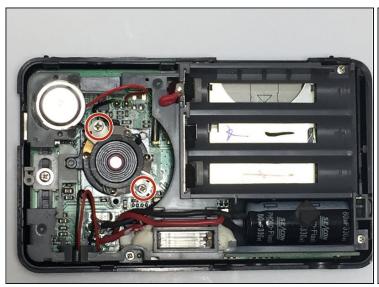

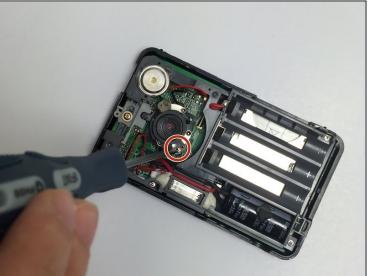

• Use a Phillips #000 screwdriver to remove the two 2.3 mm screws that surround the lens.


## Step 5





Remove the two silver plates using tweezers.

#### Step 6

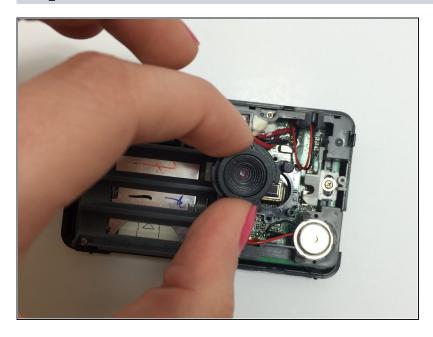

 Remove the black lens carefully with your fingers.

To reassemble your device, follow these instructions in reverse order.