



# Matsunichi MarquisPad MP977 Front Facing Camera Replacement

Written By: Kathryn Sherlock





## TOOLS:

[Phillips #00 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

---

### Step 1 — Front Facing Camera



- Using the PH #00 Phillips head screwdriver, unscrew the two screws.

## Step 2



- Place the device face down on a flat surface.
- Insert the wide-tipped plastic opening tool into the top of the left speaker slot.  
**⚠ Be sure not to puncture the covering of the speaker.**
- Pry the back plate open and slide the tool in a clockwise direction, moving it along the opening between the device and the back plate until you reach the power button.

## Step 3




- Insert the opening tool into the slot located to the right of the speaker, at the top edge of the device.
- Then, pry open the back plate of the device, and slide the tool counter clockwise along the device until you reach the charging port.

## Step 4



- Remove the back plate and place it to the side of the device.



## Step 5

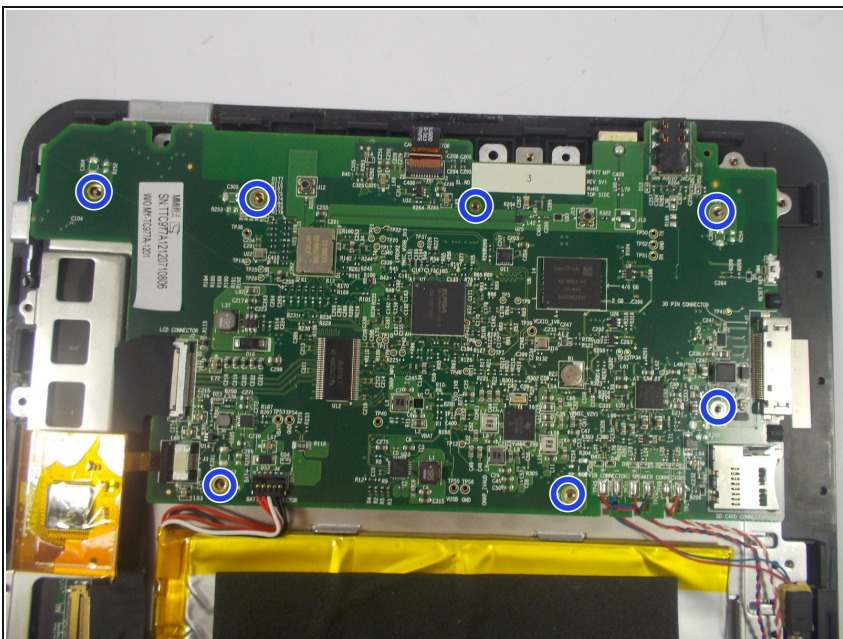

- With the same screw driver, PH #00 Phillips head, remove the seven screws holding in the motherboard.
- ⓘ Place the screws somewhere safe where they won't fall.




## Step 6

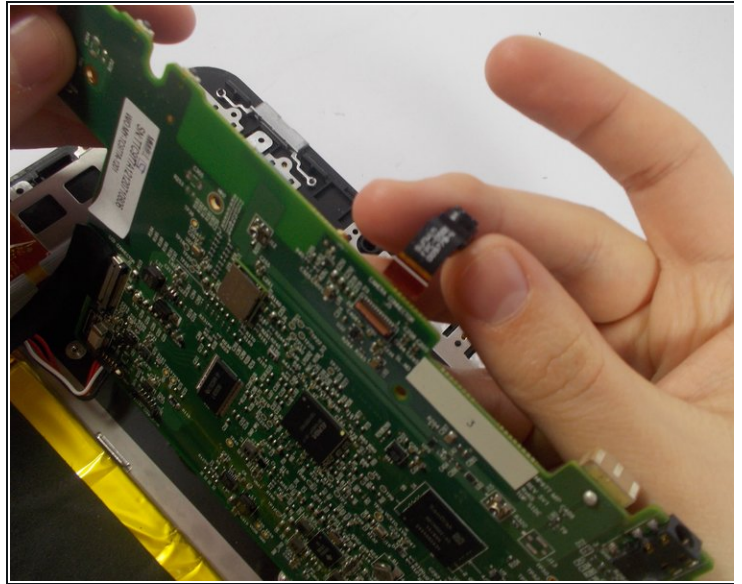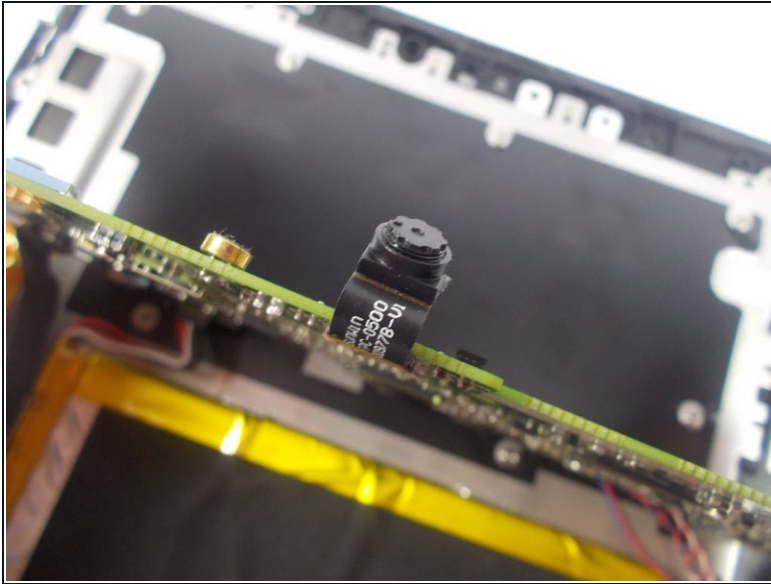

- Gently pull the camera optic fiber out of it's slot to release the flap. This will allow the flap to open easily.

⚠ Be sure not to damage the camera port.

## Step 7

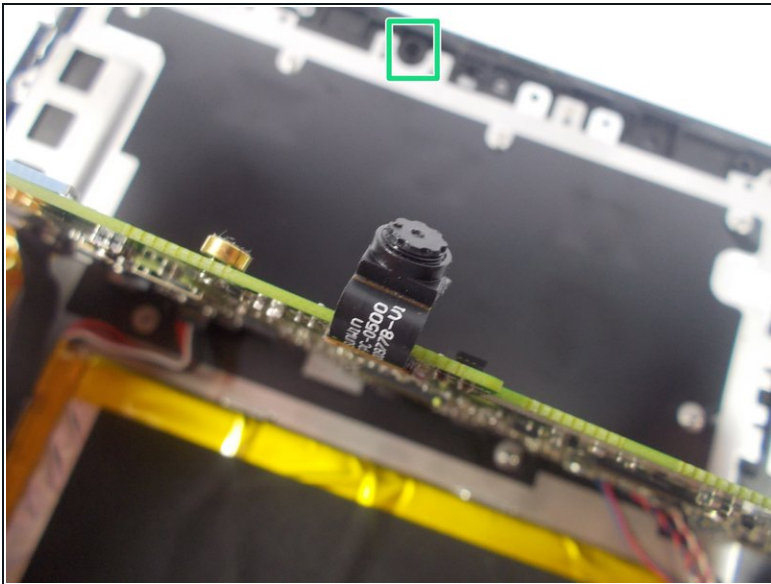

- Last, Insert the new camera into the pinhole camera slot.

---

To reassemble your device, follow these instructions in reverse order.