



AKASO KingPad A90 Volume Rocker/Power Button Unit Replacement

The Volume Rocker/Power Button Unit can...

Written By: Miles



INTRODUCTION

The Volume Rocker/Power Button Unit can sometimes break, and must then be replaced to continue to be able to adjust the volume.

TOOLS:

[Tweezers](#) (1)

[iFixit Opening Tool](#) (1)

[Phillips #000 Screwdriver](#) (1)

[Soldering Workstation](#) (1)




[Spudger](#) (1)

Step 1 — Volume Rocker/Power Button Unit






- Remove screws
- Insert spudger tool on the middle of the left side, between the white and black plastic
- Slide in a plastic opening tool and use it to further pull the back off.
- Work your way around the edge of the tablet with the plastic opening tool and insert more as needed
- Pull off the back cover

Step 2

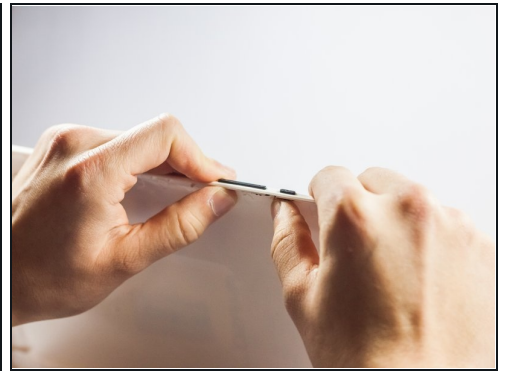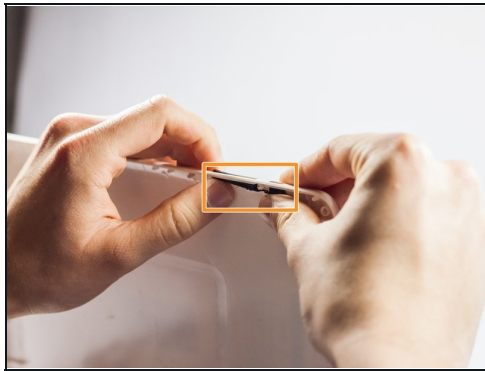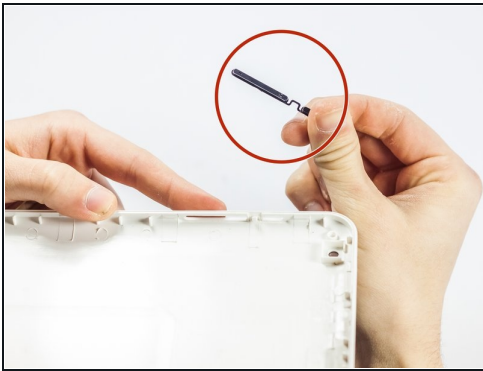

- Remove the broken volume rocker/power button unit.
- Place the new part into the empty slot.

Step 3

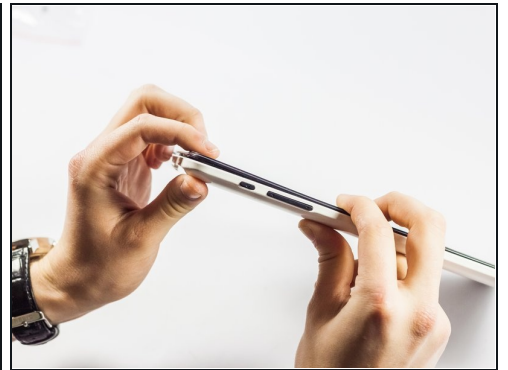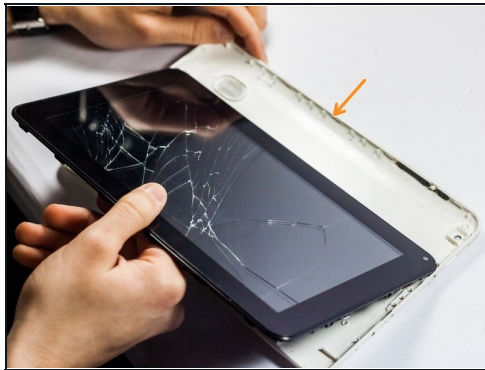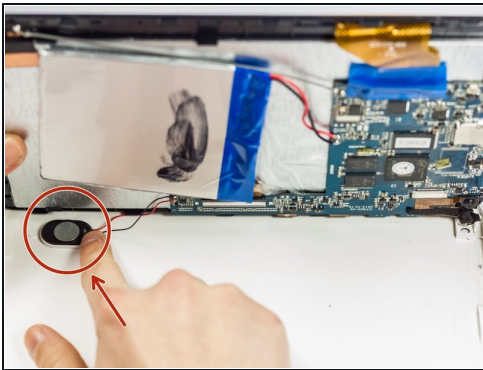

- Gently press the speaker into place.
 - Replace the back cover with the new part in place.
 - ⓘ Be careful to not let the volume rocker unit fall out of place.
 - Replace the screws.
-