




Nikon COOLPIX P7700 Reflective Mirror Replacement

By following these ten steps one can...

Written By: Dustin Wahl

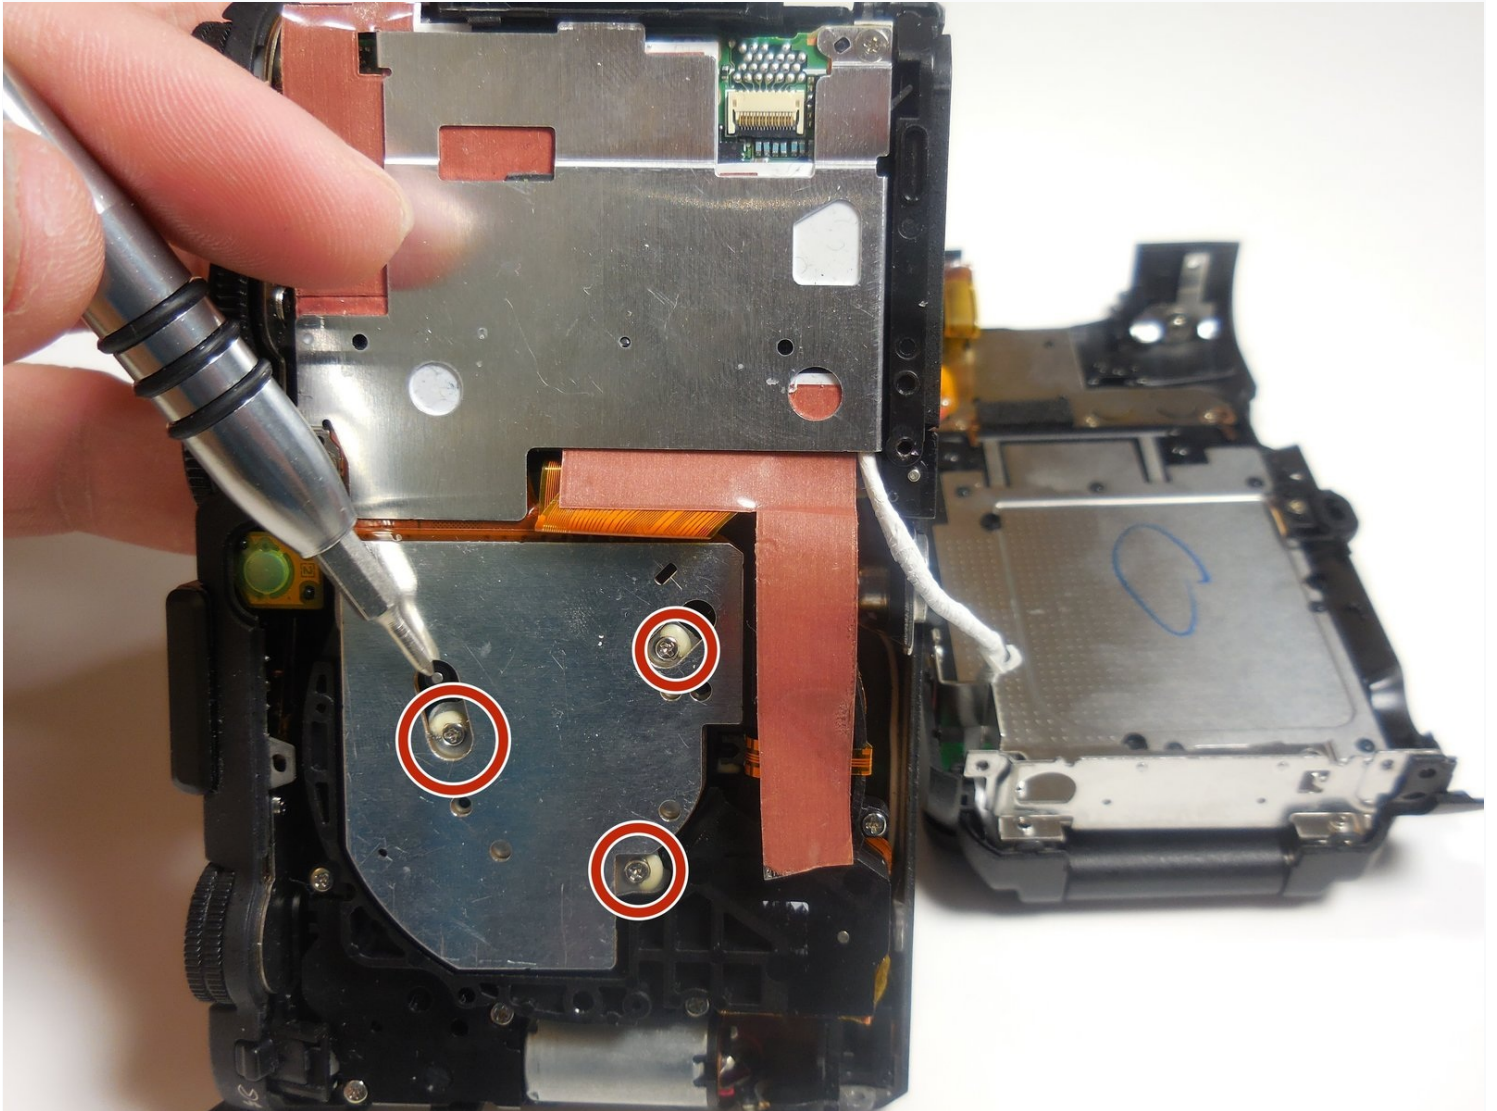


INTRODUCTION

By following these ten steps one can effectively replace the Nikon COOLPIX P7700 camera's internal reflective mirror.

TOOLS:

Phillips #00 Screwdriver (1)

Step 1 — Back Casing

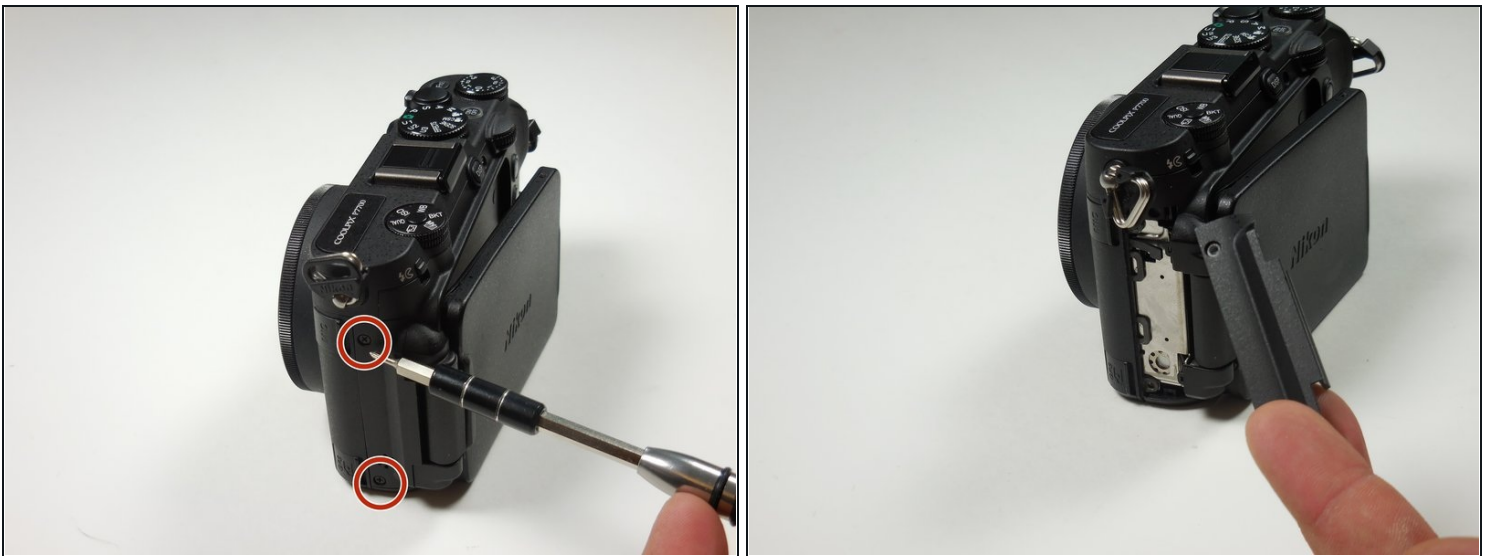

- Turn camera to the left side and remove the two 4.3 mm black side screws using the Phillips #00 screwdriver.
- Remove the side panel.

Step 2



- Open the touch screen, and remove the three 4.3 mm black screws inside using the Phillips #00 screwdriver.

Step 3



- Remove the 4.3 mm black screw on top of the camera, right above where the screen folds out. Use the Phillips #00 screwdriver.

Step 4





- Remove the two 4.3 mm black screws on the right side of the camera using the Phillips #00 screwdriver.

Step 5




- Remove the 4.3 mm black screws on the bottom of the camera using the Phillips #00 screwdriver.

Step 6

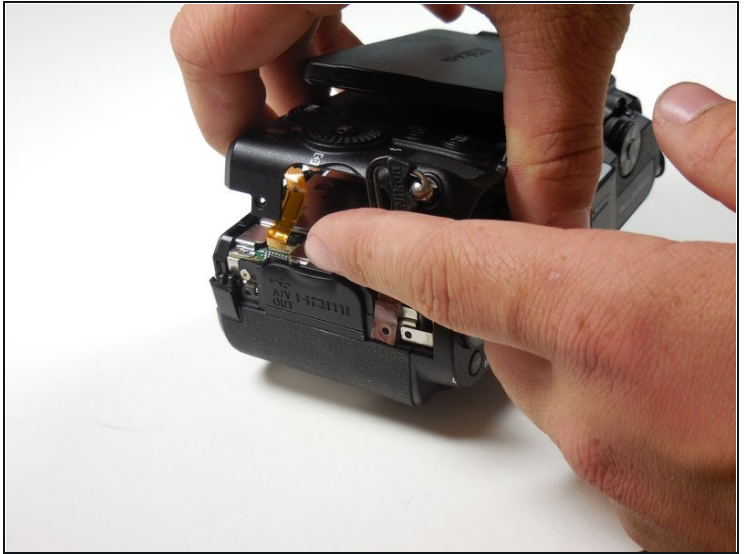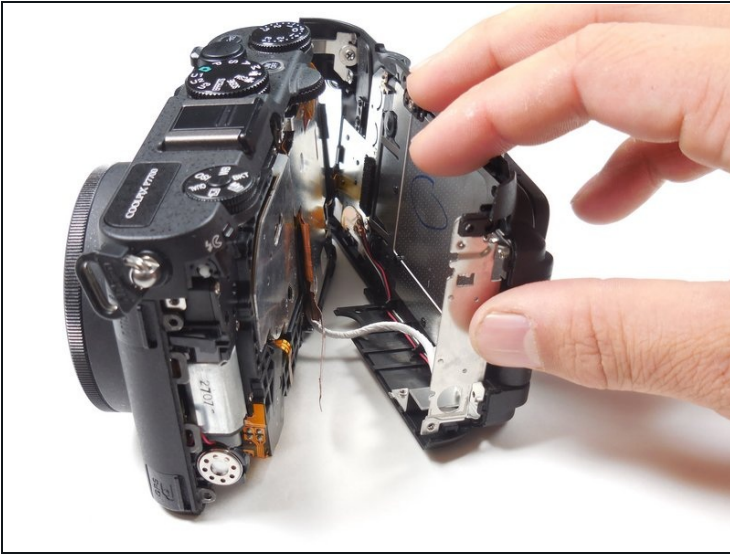



- Begin separating the camera into two parts.
- ① It is okay to remove the orange ribbon. This will be easily put back into place when re-assembling.

Step 7

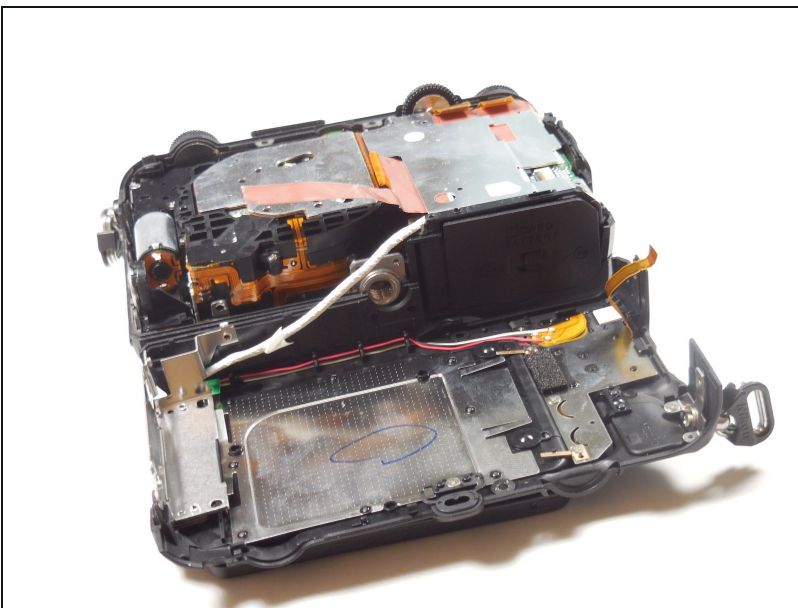

- Remove the back casing.


Step 8 — Reflective Mirror

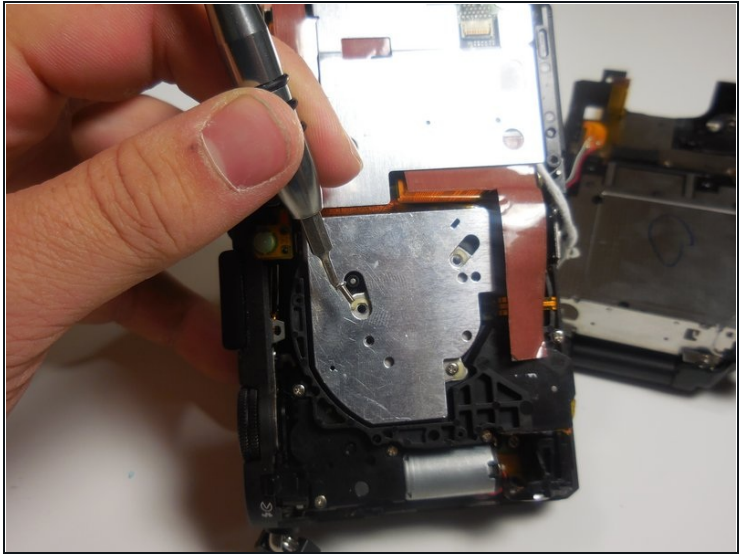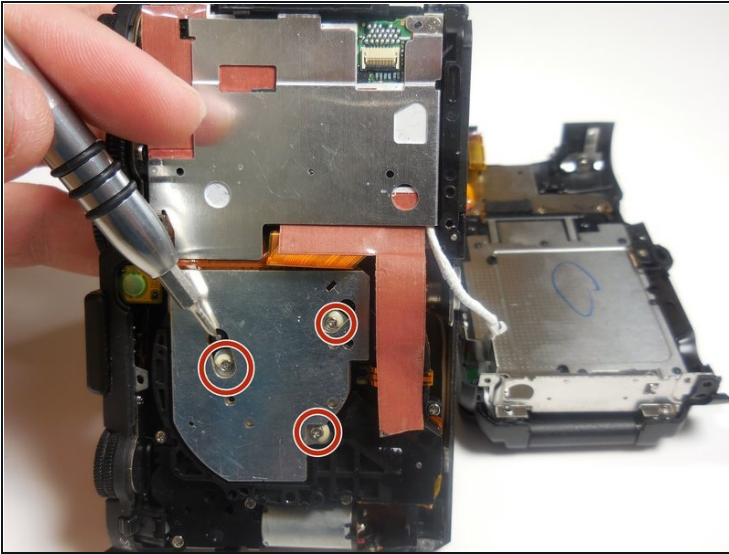

- Remove the three 4.3 mm screws on the right metal sheet using a Phillips #00 screwdriver.


ⓘ It is okay to remove the orange ribbon.

Step 9

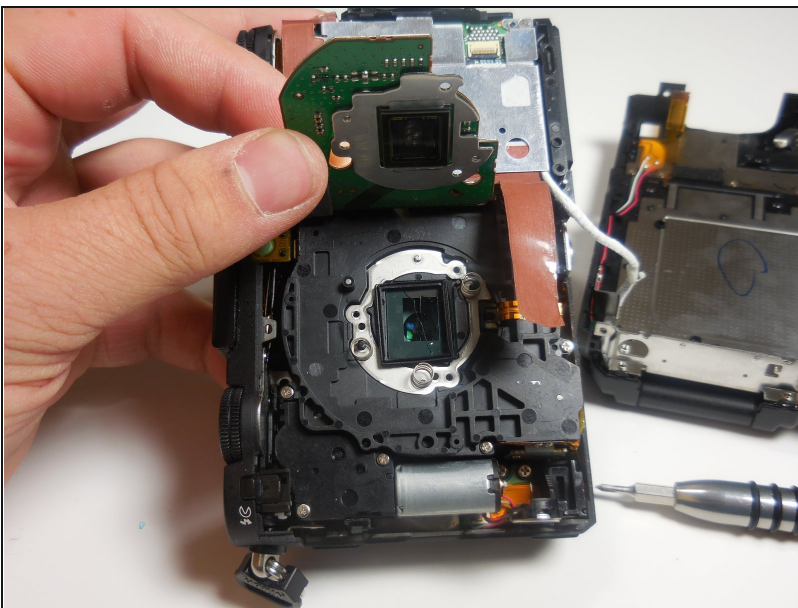

- Lift the metal sheet up to locate the reflective mirror, but do not bend or remove it.

Step 10

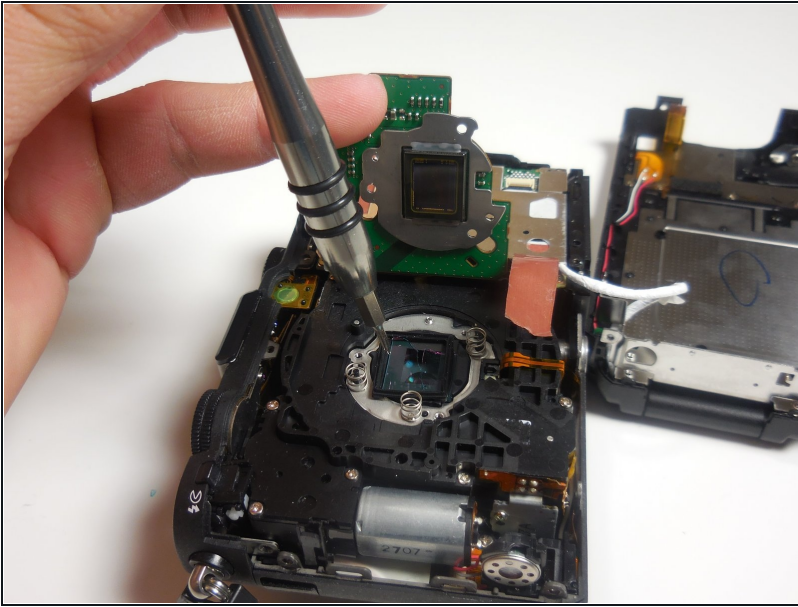

- Delicately remove the glass mirror and exchange it with the replacement mirror.
- Place the metal sheet back down and secure the three 4.3 mm screws.

To reassemble your device, follow these instructions in reverse order.