




Samsung Galaxy S Blaze Volume Rocker Replacement

This guide will allow any user of the Samsung...

Written By: Jake Best

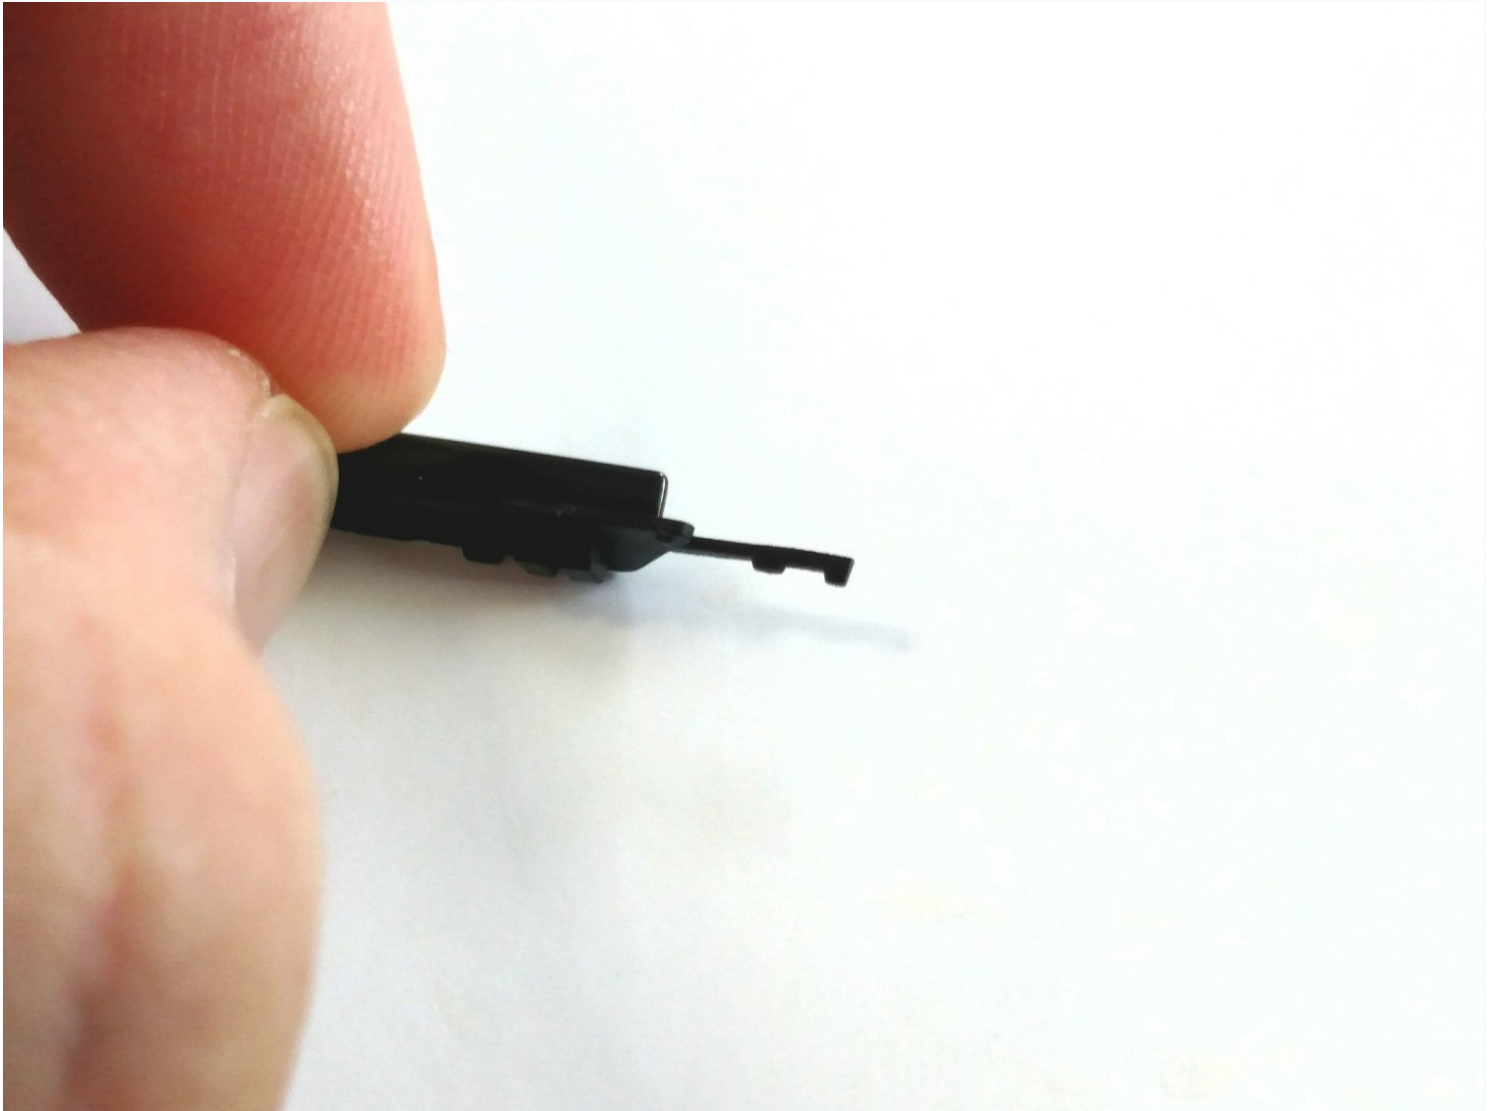

INTRODUCTION

This guide will allow any user of the Samsung Galaxy S Blaze to properly replace the volume rocker. Replacing the volume rocker in a Samsung Galaxy S Blaze is an easy process with no surprises.

Keep in mind to be careful while handling the screws for the phone, as they will damage easily.

TOOLS:

[Phillips #00 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

[Spudger](#) (1)

Step 1 — Volume Rocker




- Start by removing the back plate to expose the battery by pulling the back and front plates apart.

Step 2



- Remove the battery from the device and set aside.


Step 3

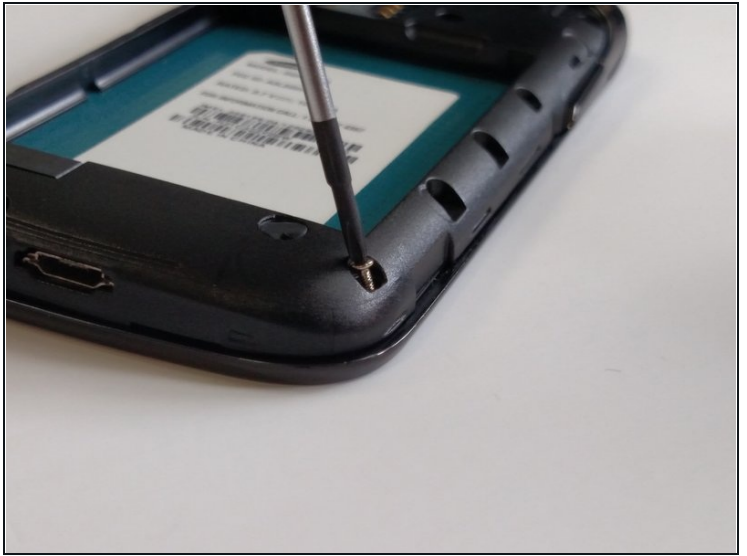

- Using a **Phillips Head Screwdriver size 00**. Remove all eight 4mm screws from the frame.



① The eight screws are all the same size.

Step 4

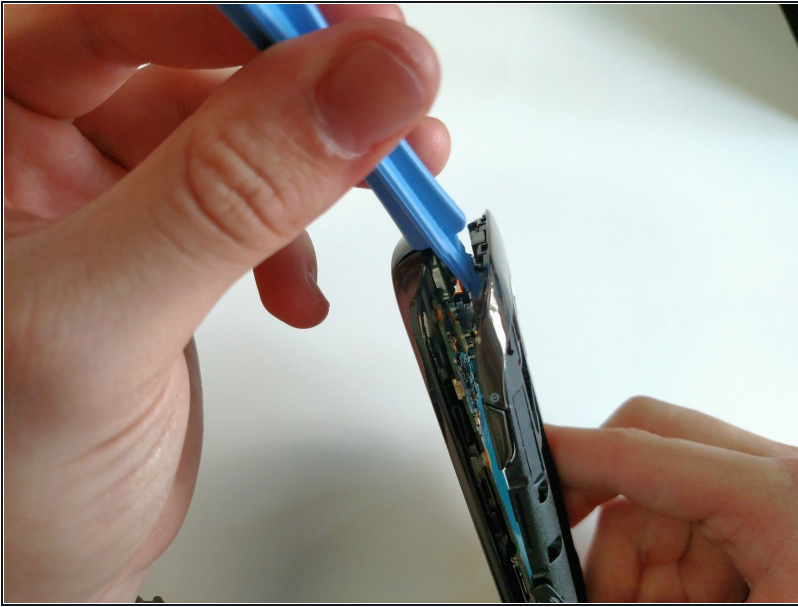

- Remove the frame from the phone by prying it off with the iFixit blue plastic opening tool.
- Work around the phone with the tool until the frame is off.
- ① You may need to use a bit of force to pry off the frame.

Step 5

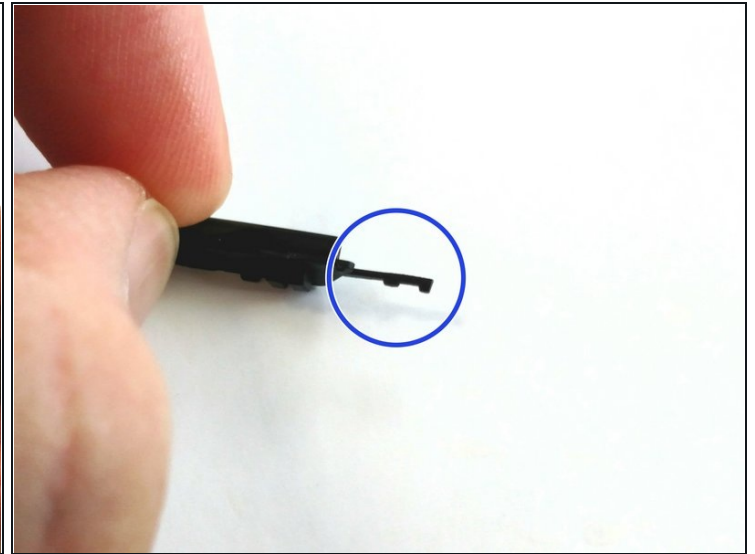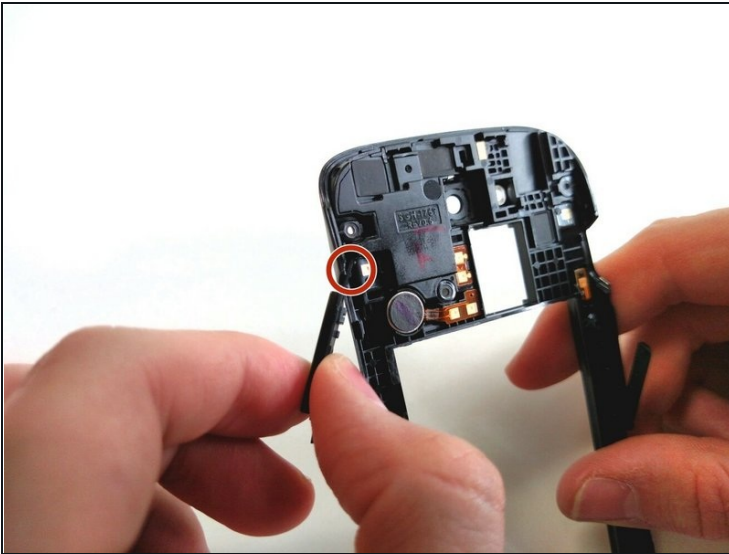

- ① The volume rocker is held into the frame by two small prongs.
- Carefully unhook the prongs from the frame by pulling to the side and remove the volume rocker.
- ① The prongs on the volume rocker look like this.

To reassemble your device, follow these instructions in reverse order.

If there is something wrong with your device, try this: [Samsung Galaxy S Blaze 4G Troubleshooting](#)