



# ClickN Kids Tablet Battery Replacement

The Clickn Kids Tablet (Android CK07T-PK-8) is...

Written By: Kevin Finney



# INTRODUCTION

The Clickn Kids Tablet (Android CK07T-PK-8) is a toy beloved by many children, but when the battery dies it often ends up getting tossed away or forgotten. The battery is a vital part of the tablet and it is not useable without it. A tablet with a broken battery may have a black screen or die quickly when in use. By following these steps, you can extend the life of your Clickn Kid tablet.

In order to replace the battery, you will need experience in soldering, patience and a careful touch. Removing batteries can carry the risk of battery acid leakage, so please ensure not to bend battery more than necessary. To find out more about soldering, please visit the link below.


[How To Solder and Desolder Connections](#)

## TOOLS:

[Outil pour ouvrir iFixit](#) (1)


[Soldering Iron](#) (1)

## Step 1 — Battery

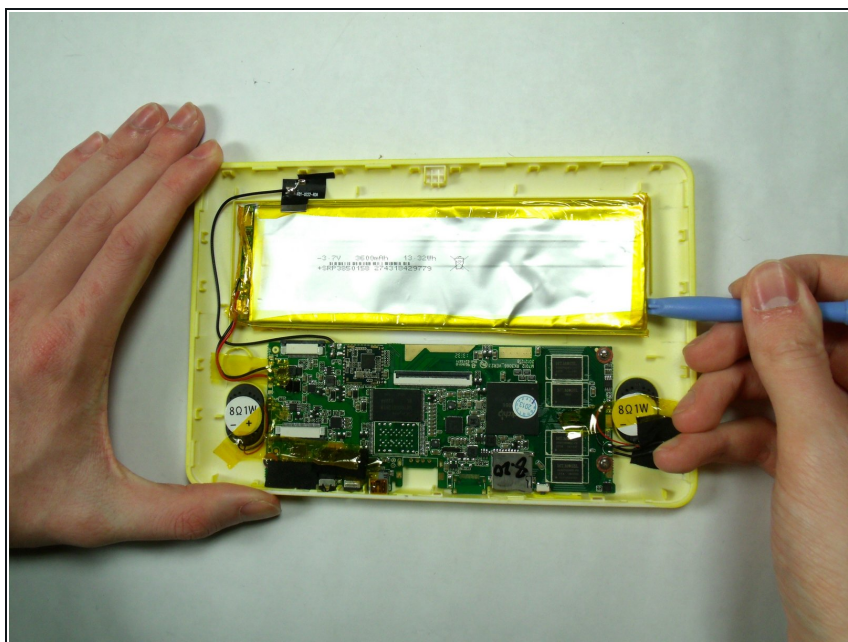

- Refer to existing [camera replacement guide](#) to access tablet battery.

## Step 2

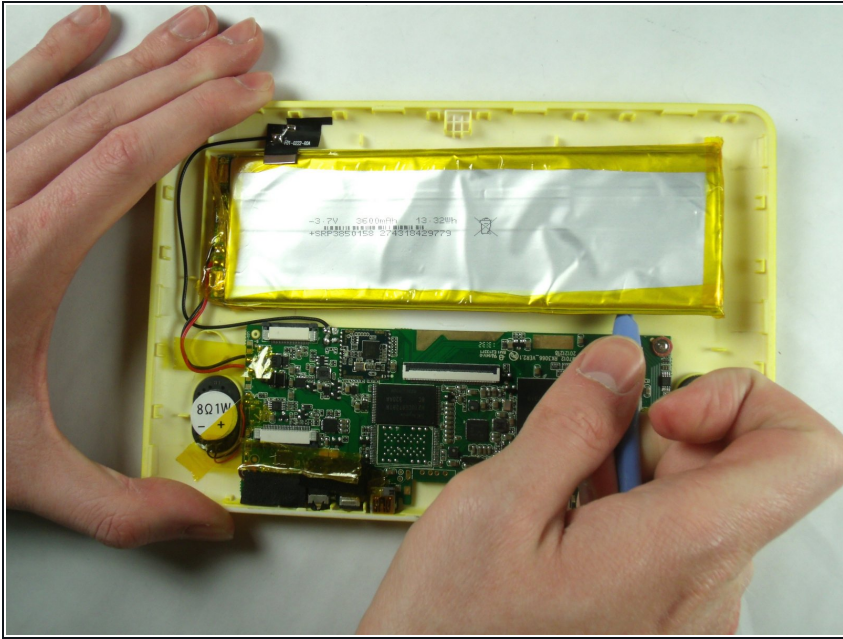

- Using the iFix it opening tool, pry battery apart from back side of tablet.



❗ The battery is connected to the back side by a strong adhesive.

❗ The battery may bend during this process.

⚠ Be careful not to allow the battery to bend any more than necessary. Battery acid leakage is possible.

⚠ Be careful not to damage the wires or the black tab attached to the battery.


## Step 3

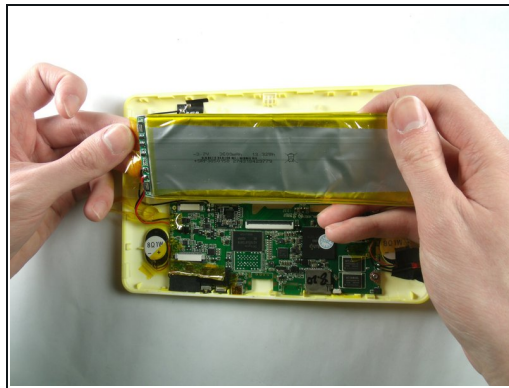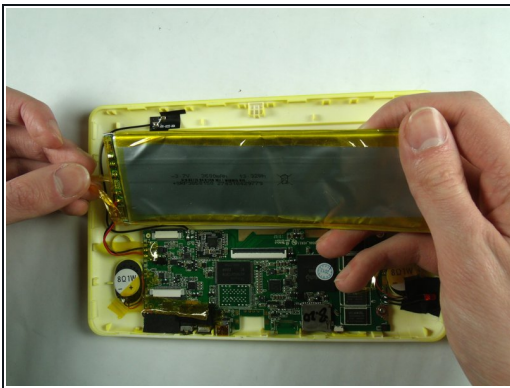


- Gently remove tape from the side of the battery connecting to wires and circuits.



## Step 4

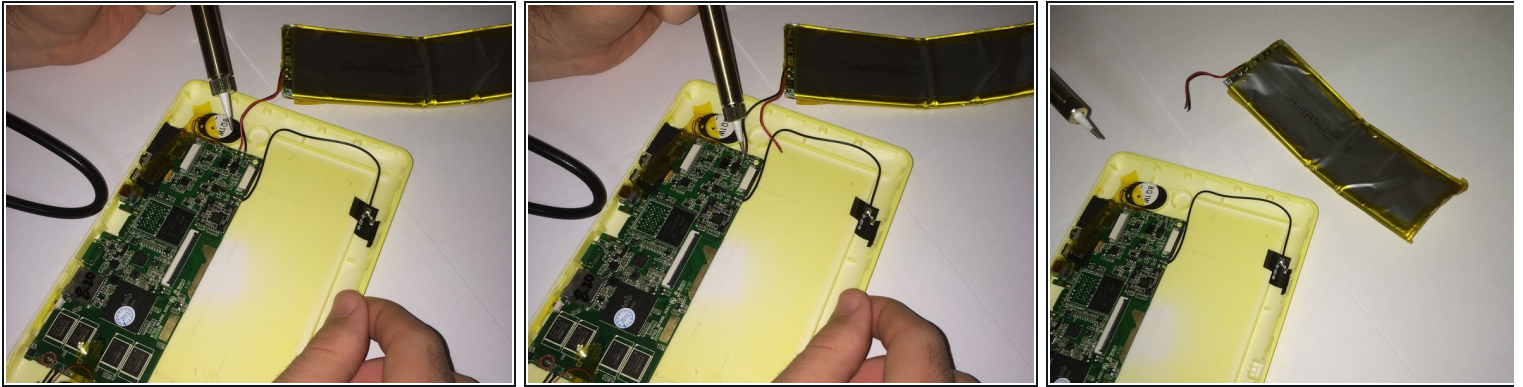

- Desolder wires connecting battery to motherboard, using contact points found on motherboard.

 Have someone who is skilled in soldering to perform this step.

 Be careful not to destroy the motherboard or other parts of device.

---

To reassemble your device, follow these instructions in reverse order.