

Trio Stealth Pro 9.7" Volume Button Replacement

A step-by-step guide on how to replace a Trio Stealth Pro 9.7" volume button.

Written By: Edward Insogna





- iFixit Opening Tools (1)
- Spudger (1)

Step 1 — Volume Button



 Remove 2 black 4 cm Phillips screws on either side of the bottom of the device.


Step 2





 Use the plastic opening tools and the spudger around the outside of silver metal back plate on the device to pry off the back plate.

Step 3

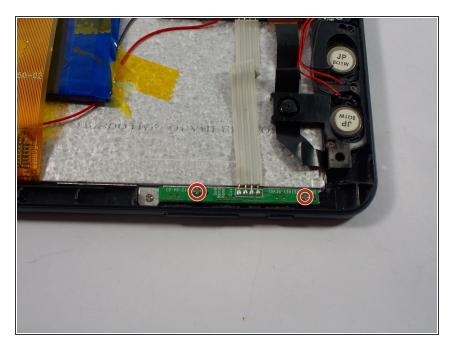

 Remove 2 silver 4 cm Phillips screws in the top right side of the device.

Step 4





- Cut 4 wire flex cable connecting the motherboard to the volume controls.
- Remove volume control buttons.

To reassemble your device, follow these instructions in reverse order.