



# Apple Watch Adhesive Replacement

If you removed your Apple Watch's screen but...

Written By: Andrew Optimus Goldheart



# INTRODUCTION

If you removed your Apple Watch's screen but don't need to replace the [Force Touch sensor](#), you can use this guide to install a strip of pre-cut adhesive and seal your watch closed.

---

## TOOLS:



[Tweezers](#) (1)  
[iFixit Opening Tool](#) (1)

## PARTS:

[Apple Watch \(38 mm\) Adhesive Strip](#)  
(1)  
[Apple Watch \(42 mm\) Adhesive Strip](#)  
(1)


---

## Step 1 — Adhesive

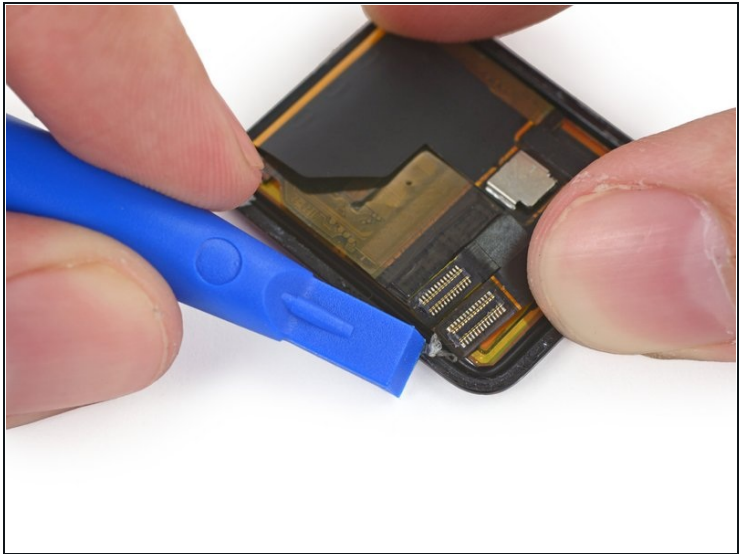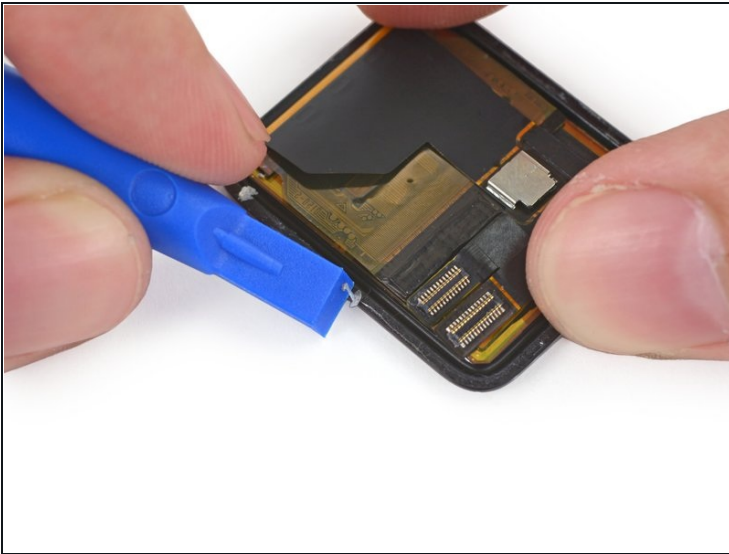

- Use a plastic opening tool to scrape adhesive off the back of the screen.

## Step 2

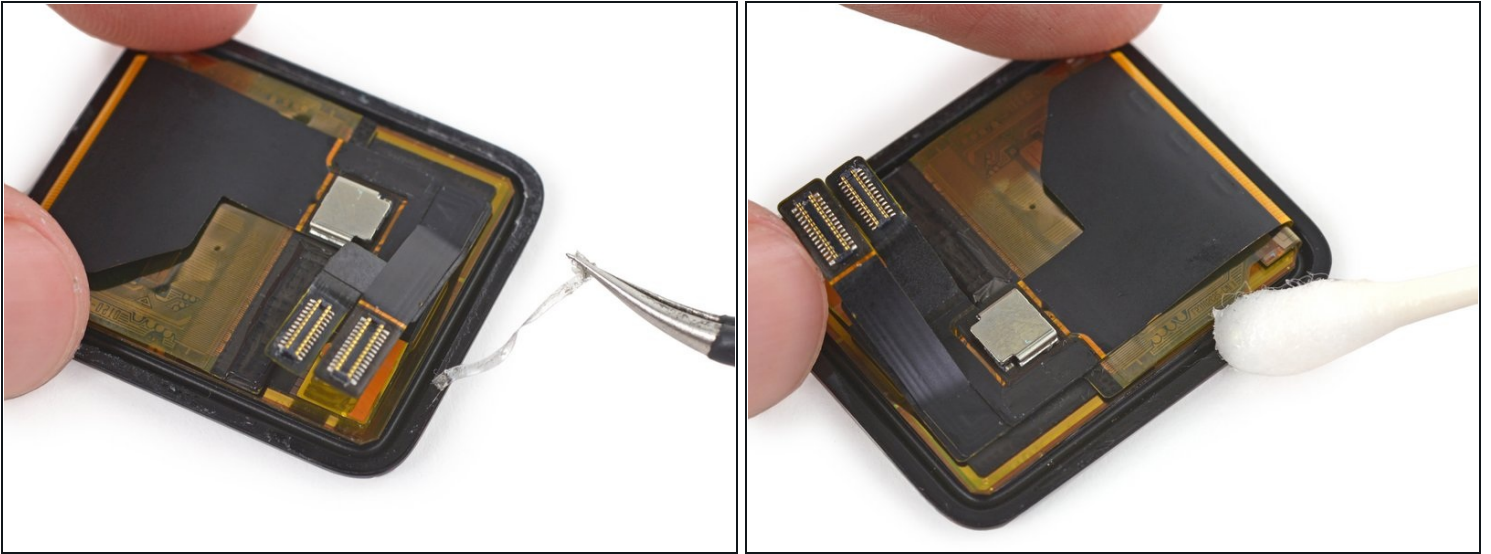

- You may be able to peel up the adhesive with [tweezers](#).
- ① Once you have all of the pieces of adhesive removed, you may want to use an alcohol soaked q-tip to clean any residue off the back of the screen.

### Step 3



- Use tweezers to peel the outer ring off of one of the adhesive strip pads.
- Be sure to get both the double-sided adhesive and the brown backing paper.
- ① If you're having trouble navigating the double-sided adhesive, check out [this video](#).
- ① Be very careful not to fold, bend, or stretch the adhesive tape, as this will make it too thick to seal the screen without a ridge between the screen and the case.



## Step 4



- Lay the backed adhesive tape down on the Force Touch sensor, around the edge of the case where the screen rests.
- Start in a corner with the tape as close to the corner wall as possible.
- Press on the brown backing paper with a plastic opening tool to secure the adhesive around the entire perimeter.

## Step 5



- Use a plastic opening tool to reconnect the display data and digitizer cable connectors.


**⚠ Be careful not to touch any of the contacts directly, as your finger oils may impede connectivity.**

## Step 6



- To reinstall the metal bracket, line up the single tab with the slot in the top of the lower half, and slide the bracket down.
- Snap the upper bracket in place.

## Step 7

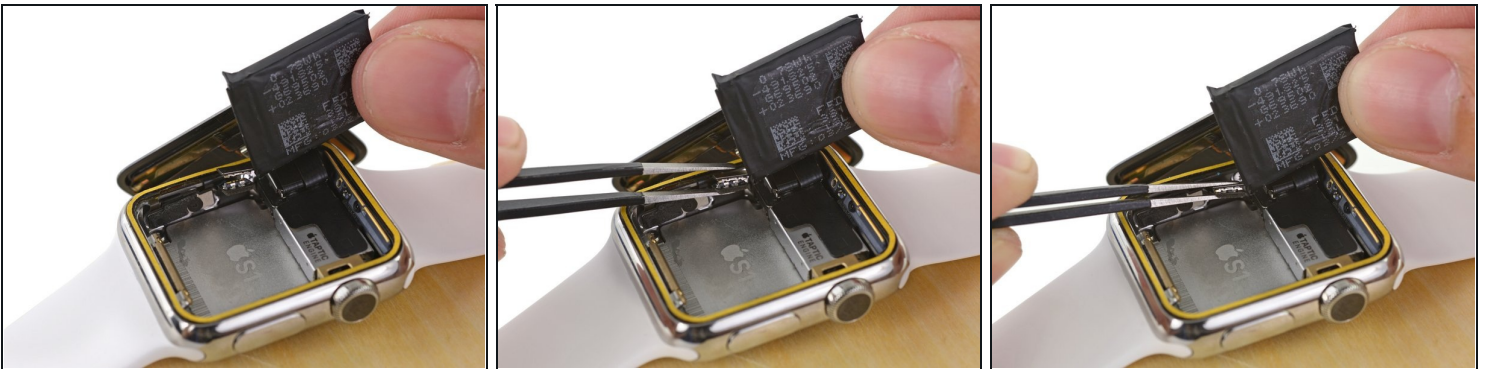

- Line the battery connector up with its mate on the cable inside the watch body.
- Use tweezers to press the two connectors together.

## Step 8



- ❶ If your replacement battery came with pre-installed adhesive, peel off the protective tab now, exposing the adhesive.
- Rotate the battery down into its slot, and press it into position.
- Press the battery down against the S1 to re-adhere it in place.
- ❷ Now is the best time to test powering on your watch—if it doesn't turn on, double check all three connectors and try again.

## Step 9



- Use tweezers to peel off the adhesive backing strip.
- Peel the backing strip up halfway, then snip it with scissors so you can peel the rest off without it snagging on the display.



## Step 10



- Move the screen back to the right, folding the display data and digitizer cables neatly.
  - Center the screen over the case and press it down firmly onto the adhesive.
    - ① Alternatively, you can use [screen vice clamps](#) around the perimeter of your device to set the new adhesive.
-