

BRCK v1 Top Cover Replacement

This is a prerequisite, showing you how to open up the BRCK v1. This will allow you to access other components of the device.

Written By: Cory Ihnotic





• 2 mm Hex Screwdriver (1)

Step 1 — Top Cover




 Place the face of the device showing BRCK face up.

Step 2



 Remove the four screws(4mm hex head) on the corners of the device with a Hex 2.0 Screwdriver.

Step 3

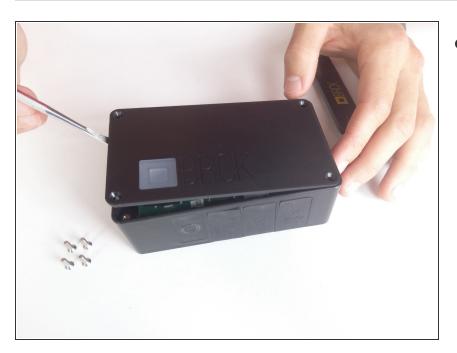

Remove the top cover.

To reassemble your device, follow these instructions in reverse order.