




# Disassembling HP Envy 17-3070NR

## Motherboard Assembly

Prerequisite Only guide for accessing motherboard.

Written By: Jasper Lewin

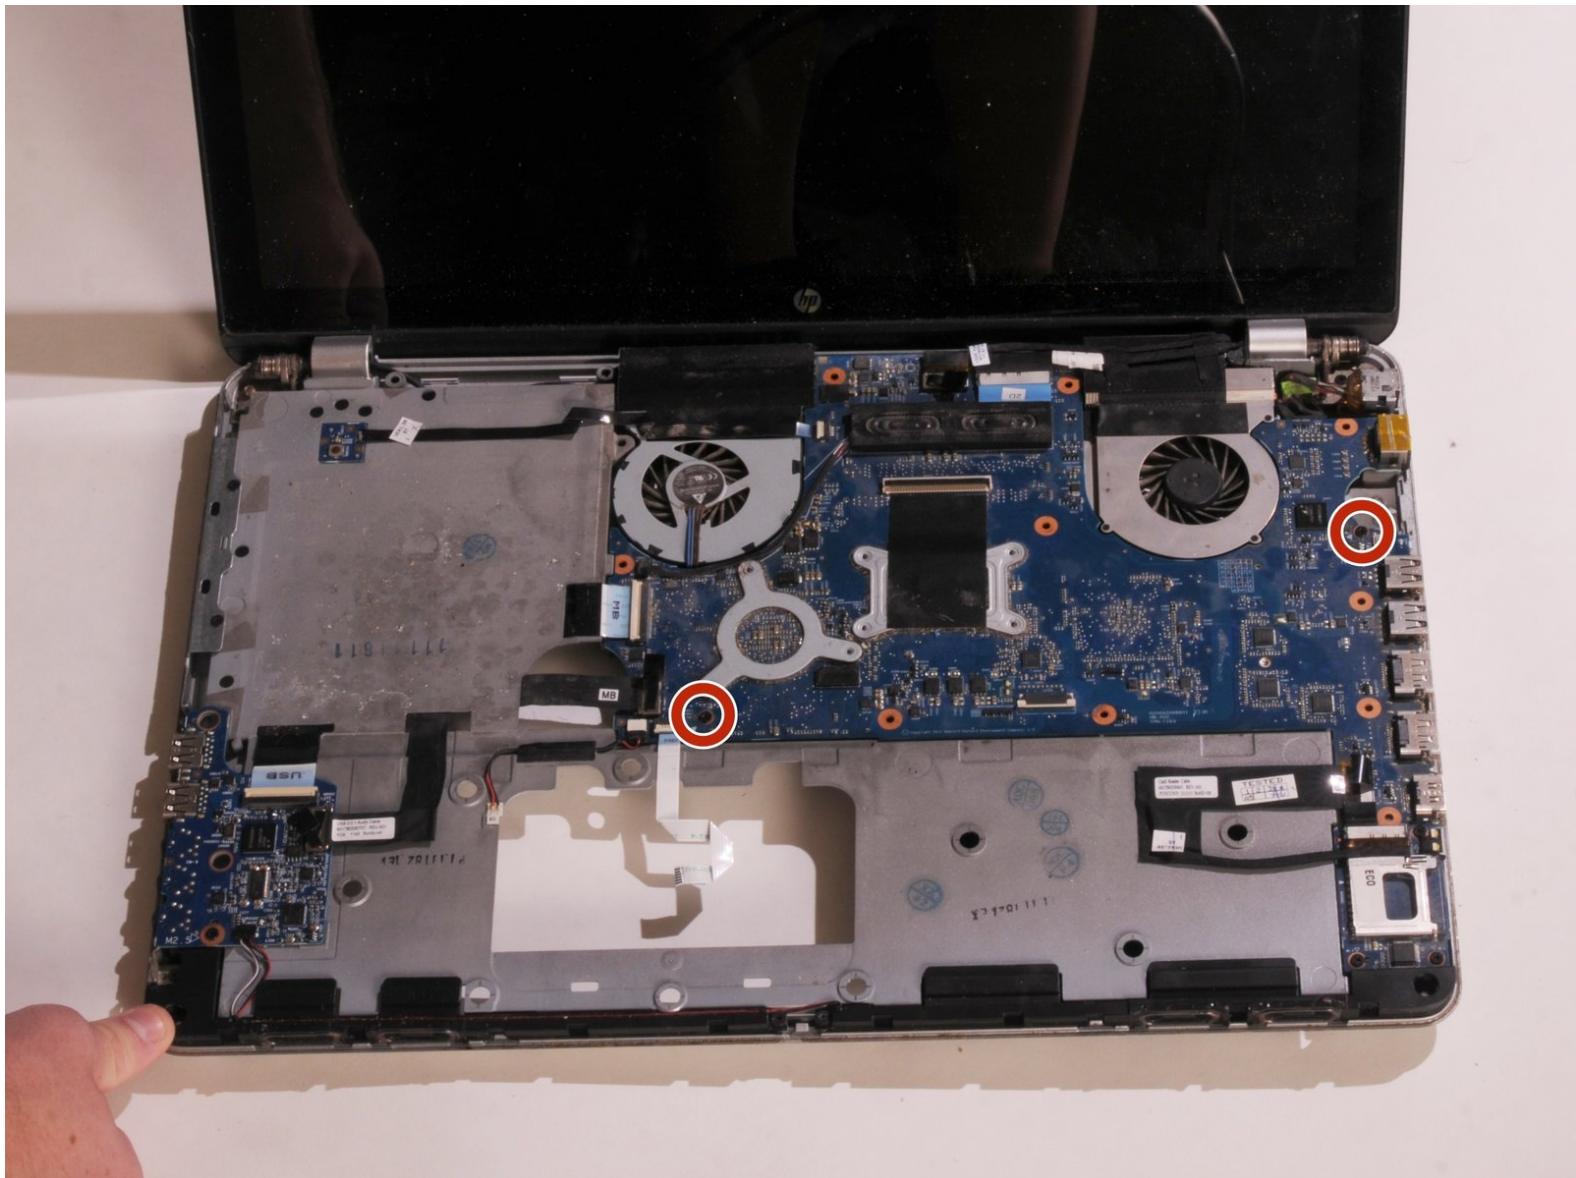




## TOOLS:




- [Phillips #2 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Disassembling HP Envy 17-3070NR Motherboard Assembly

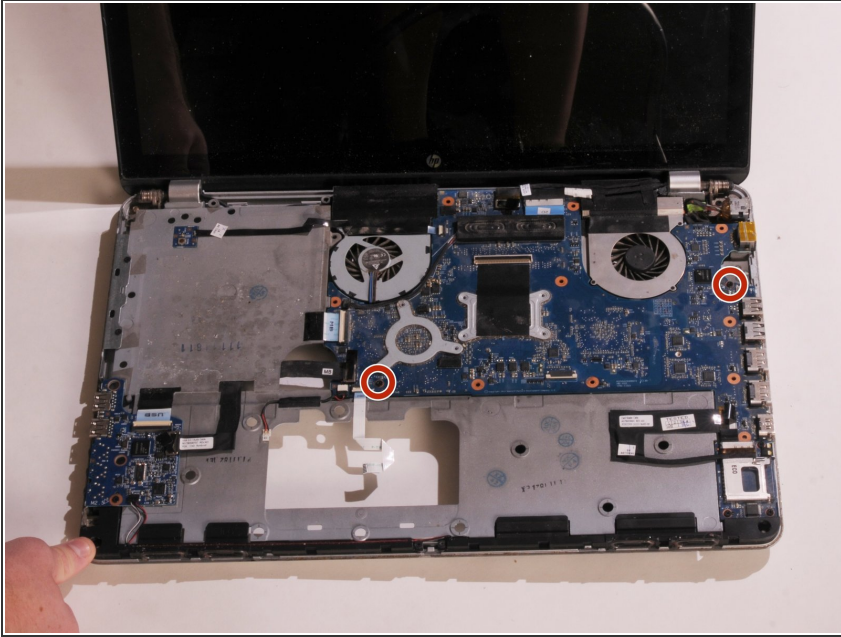

- Remove the two 4.5mm Phillips screws from the system board




## Step 2

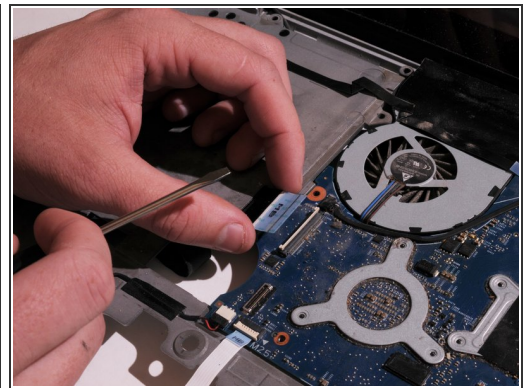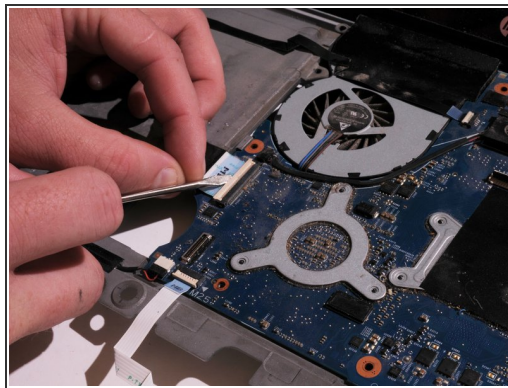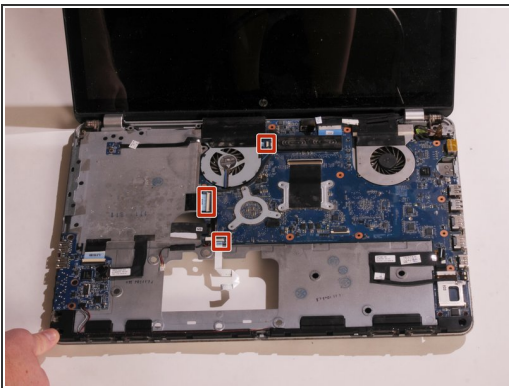

- Disconnect three cables by lifting a white clamp with a Flathead screwdriver and pulling on the blue tab.






### Step 3

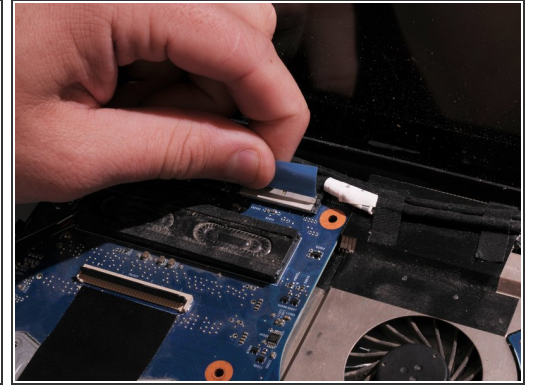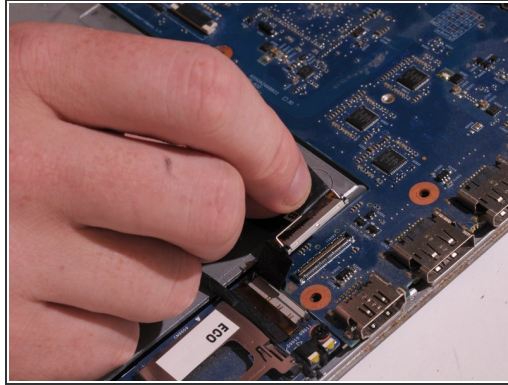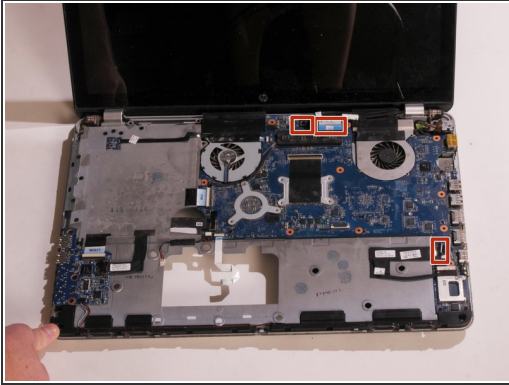



- Disconnect three cables by pulling upward on black or blue tabs connected to them.

### Step 4

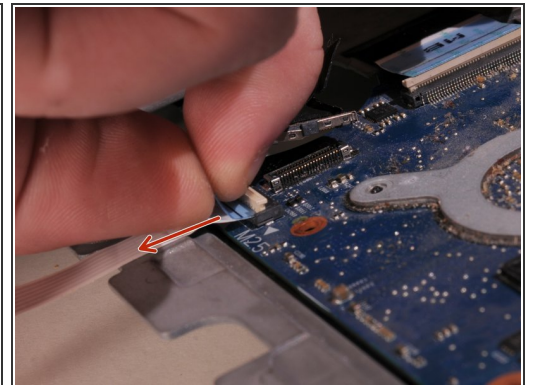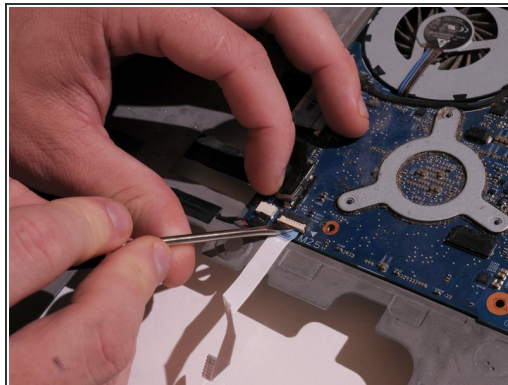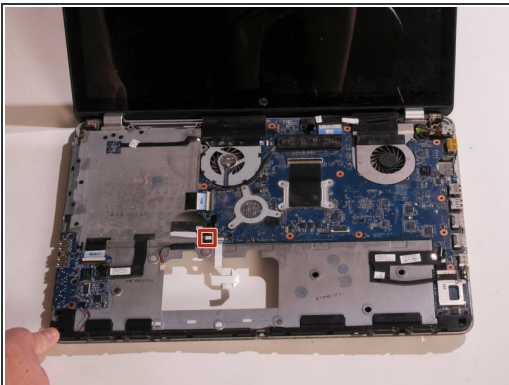




- Disconnect cable by using a Flathead screwdriver to gently pry it off the black connector towards you.

## Step 5

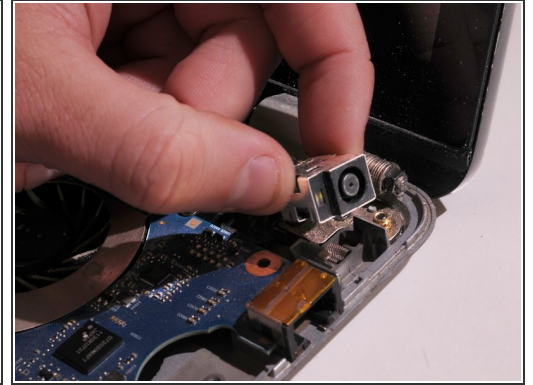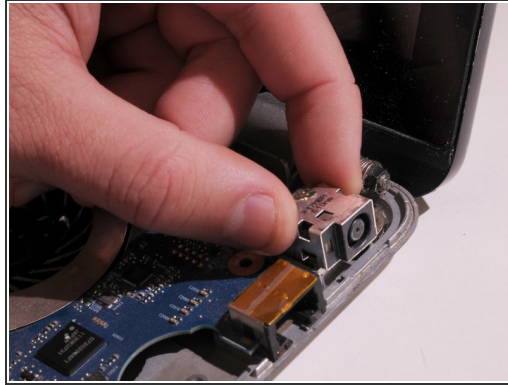

- Lift up the power connector from the clip.

## Step 6

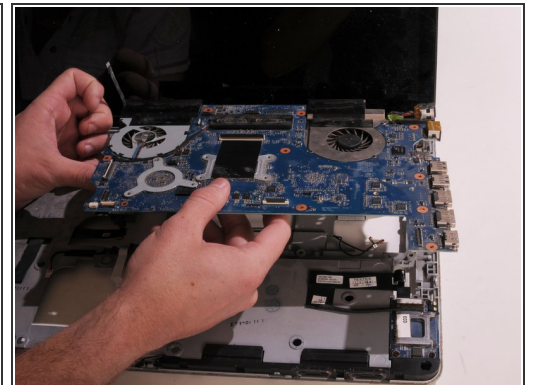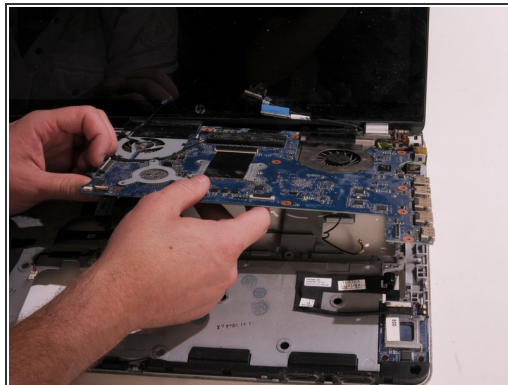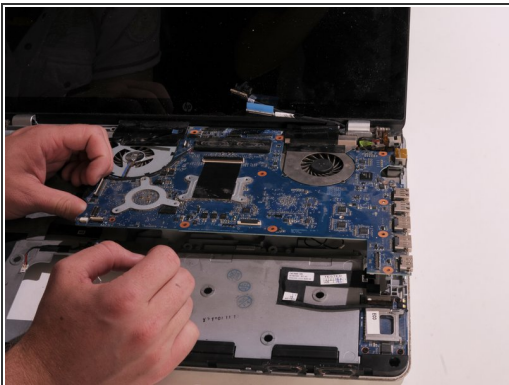

- Carefully lift up motherboard from the main assembly.

To reassemble your device, follow these instructions in reverse order.