


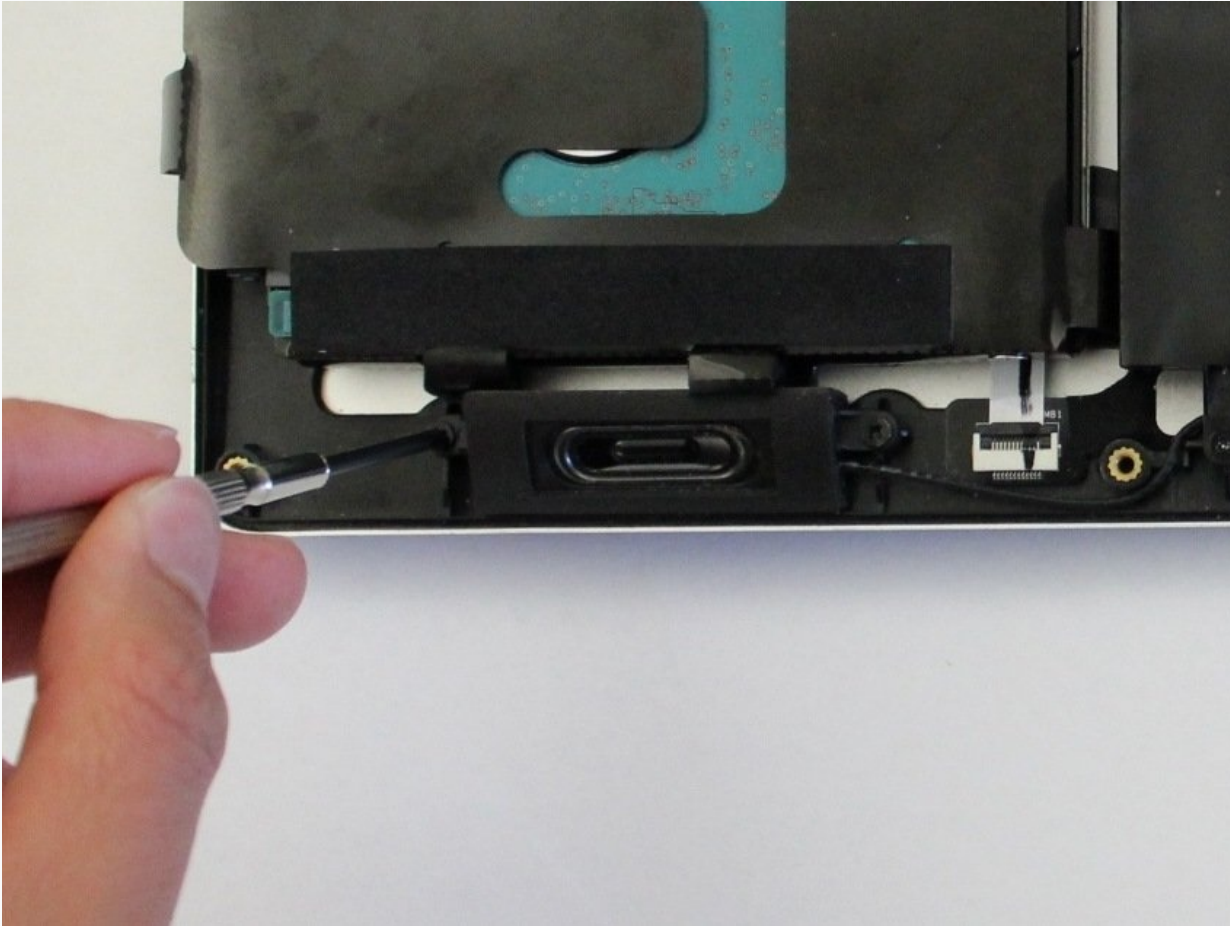

Gigabyte P34G Speakers Replacement

Sounds from the laptop will be coming from the...

Written By: yeunghayden



INTRODUCTION

Sounds from the laptop will be coming from the speakers. If no sounds are coming out of the laptop, then the speakers may need to be replaced.

Make sure you are grounded before starting. To ground yourself, simply touch a metal object that is in contact with the floor for a few seconds.


TOOLS:

Phillips #0 Screwdriver (1)


PARTS:

Compatible 1.5 Watt Speakers (1)

Step 1 — Speakers

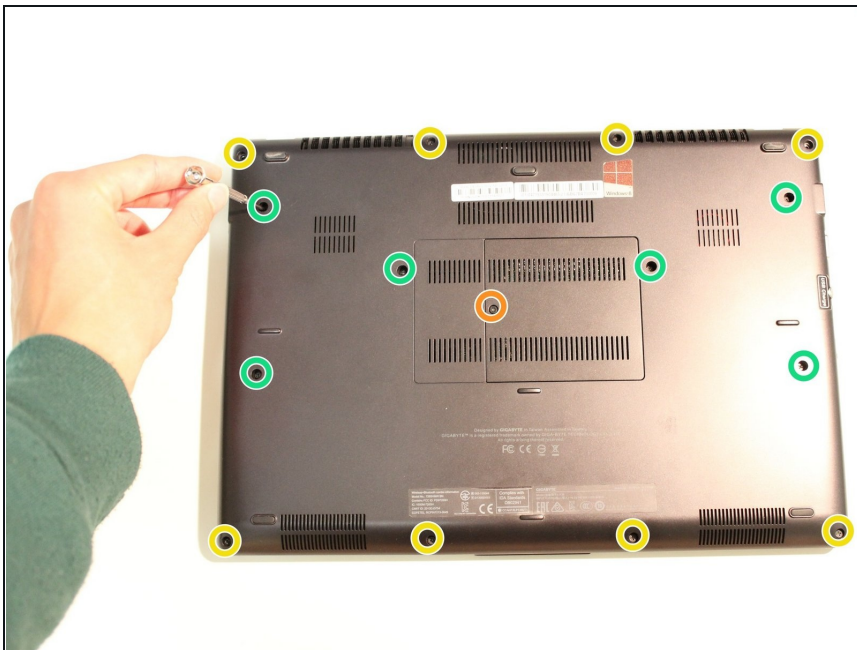


- Remove all 15 marked screws on the underside of the laptop using a Phillips #0 screwdriver.

 There are three different sized screws.


- x1 9.8mm Screw

- x8 5.6mm Screws

- x6 5.0mm Screws

 Divide the screws by size and save them in a safe space for reassembly later.

Step 2

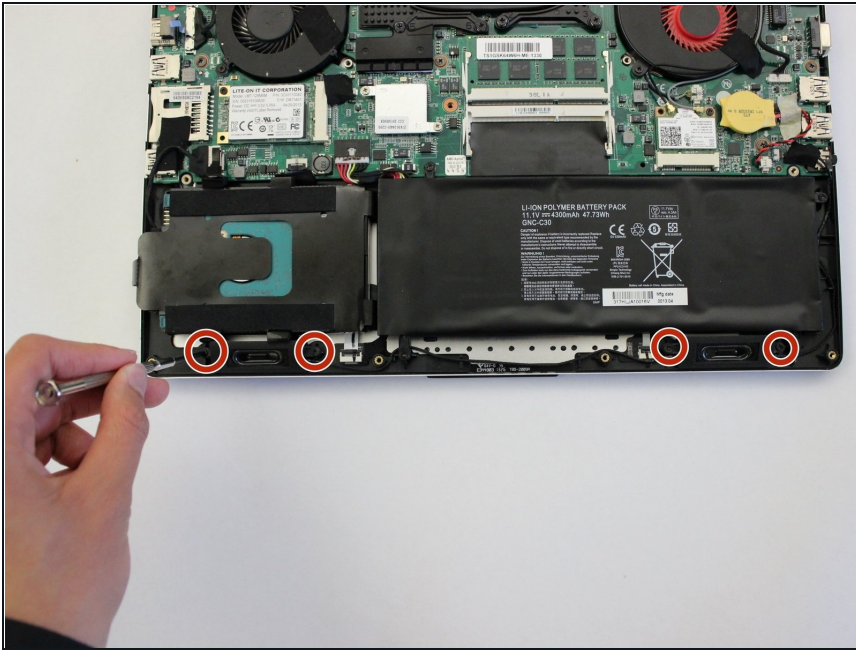


- Unscrew the 4 marked 4.5mm screws using a Phillips #0 screwdriver.
- ☑ Save the screws in a safe place for reassembly later.

Step 3



- Unplug the connector by pulling on the wires.

Step 4

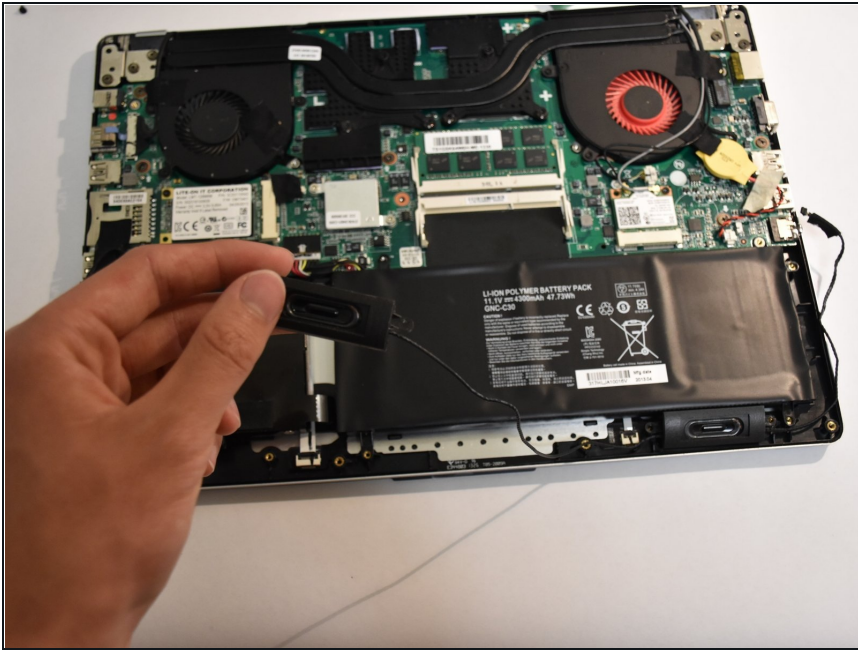

- Grab the speakers and pull for removal.

To reassemble your device, follow these instructions in reverse order.