




Minolta Maxxum STsi Tripod Socket Replacement

Replace the tripod socket for your Minolta Maxxum STsi.

Written By: Jacobe Labog

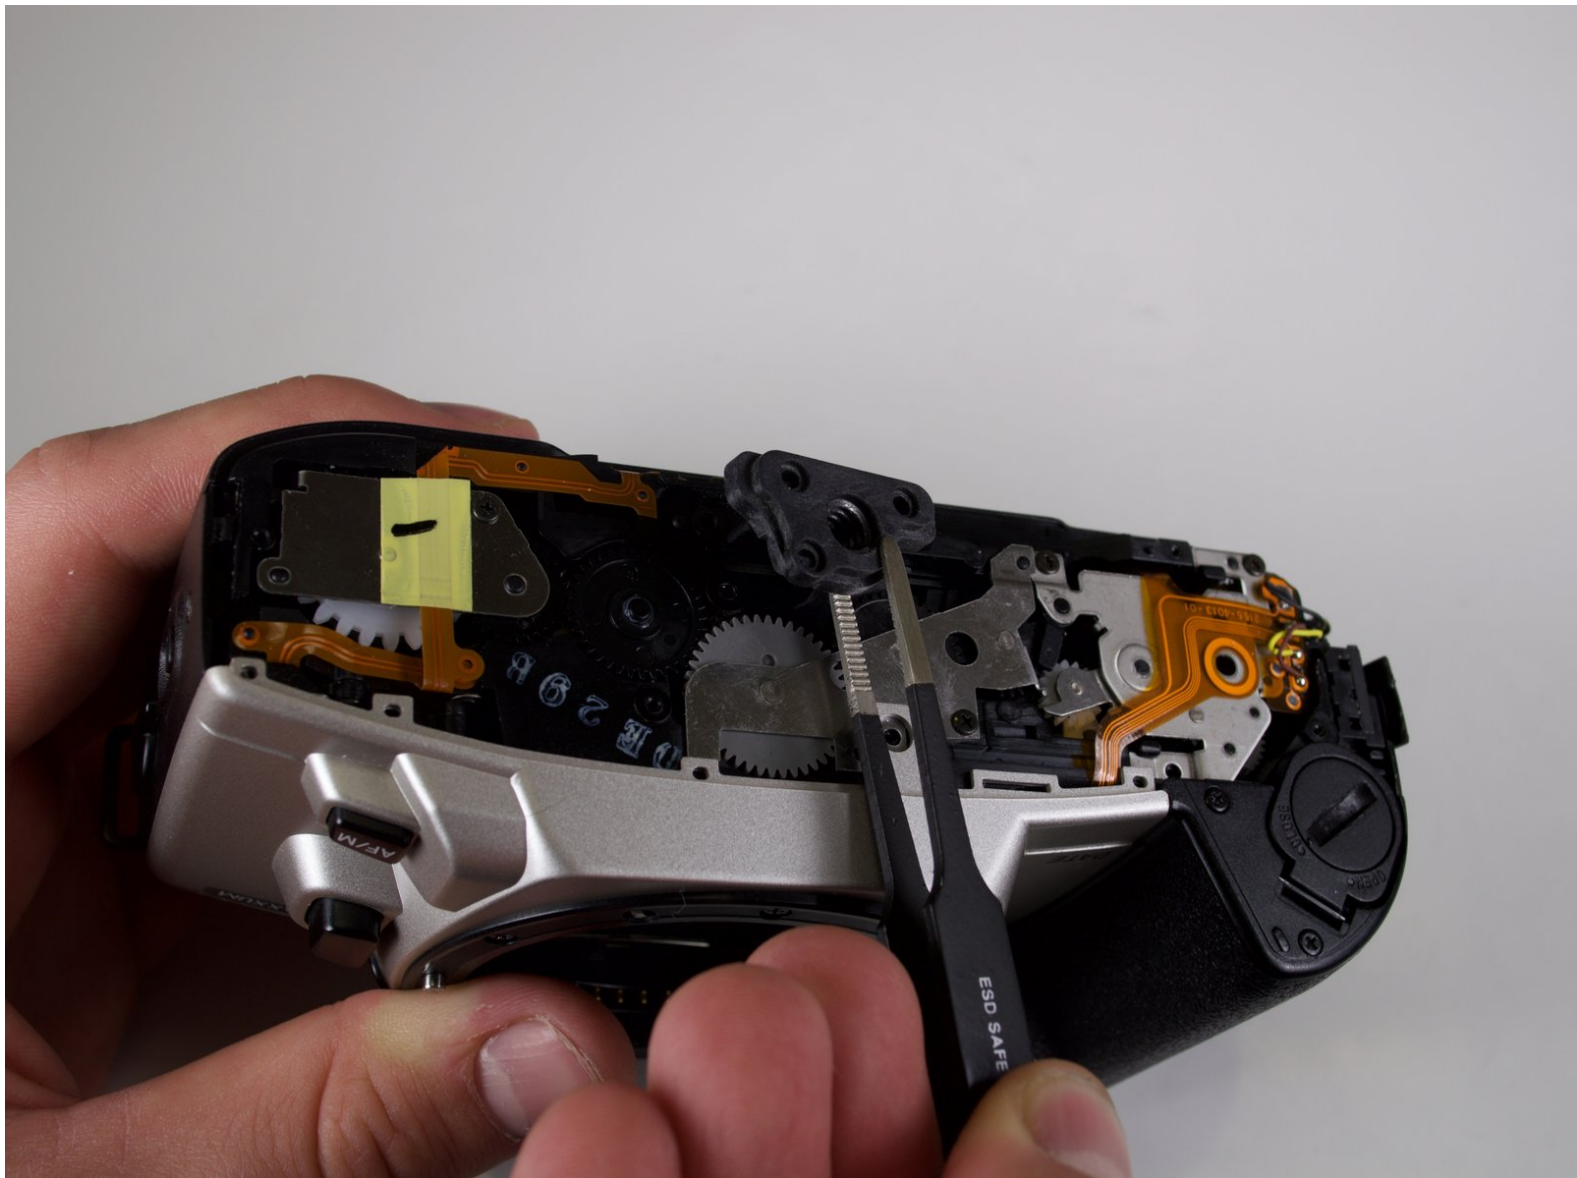

INTRODUCTION

If the tripod socket is broken, the camera will be unable to connect to its tripod. This guide will show you how to replace the tripod socket for your Minolta Maxxum Stsi.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)



PARTS:


- [Replacement tripod mount](#) (1)

Step 1 — Bottom Panel



- Remove the seven black Phillips #00 5.0 mm screws.

Step 2

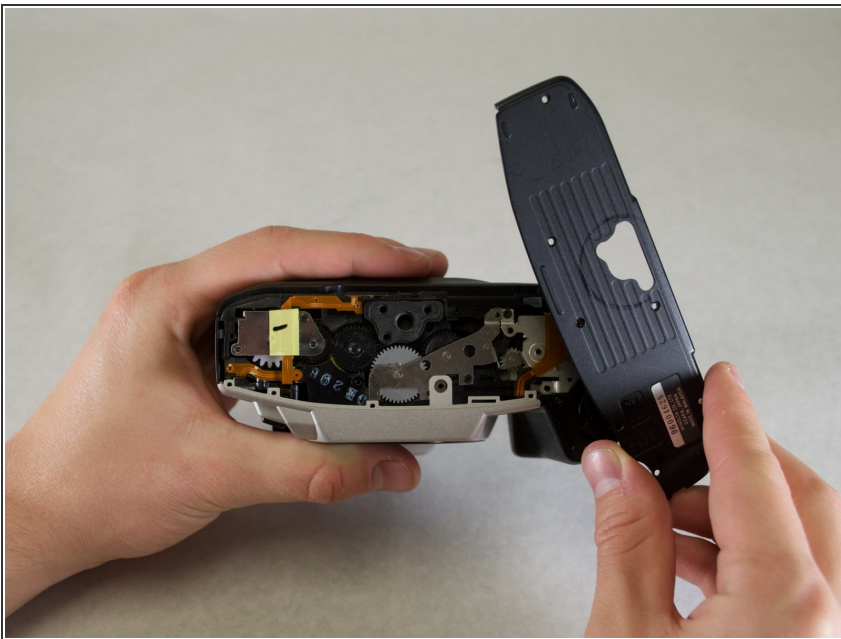


- Gently remove the bottom panel using your fingers.

Step 3 — Tripod Socket



- Remove the three black Phillips #00 6.25 mm screws from the tripod socket to remove the tripod socket.

Step 4

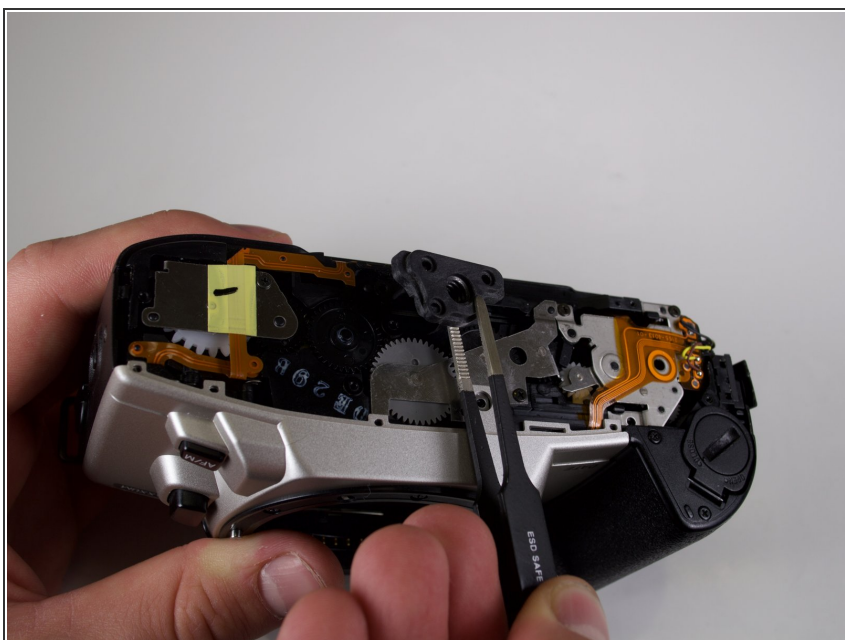

- Use tweezers to gently remove the tripod socket.

To reassemble your device, follow these instructions in reverse order.