



# Minolta Maxxum STsi Back Clock Button Replacement

This guide consists of removing the back clock button.

Written By: Jacobe Labog



---

## INTRODUCTION

This guide will show you how to replace the back clock button for your Minolta Maxxum STsi.

---



### TOOLS:




- [Phillips #00 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Back Clock Button





- Open the back panel by firmly pressing up on the back-cover release on the lower right side of the camera.

## Step 2

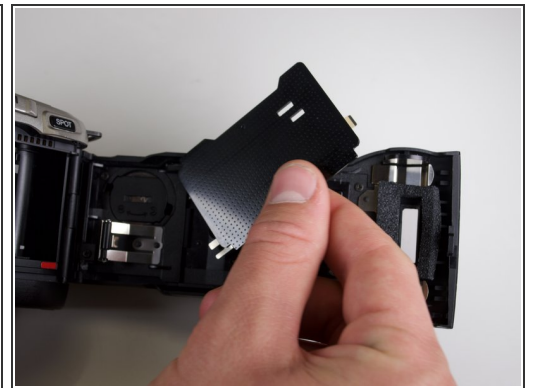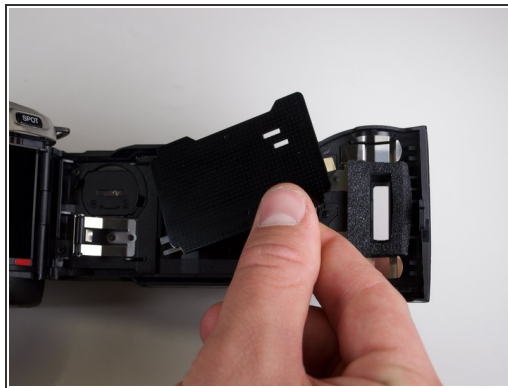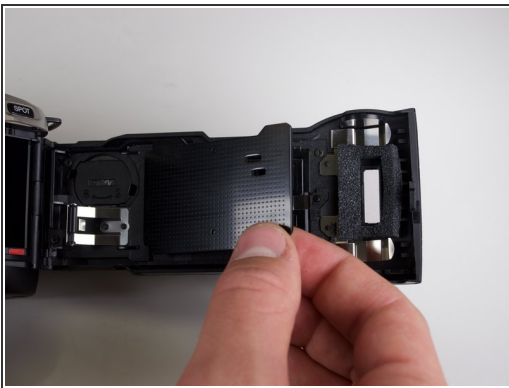

- Remove the black case by gently lifting it with your fingers and rotating counterclockwise.

### Step 3

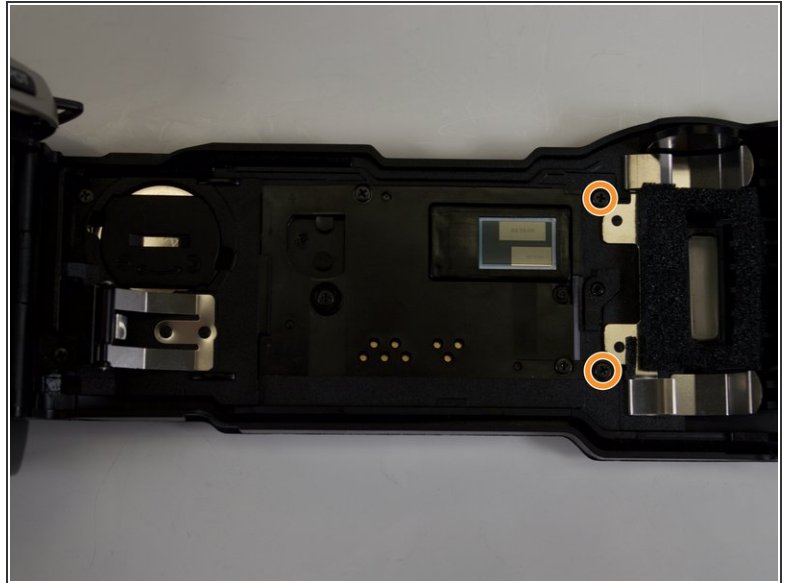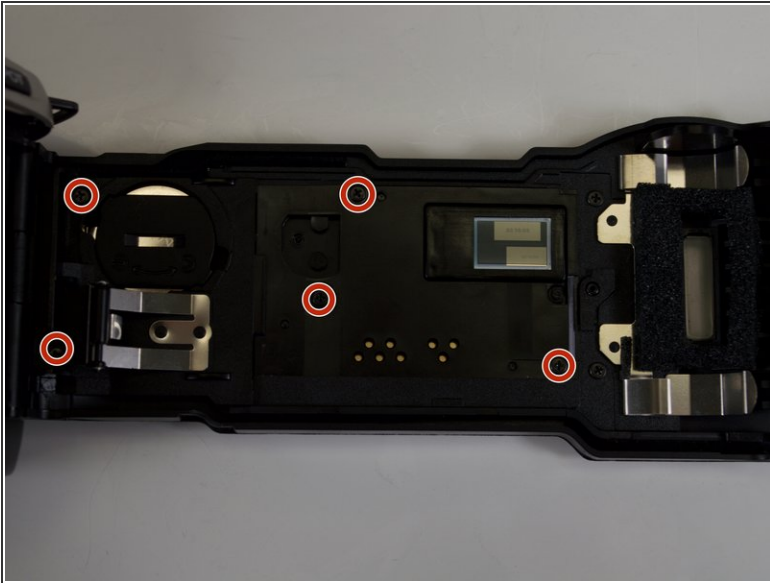

- Remove the five black Phillips #00 2.5 mm screws from the back panel.
- Also remove the two black Phillips #00 5.0 mm screws from the back panel.

### Step 4



- Use the tweezers to carefully peel back the adhesive foam connecting the back panel to the case and remove the panel.

## Step 5



- Use the tweezers to carefully peel off the rubber clock button.

To reassemble your device, follow these instructions in reverse order.