



Saeco Incanto SBS Piston Head Seals / O-rings Replacement

Piston O-rings for older Saeco Brewgroup. This is the version with the Glasball.

Written By: Schwarzstein



INTRODUCTION

Piston O-rings for older Saeco Brewgroup.

This is the version with the Glasball.

TOOLS:


- [Posidriv #1 Screwdriver](#) (1)
-

Step 1 — Piston Head Seals / O-rings



- I show you the O-rings in the top piston of the brewgroup. I don't write much, because my english is bad, but the photos speak for themselves. Good luck
- Two screws, PZ 1
- Careful, there is a spring.

Step 2

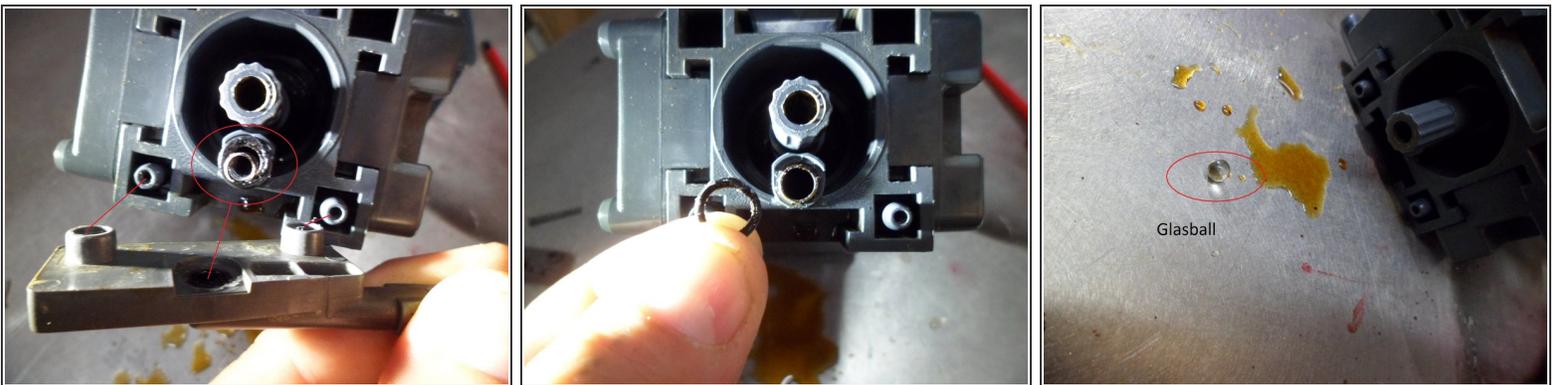


- Spring, O-ring and a GLASBALL.

Step 3



- Ja

Step 4

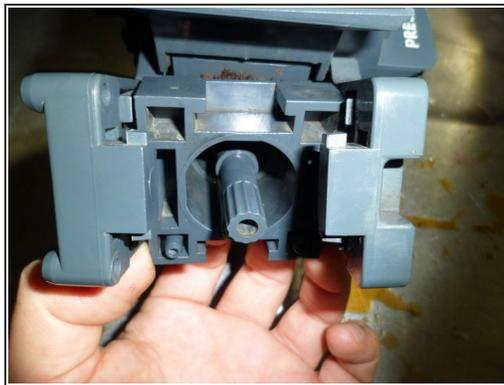


- Remove the piston. More information in my guide " Disassembling & Cleaning the Brewgroup" here.

Step 5




- Screw PZ 1
- Counterrotate turning the screw.
- Then pull that thing and you find another seal

Step 6

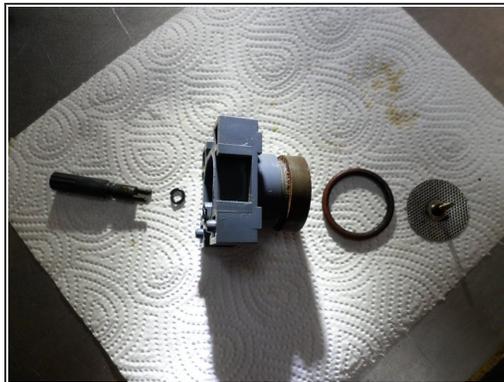



- Details

Step 7

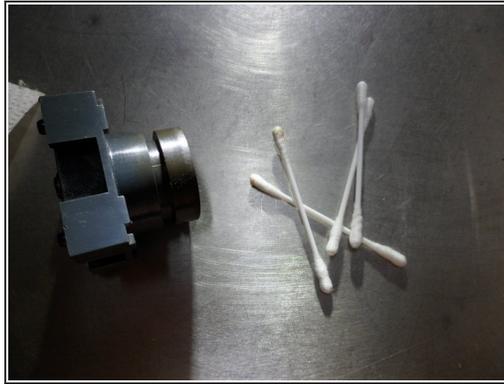


- Tools for cleaning, ja toothbrush

Step 8

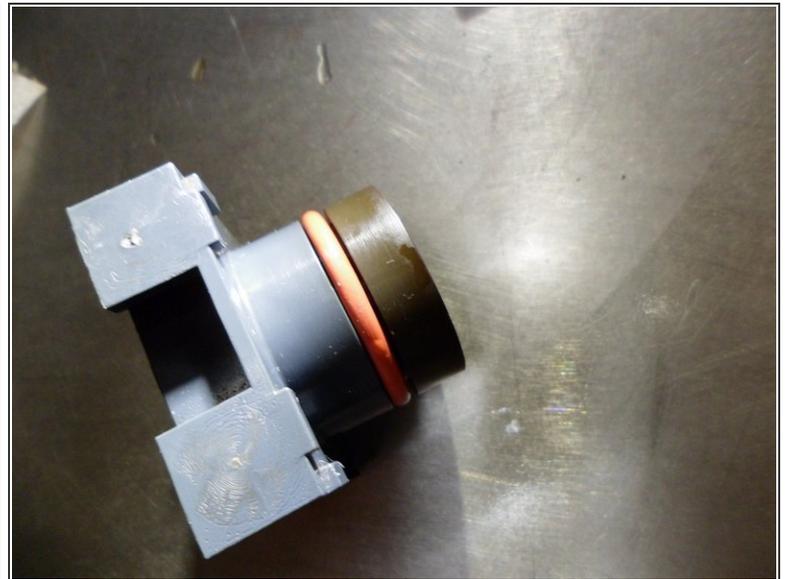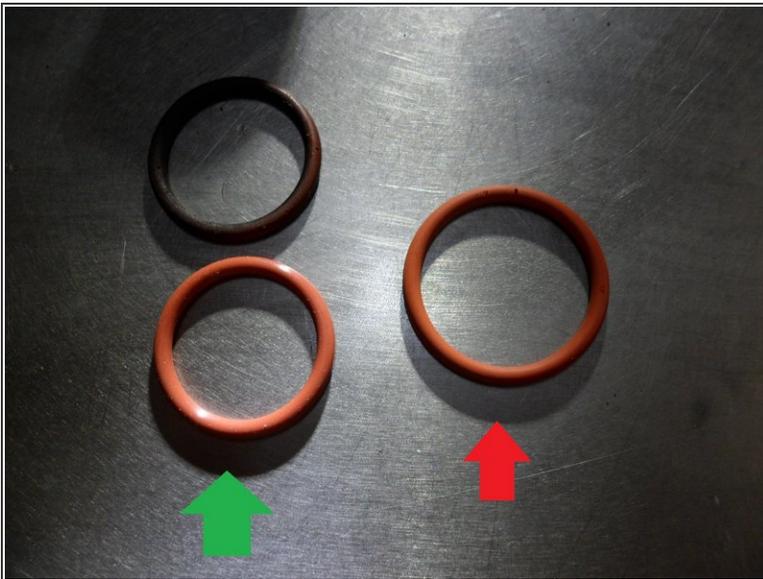

- There are two types of O-rings. For this type of piston you need the smaller.

Step 9

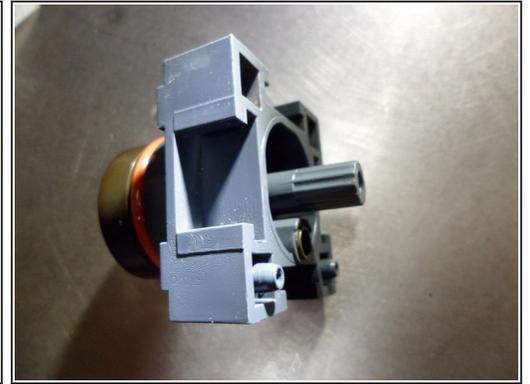

- Grease it a little.
- Just put it back, no problem.

Step 10



- ...and then I found a crack in my piston. That can not be repaired. So I had to buy a new piston.

To reassemble your device, follow these instructions in reverse order.