



Nintendo 64 Rumble Pak Battery Replacement

This guide will show you how to replace the batteries and check for corrosion in your N64 Rumble Pak.

Written By: Carly Bowen



INTRODUCTION

Does your Rumble Pak no longer vibrate? Learn how to check for corrosion and replace the batteries in your Rumble Pak to continue enjoying the ultimate gaming experience.

TOOLS:

- [Q-Tips](#) (1)
- [Flathead Screwdriver](#) (1)

PARTS:

- [AAA Battery](#) (2)

Step 1 — Rumble Pak Battery



- Remove the Rumble Pak from the controller by pressing the release button and pulling the Rumble Pak out.

Step 2




- Remove the battery cover from the Rumble Pak by pressing the tab and pulling the cover up.

Step 3



- Press each battery toward the spring, then pull toward you to remove the batteries from the Rumble Pak.
- ☑ When inserting the new batteries, make sure the positive (+) end of the battery touches the flat piece, and the negative (-) end touches the spring.

Step 4

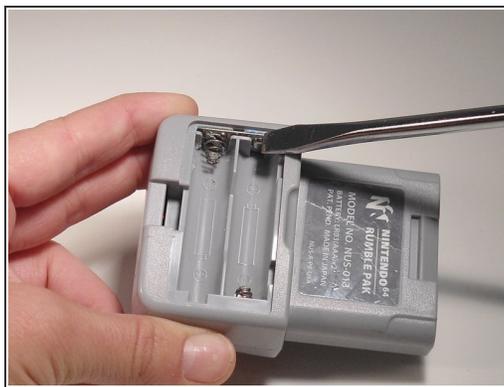

- Check for corrosion around the springs and the flat plate where the batteries touch.
- ⚠ Do not touch the corrosion. It may be battery acid.
- Use a flat head screwdriver to chisel away the corrosion, and use a Q-tip to wipe it clean.
- ⚠ Do not use water to wet the Q-tip, as water can damage the Rumble Pak.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-24 07:07:15 AM (MST).

