



Toshiba Tecra 530CDT CD-ROM Drive Replacement

So, your Optical Drive broke! Here's how to replace it!

Written By: MillenniumEdition56



INTRODUCTION

So, your Optical Drive broke! Here's how to replace it!



TOOLS:

- [Flathead Screwdriver](#) (1)



PARTS:


- [CD-ROM Drive](#) (1)

Step 1 — Flip it Over



- Flip The Computer over.

Step 2 — Pull the Latch Up

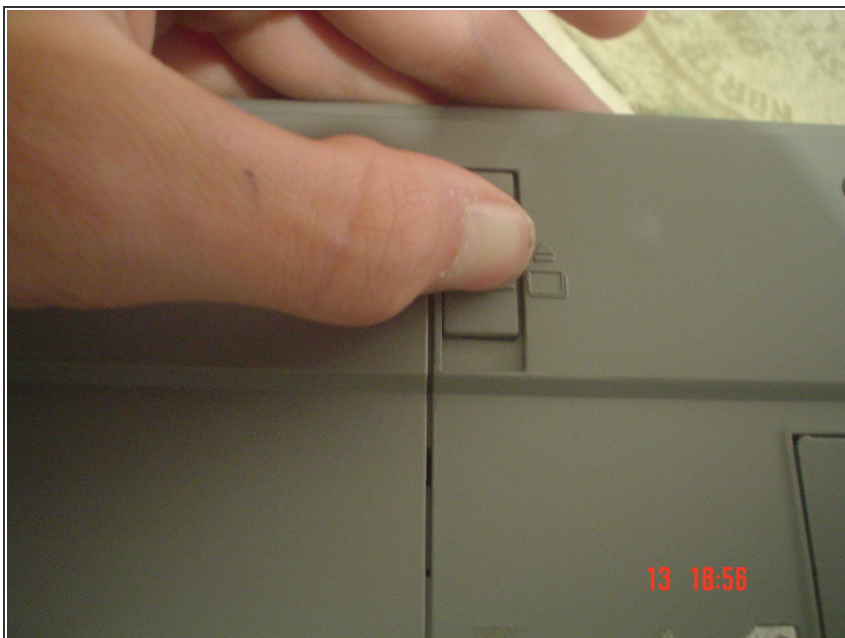

- Notice the latch. Pull it up.

Step 3



- Use the Screwdriver to pry the two ends. This takes a considerable amount of force.

To reassemble your device, follow these instructions in reverse order.