




Sony Ericsson W200i Back Case Replacement

Replacing the case of the Sony Ericsson W200i.

Written By: Emily Prescott

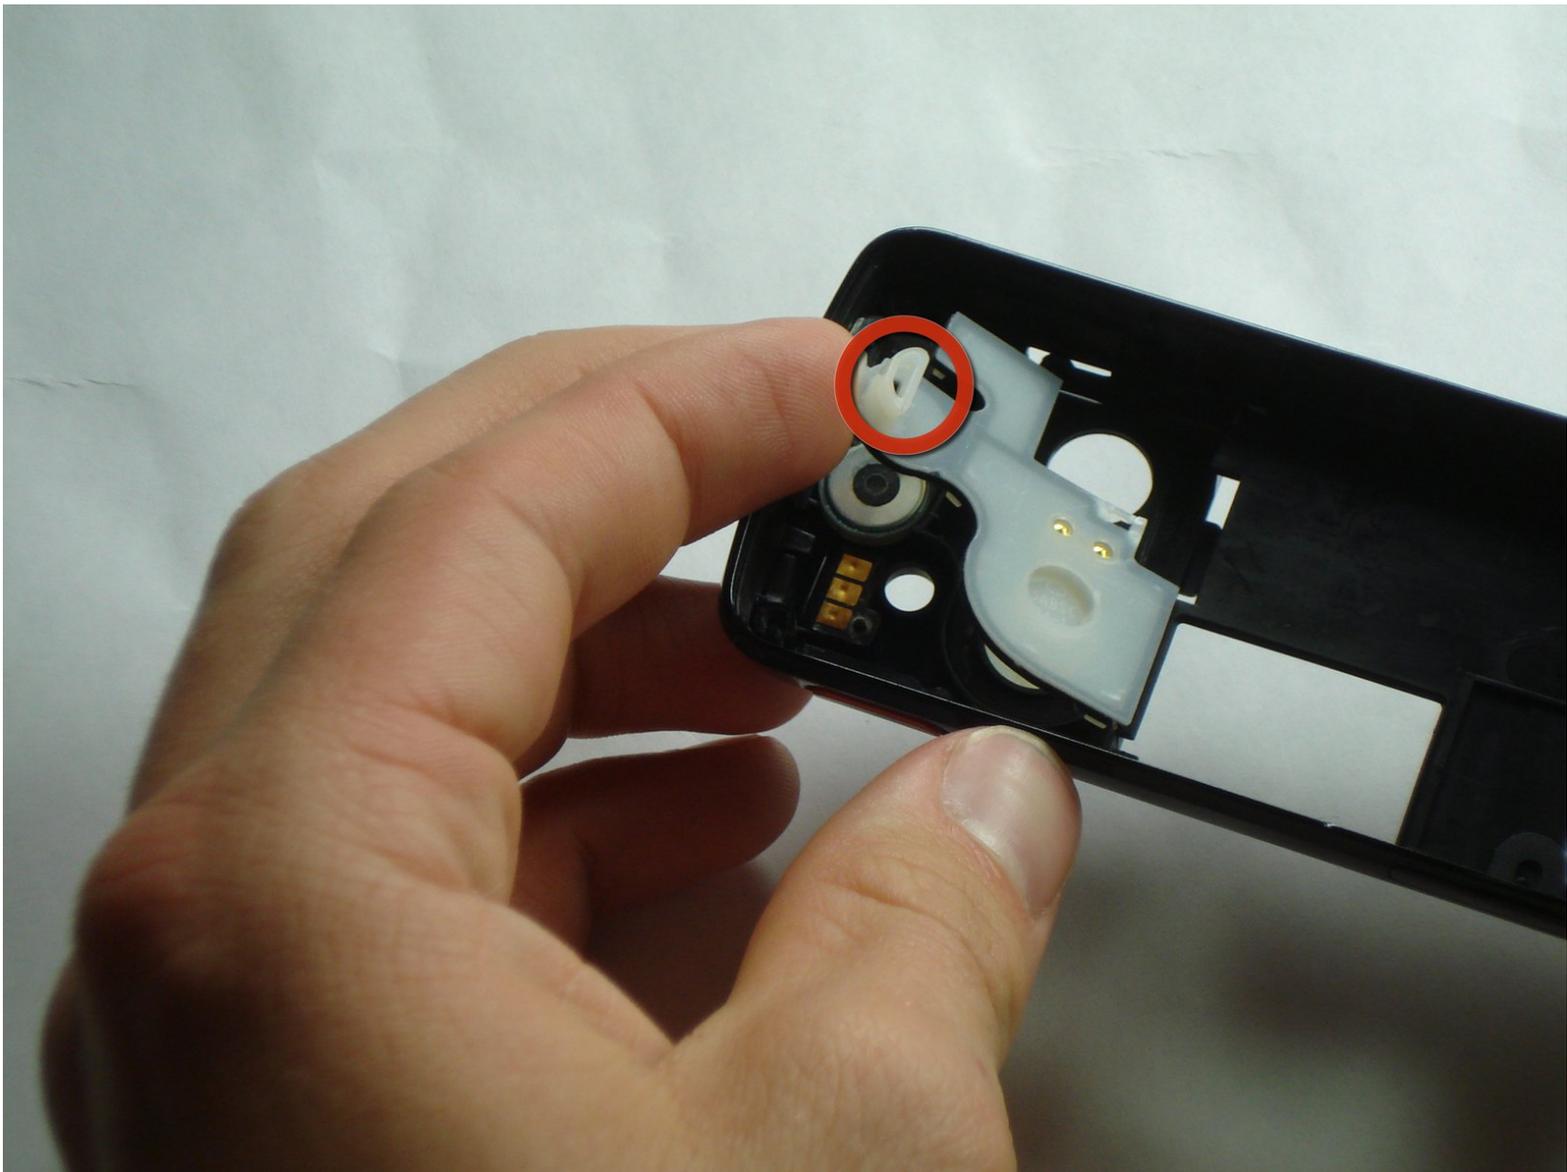

INTRODUCTION

Replacing the case is fairly easy, there will be small parts you will be removing so make sure you have a place to put them for safe-keeping.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [T6 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)

PARTS:

- [Sony Ericsson W200i Case](#) (1)

Step 1 — Disassembling Sony Ericsson W200i Battery



- Slide the battery cover up and off the phone.

Step 2




- Pop the battery out of its slot by lifting it up.

Step 3 — Front Case



- Insert the plastic opening tool in between the front case and the back case.
 - Apply downward pressure to make the case lift upwards, thus popping the front case off.
- ⚠ Use caution when removing the front case. It may seem stuck but just ease it out.

Step 4 — Core

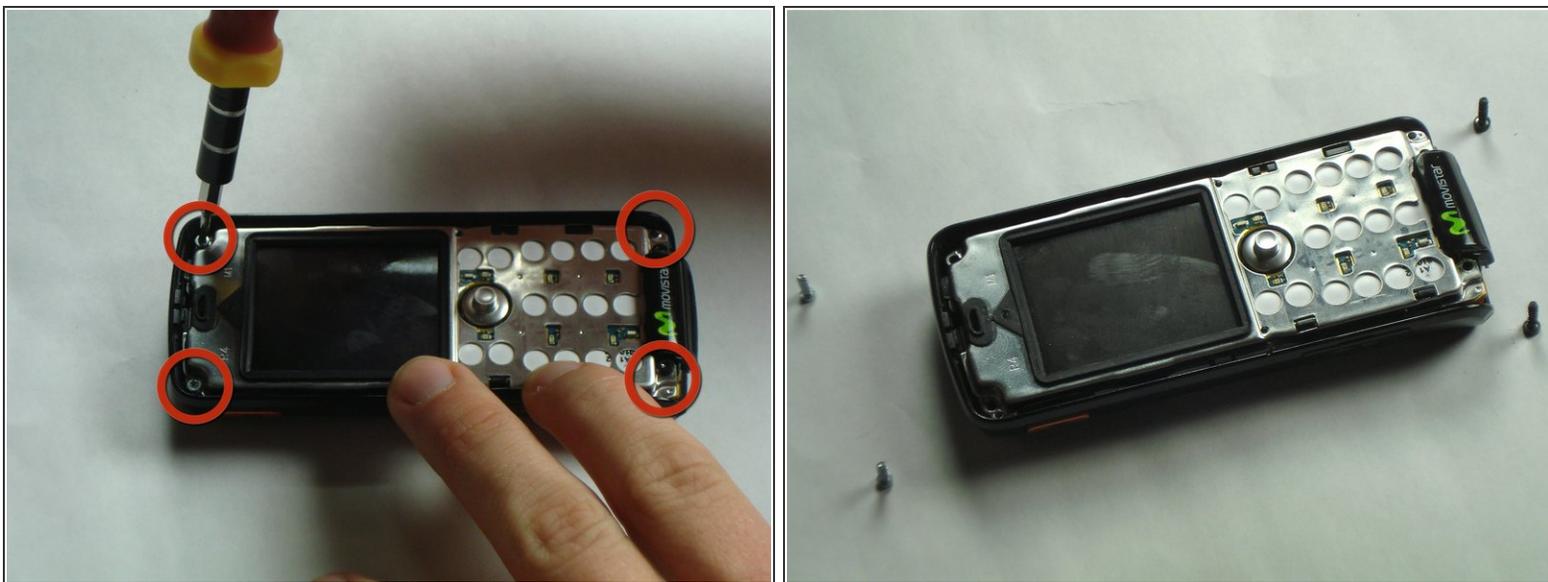


- Remove the 4 screws in the corners of the front of the phone using a T6 screwdriver.
- ⓘ Note that the top 2 screws are silver and the bottom 2 screws are black.

Step 5



- There is a black tab in the top left corner holding the core in place.
- Remove the core by pulling straight up to prevent breaking the tab.

Step 6 — Back Case

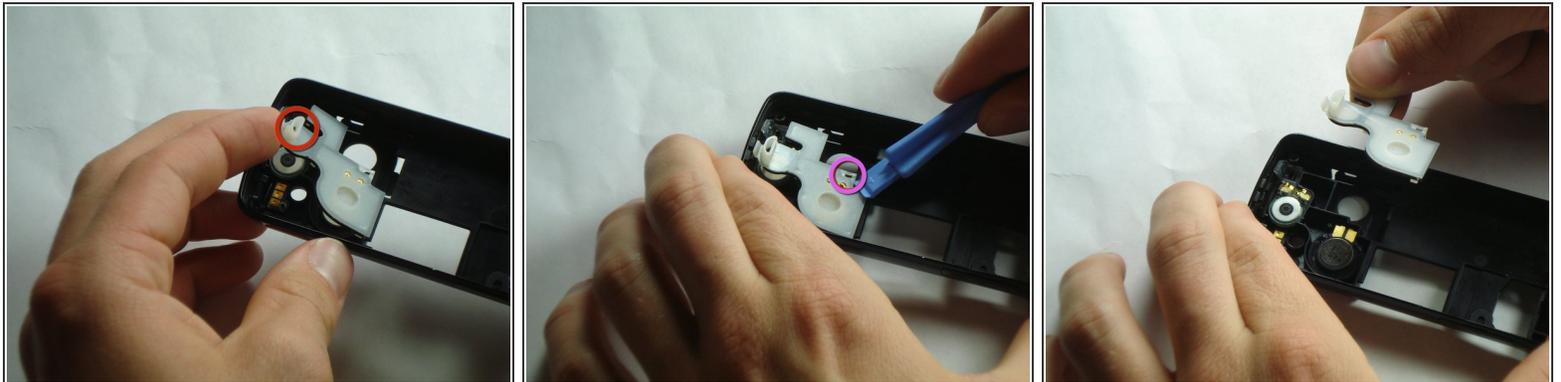

- Pull back on the indicated tab of the white plastic cover to unhook it from the top of the phone.
- Using the plastic opening tool, undo the indicated clip on the bottom of the white plastic cover.
- Remove the white plastic cover.

To reassemble your device, put removed pieces into the new back casing, then follow the steps in reverse order.