




# Casio Exilim EX-Z850 Outer Case Replacement

This guide shows you how to open the Casio...

Written By: Logan

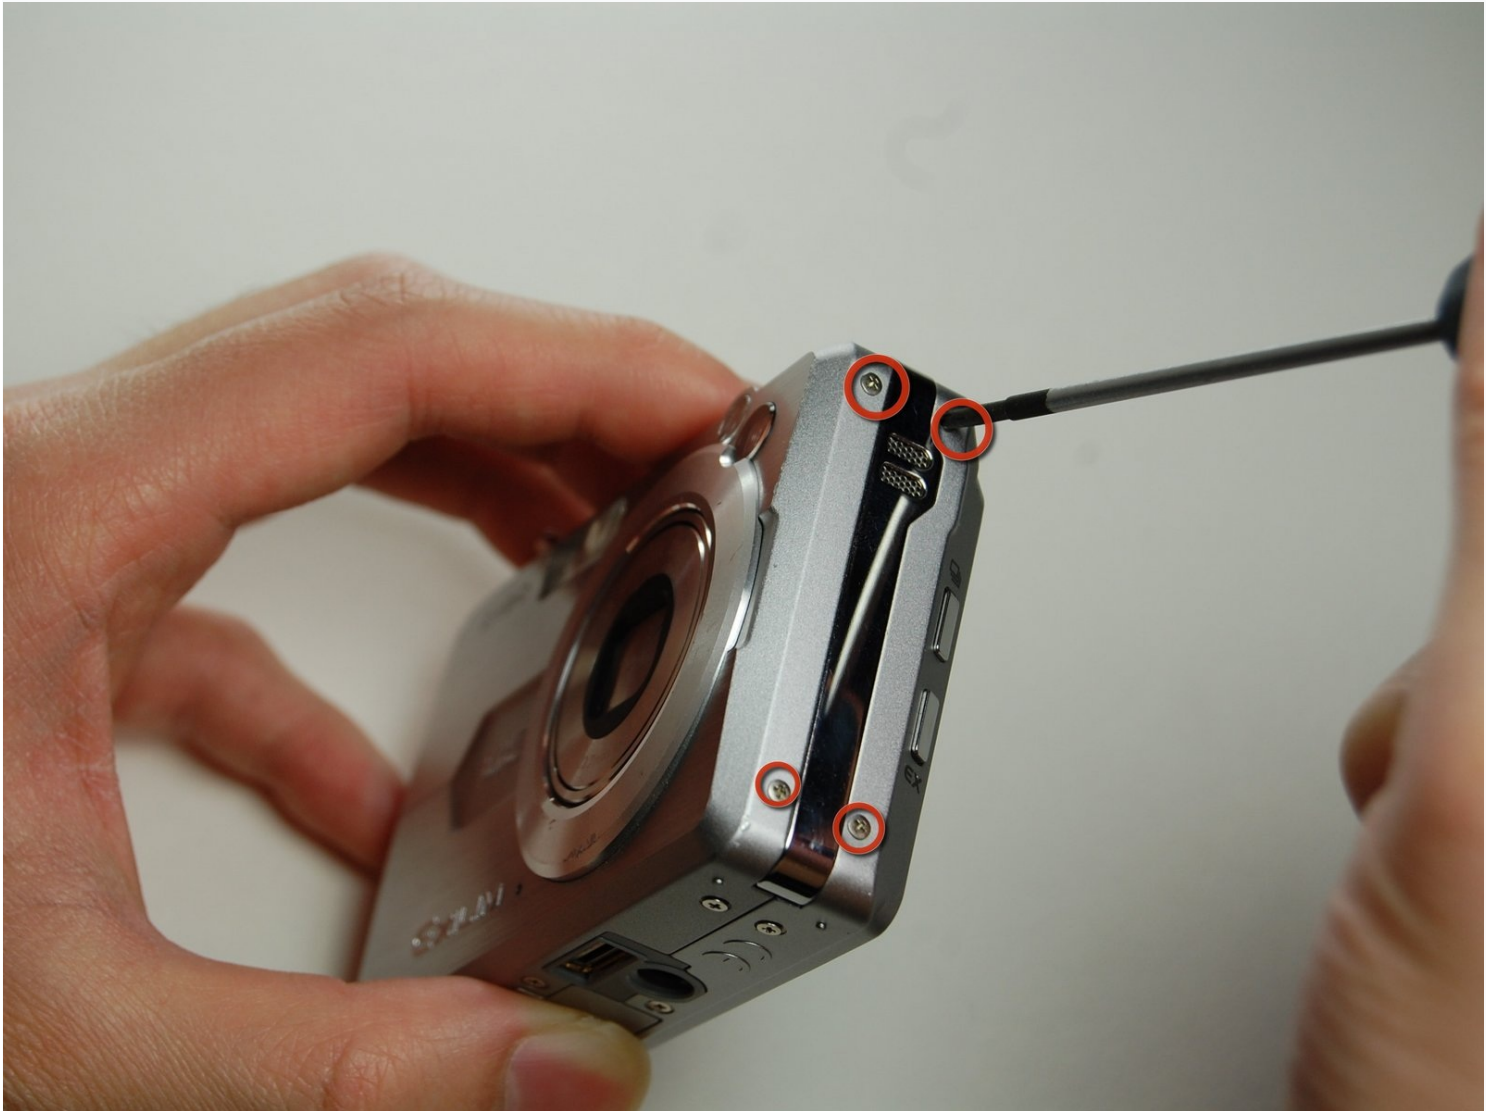

# INTRODUCTION


This guide shows you how to open the Casio Exilim EX-Z850's outer casing and access the camera's internal components. This may be necessary to replace parts of your camera.

## TOOLS:

Phillips #00 Screwdriver (1)

Tweezers (1)

## Step 1 — Outer Case

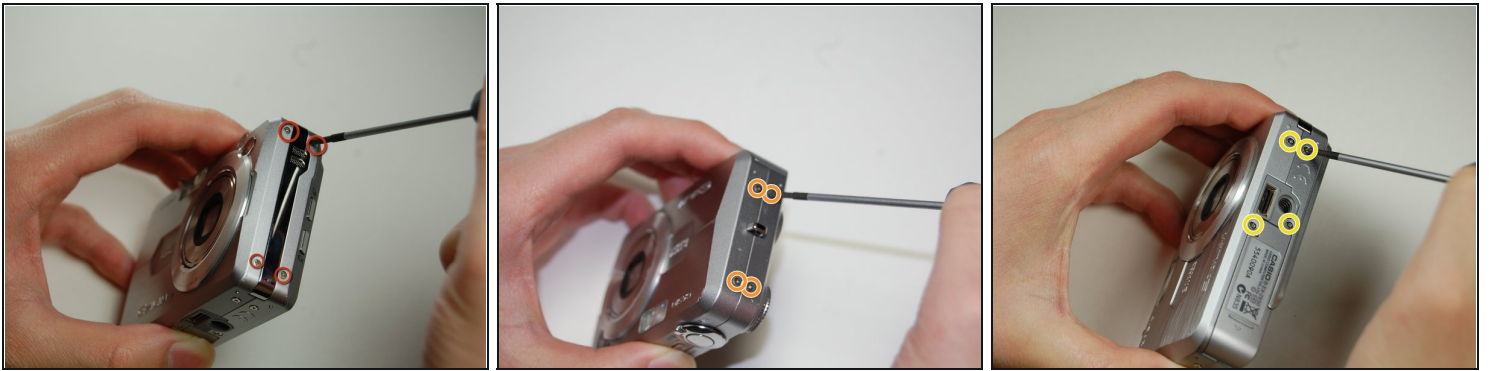

- Remove all four screws on the camera's side using a Phillips #00 screwdriver.
  - Remove all four screws on the opposite side of the camera using the same screwdriver.
  - Remove all four screws on the bottom of the camera using the same screwdriver.
- ⓘ The bottom screws are longer than the top screws, so label them accordingly for easy reassembly.


## Step 2



- Pry open the bottom casing.
- Remove the ribbon from the LCD screen using the [tweezers](#) and set aside the bottom casing.

⚠ These steps should be taken carefully in order to prevent damage to the camera.

## Step 3

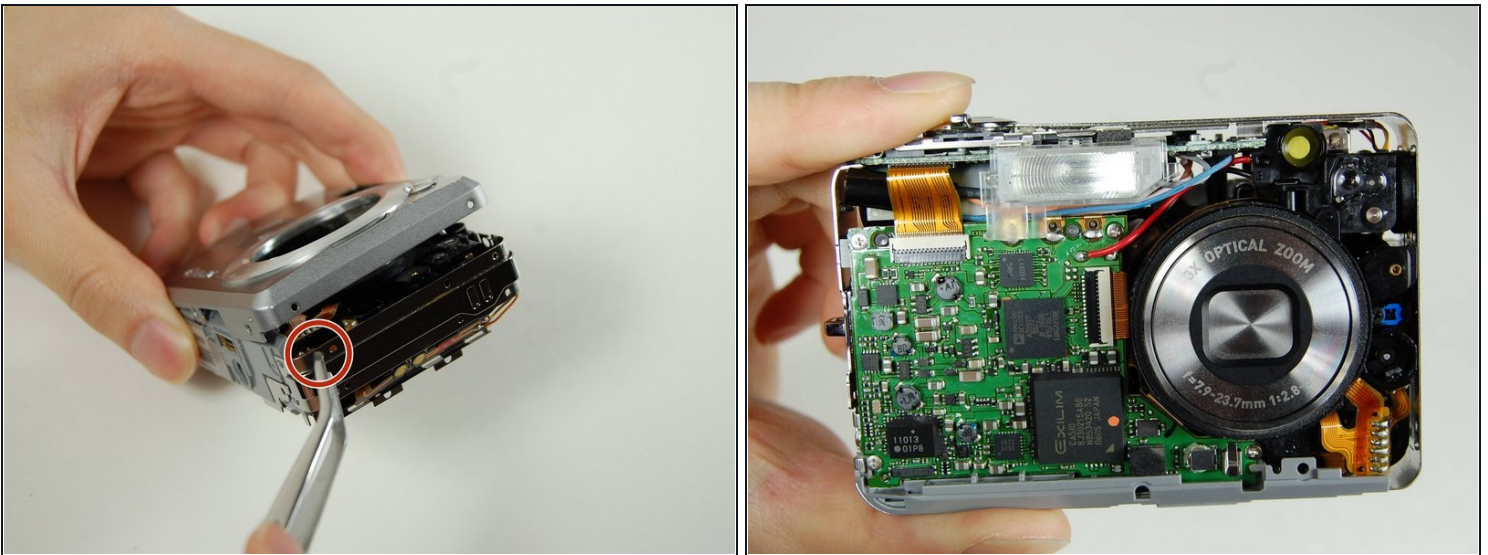

- Pry apart the top casing using tweezers.
- Remove the top casing from the camera and set aside the top casing.

⚠ These steps should be taken carefully in order to prevent damage to the camera.

---

To reassemble your device, follow these instructions in reverse order, starting with reattaching the top casing.