


BLU Dash 3.5 Screen Assembly Replacement

Replace broken screen assembly on the Blu Dash 3.5.

Written By: Jeffrey Dlugosz

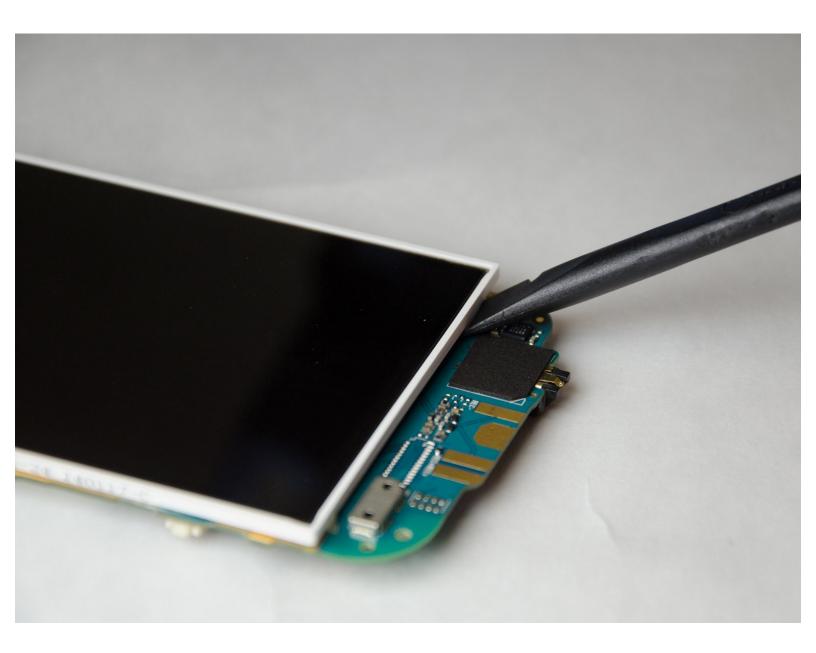

INTRODUCTION

A hands on guide to replacing the touch screen on the Blu Dash 3.5. This guide will detail the steps necessary to remove and replace the touch screen.



TOOLS:

- Phillips #000 Screwdriver (1)
- iFixit Opening Tools (1)
- Soldering Iron (1)
- Tweezers (1)



PARTS:

• Blu Dash 3.5 Replacement Screen (1)

Step 1 — Battery







- Start by locating the slot on the lower right corner of the device.
- Insert the opening tool into the slot.
- Pry the back cover off. Once the corner is off, continue around the perimeter of the phone pulling the back off with your fingers.
- (i) A fingernail can work to open the back in place of an opening tool.

Step 2





- Locate the indentation at the bottom of the battery.
- Insert your thumb and pull the battery out.

Step 3 — Volume and Lock Button





- Use the 000 Phillips screwdriver to remove the four 4.5 mm screws from the corners of the interior back panel.
- Use the opening tool to pry open the plastic back panel to expose the motherboard.


Step 4





Remove volume and lock buttons by lifting them gently from the casing.

Step 5 — **Screen Assembly**

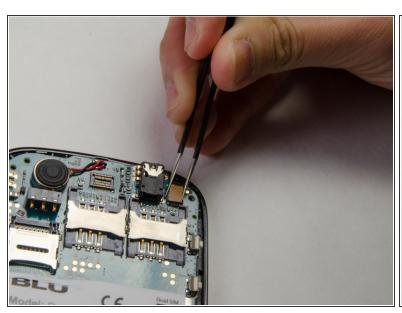




- Use tweezers to lift the tab where the cable is connected.
- Use the opening tool to pry the motherboard from the front face plate.

Step 6



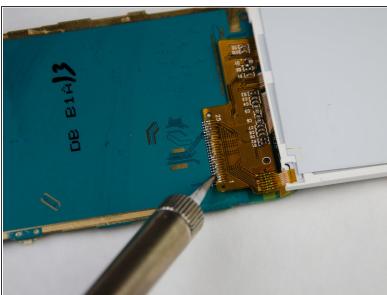

- Use opening tool to pry off the screen.
- Use a soldering tool to melt the contact between the motherboard and the screen
- Solder new screen contacts to the motherboard.

To reassemble your device, follow these instructions in reverse order.