



# HTC One X Plus Screen Replacement

You may need to replace your screen if it is...

Written By: Jason Melo



# INTRODUCTION

You may need to replace your screen if it is broken or cracked.

---

## TOOLS:

[Tweezers](#) (1)

[Suction Handle](#) (1)

[Phillips #000 Screwdriver](#) (1)


[Spudger](#) (1)

[iFixit Opening Tool](#) (1)

---

## Step 1 — Screen






- Power off your device.
  - Insert a pin, paper clip, or very small piece of metal in the hole next to the micro sim card holder to remove it.
-  The sim card slot is located on the top edge of the device.

## Step 2



- Using plastic opening tools, pry open the bottom of the device first.
  - ① You will hear clicking sounds as the sides of the device detach from the screen.
- Once both sides are detached, use the suction cup tool to remove the screen completely from the black encasing.




## Step 3

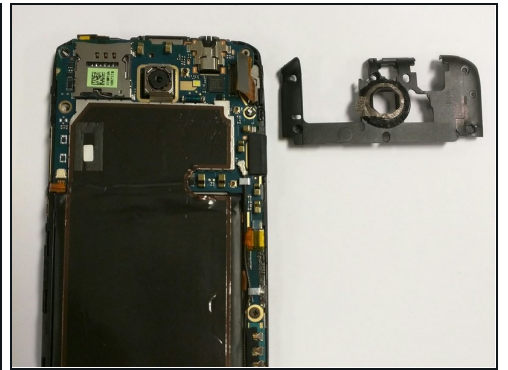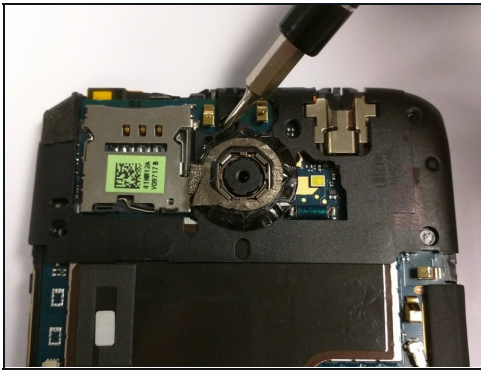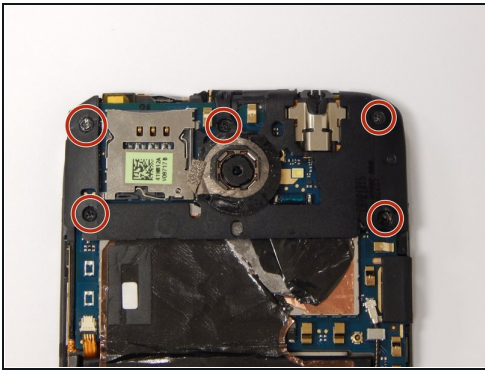

- Remove the five 2.4 mm screws using a Phillips #000 screwdriver.
- Remove the plastic cover.





## Step 4

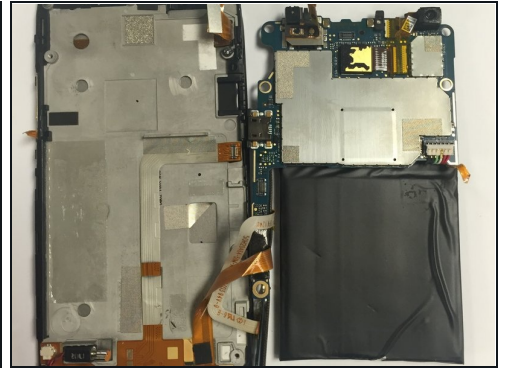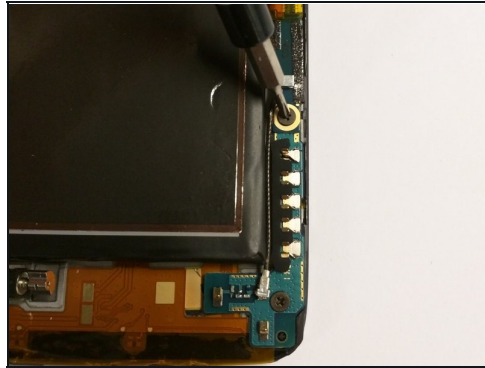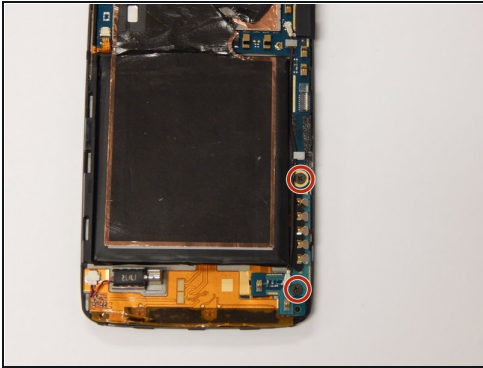


- Use a Phillips #000 screwdriver to remove the two 3.4 mm screws.
- Remove the PCB board and antenna.

## Step 5

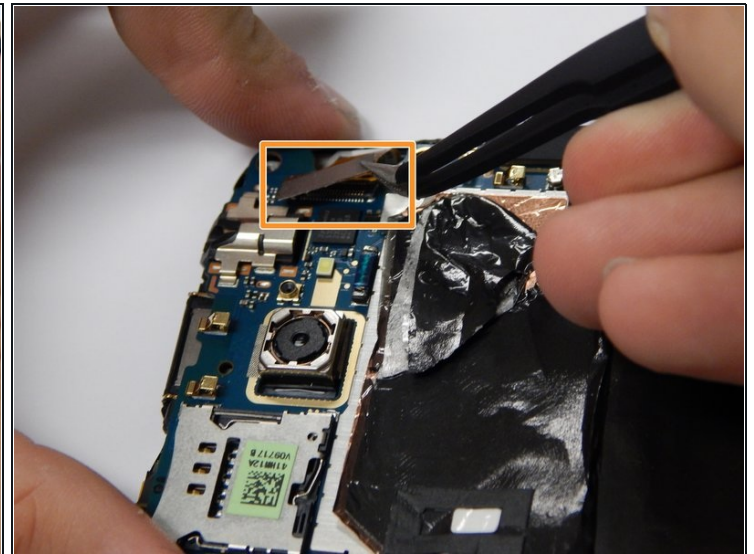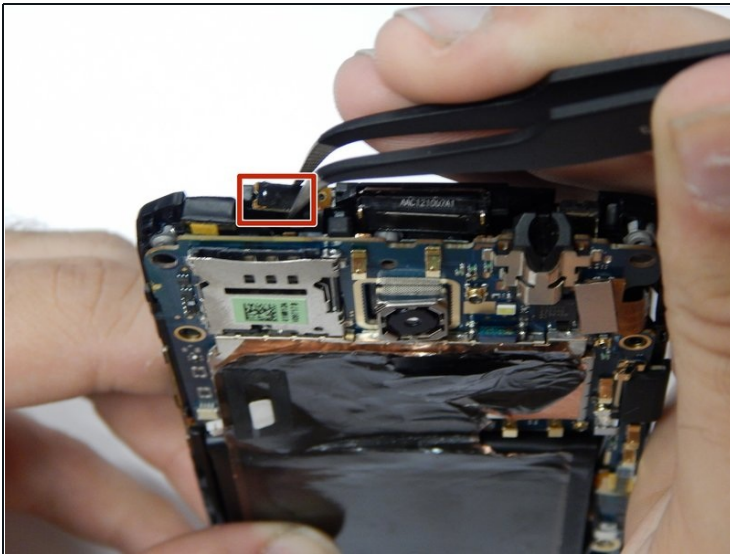

- Use [tweezers](#) to disconnect the power button flex cable.

## Step 6

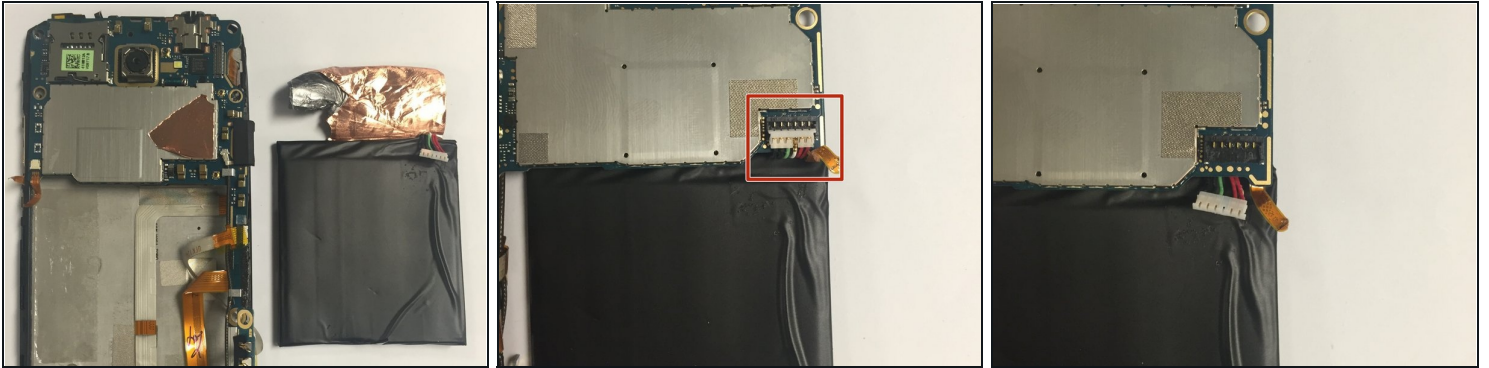

- Disconnect the battery's six pin connector from the motherboard.
- Remove the battery by pulling it upwards.

## Step 7



- Disconnect the screen from the digitizer.
- Use a plastic opening tool to gently disconnect the screen from the digitizer.
- ① You may have to use heat to loosen adhesive securing the screen.

To reassemble your device, follow these instructions in reverse order.