




Acer Iconia One 7 Rear-Facing Camera Replacement

Replace the rear-facing camera of the Acer Iconia One 7.

Written By: Michael

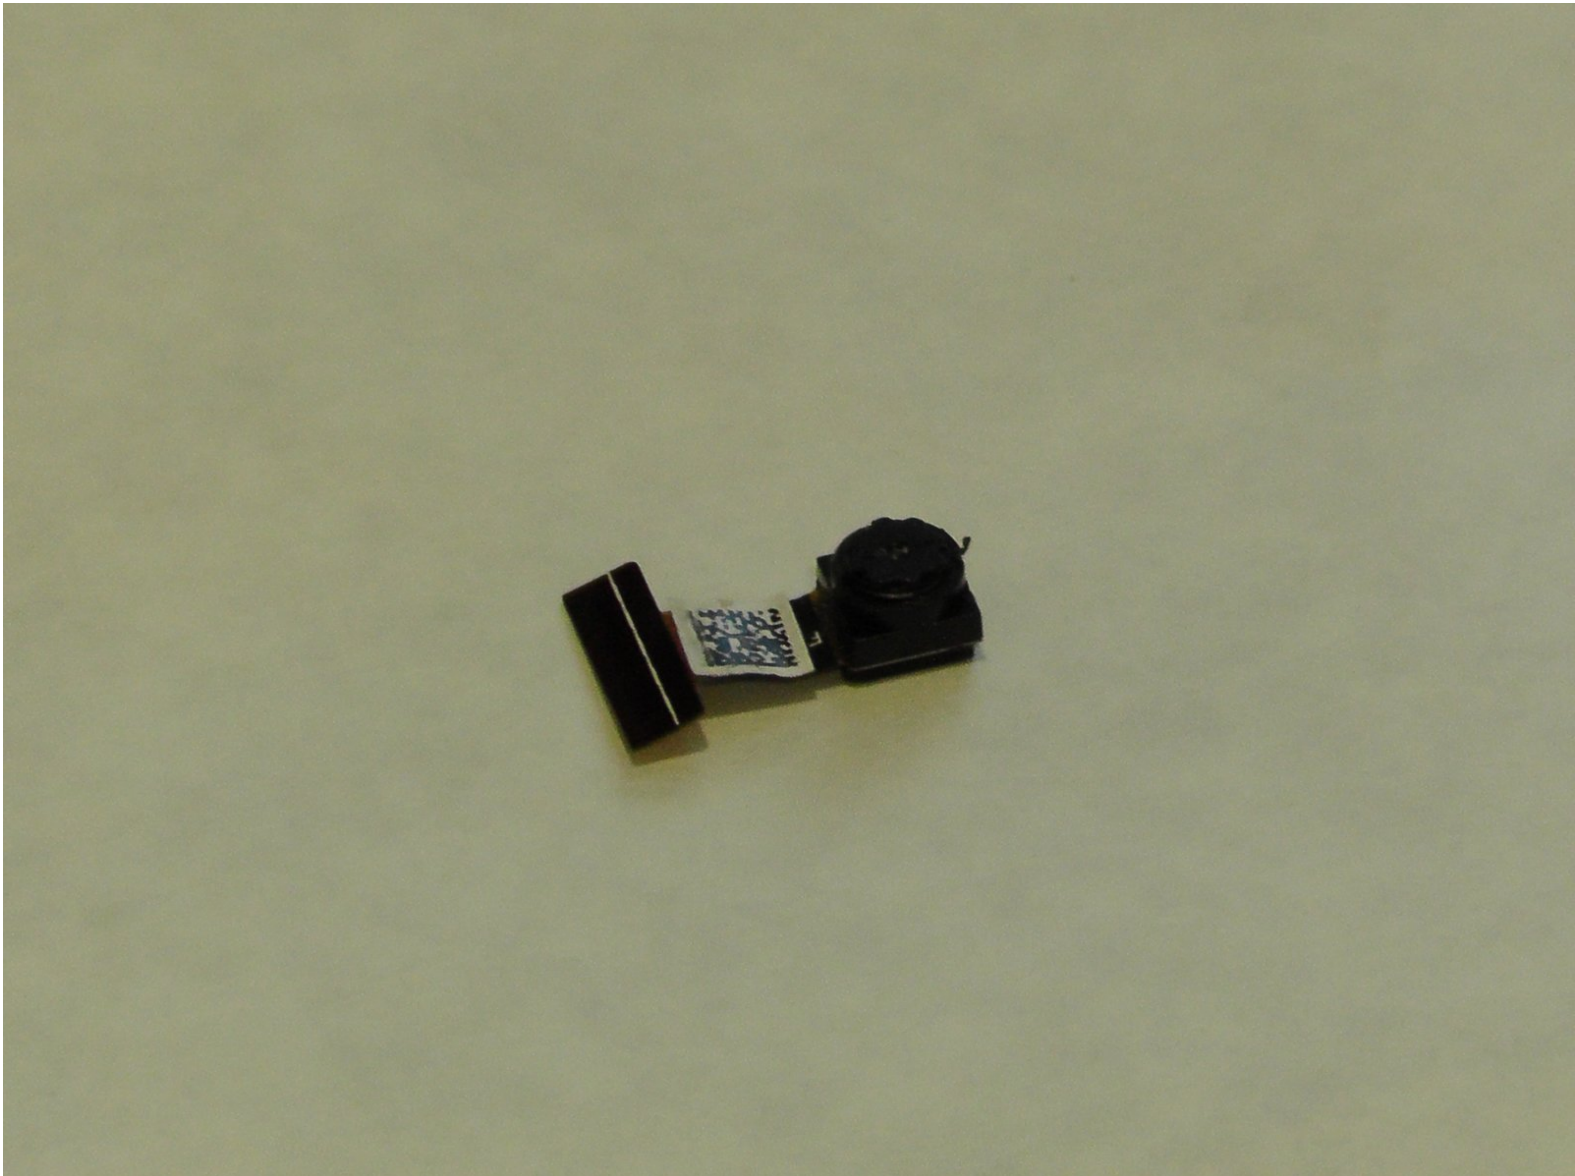

INTRODUCTION

The rear facing camera is utilized when taking pictures in front of the device. In this case it is separated from the front facing camera and works separately as well. Pieces regarding this camera are significantly small so be aware of any missing items.





TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Rear-Facing Camera



- Begin at any side of the tablet.
 - With a plastic opening tool, begin taking apart the back cover from the tablet by working along the edges.
-  Prying the lid open can be difficult, use caution in order to safely remove.
-  Turn off device before this step.

Step 2

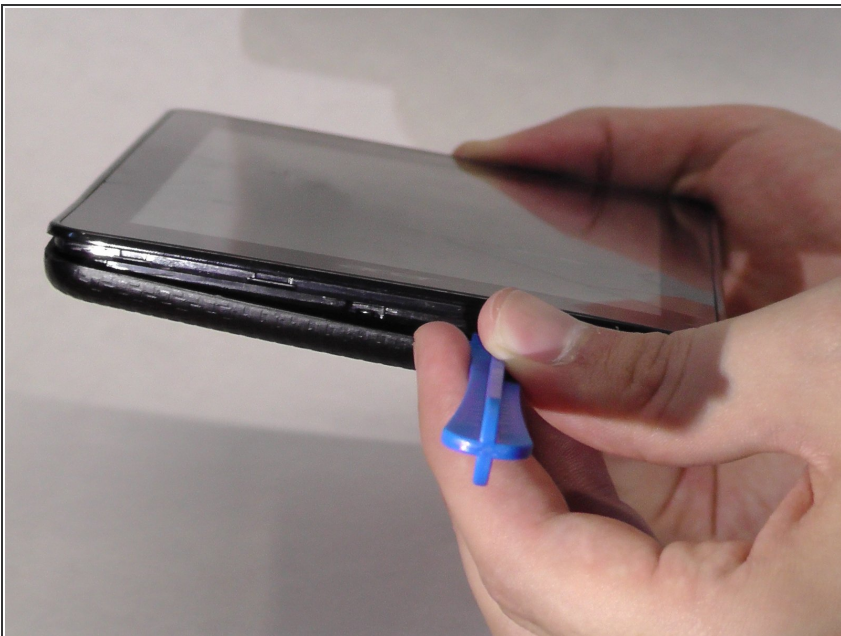

- Using a plastic opening tool, separate the back cover from the main device.
- Open each side continuously to ensure all sides have been separated.



Step 3



- Turn the tablet over to locate the camera on the top left.


⚠ Besides the parts that are mentioned in the instruction, try not to agitate other fragile components inside the device.

Step 4

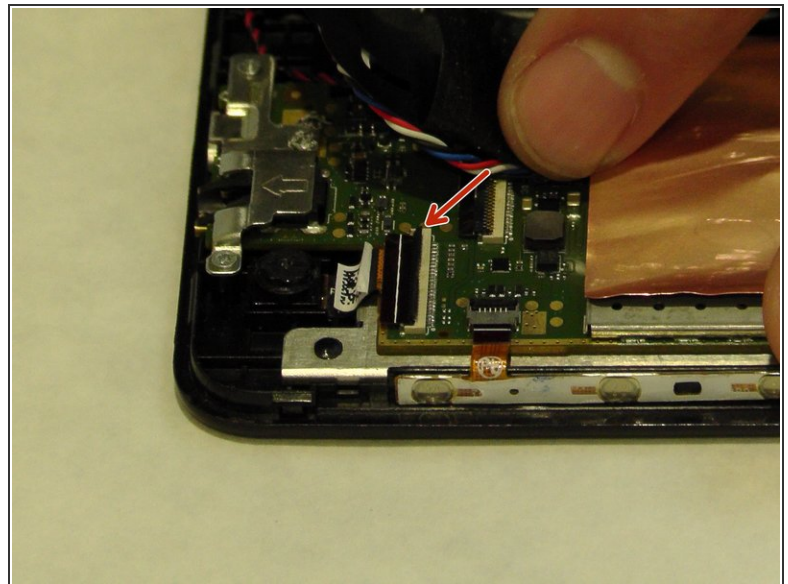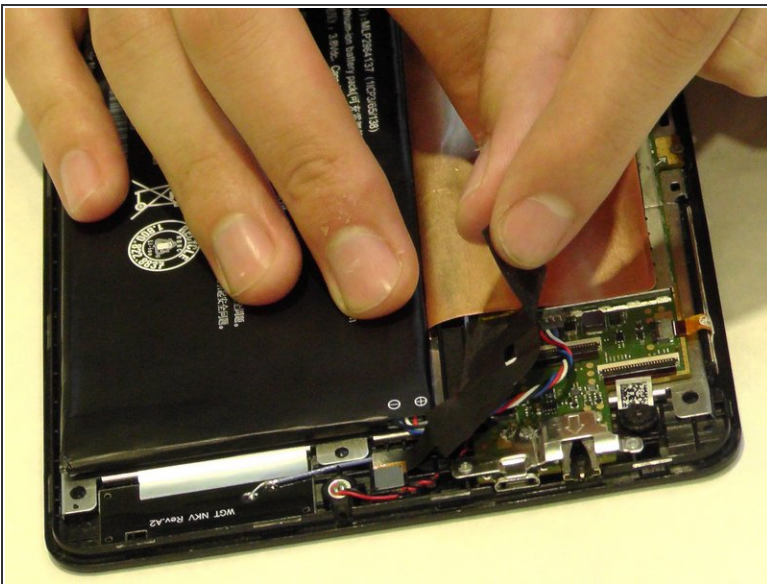

- Peel black tape.
- Detach clip from motherboard.

Step 5

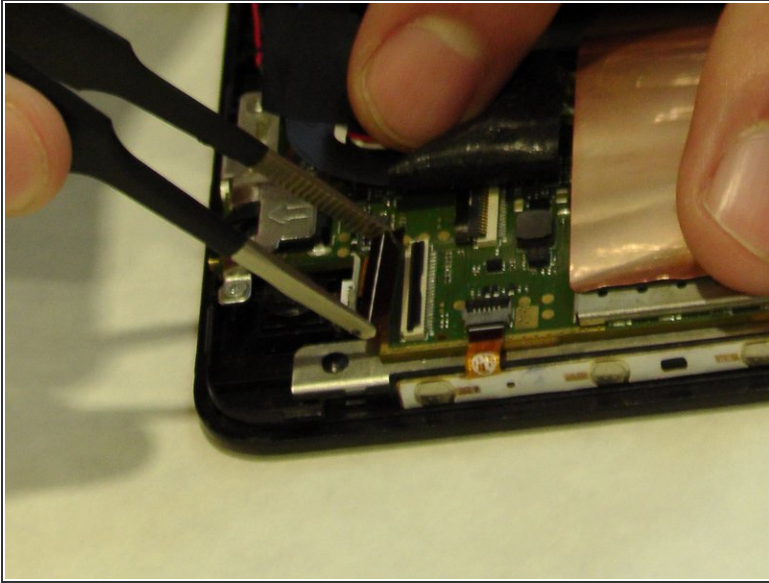

- Take out film object using tweezers.
- Using tweezers take out camera.

To reassemble your device, follow these instructions in reverse order.