




# Disassembling Galaxy Tab S 10.5 Back Rim Cover

Remove the back rim cover of the Samsung Galaxy Tab S 10.5.

Written By: Jordan Soto

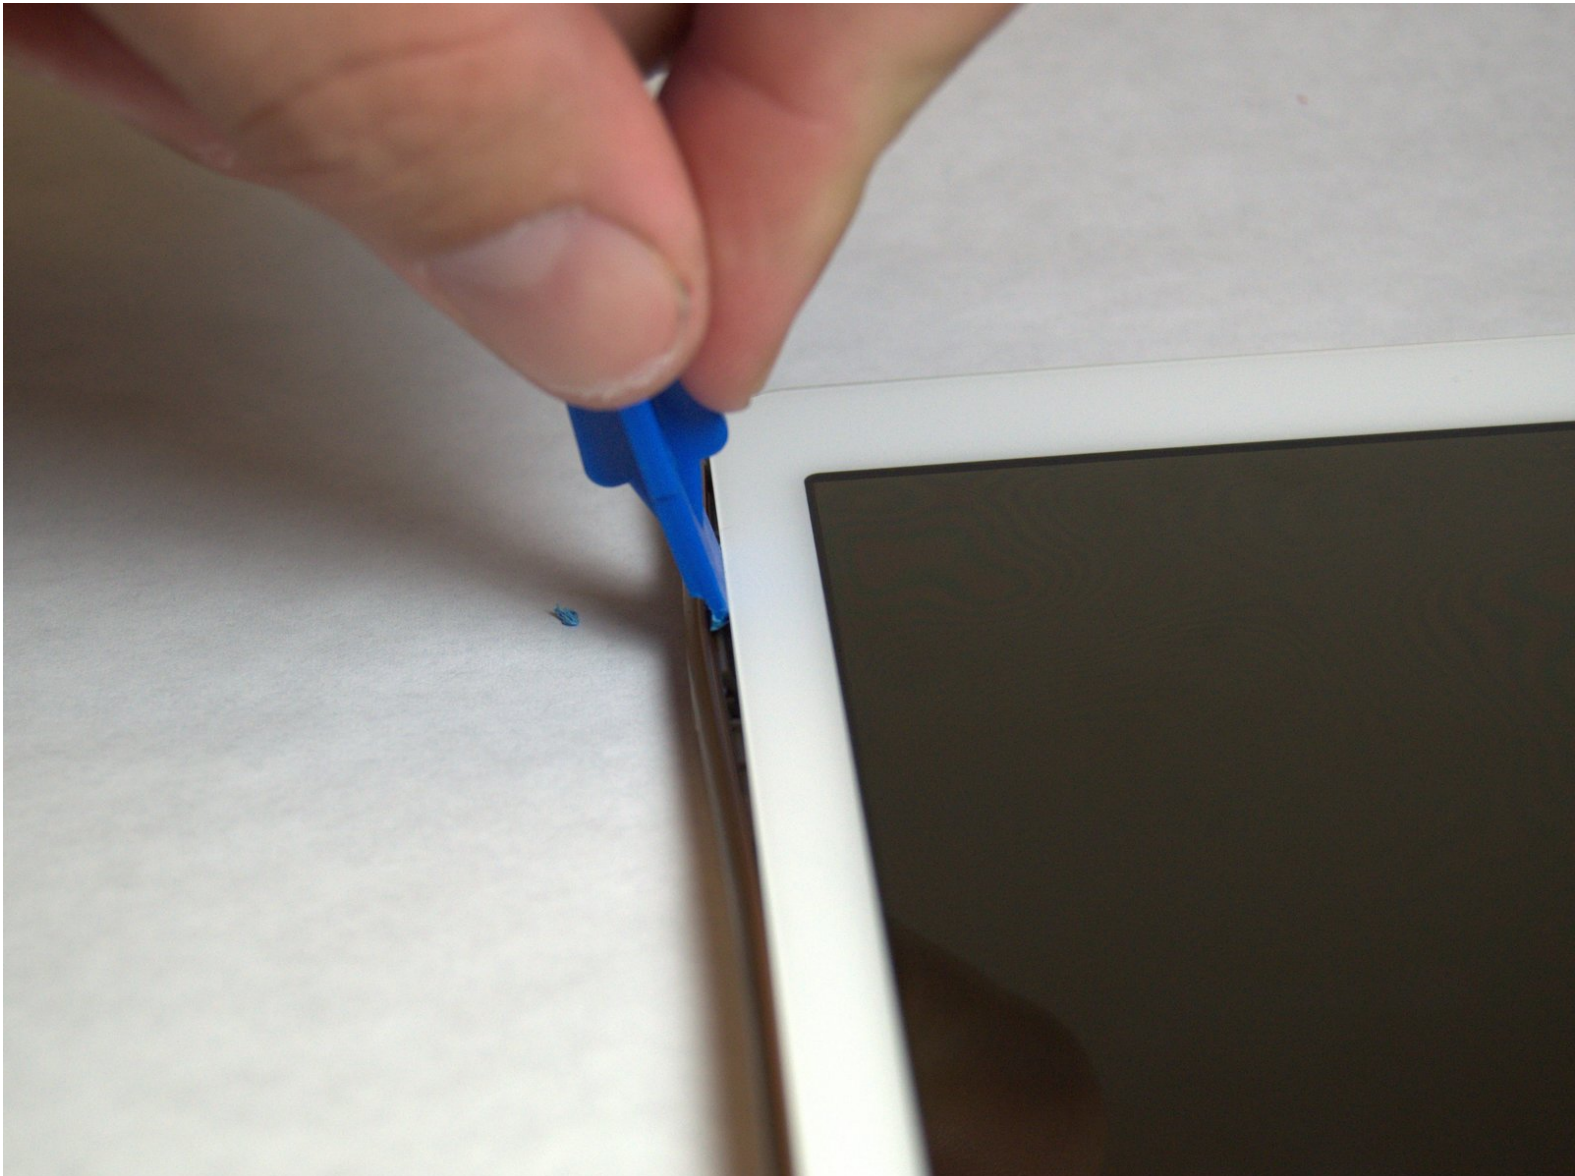

---

## INTRODUCTION



This guide will show how to remove the back rim cover.



### TOOLS:

- [iFixit Opening Tools](#) (1)
-

## Step 1 — Disassembling Galaxy Tab S 10.5 Back Cover

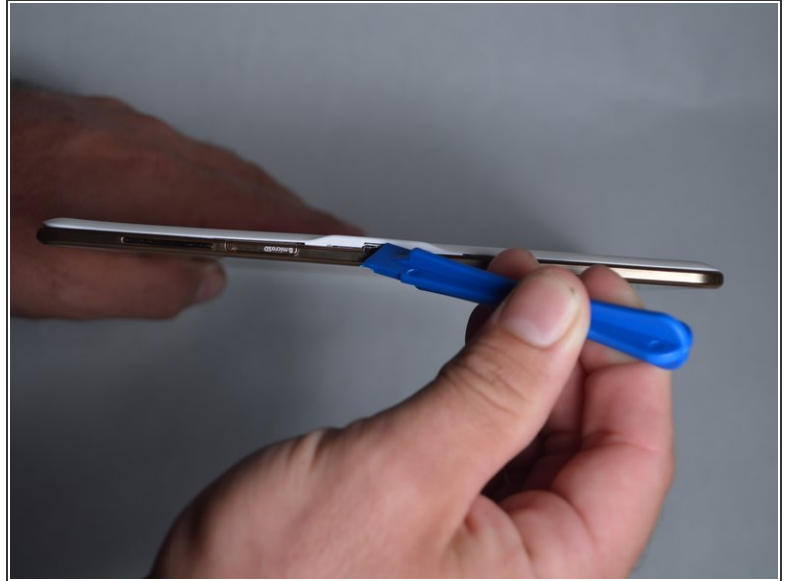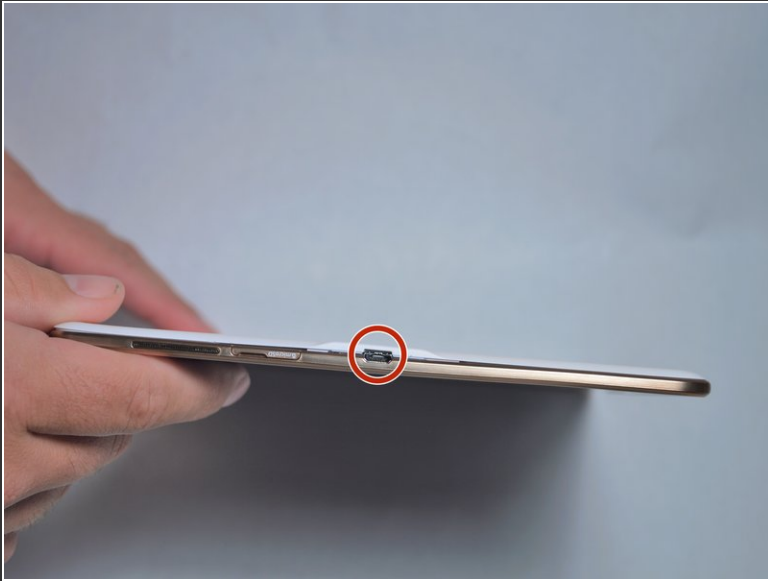

- Place the plastic opening tool into the SD card slot or charge port.
- Try in an upward motion until you see a separation between the tablet and back cover.

## Step 2




- Work around the entire device by sliding the plastic opening tool around the rim.
- ⓘ If this is the first time, it will be hard to separate the back cover from the tablet.
- ⓘ The clips are approximately 5 cm apart. While working around the device, the clips will make a dislocating sound when disconnected.



## Step 3



- Remove the back cover once all links have been separated.

 Be careful when touching any of the internal components of the tablet.


## Step 4 — Back Rim Cover

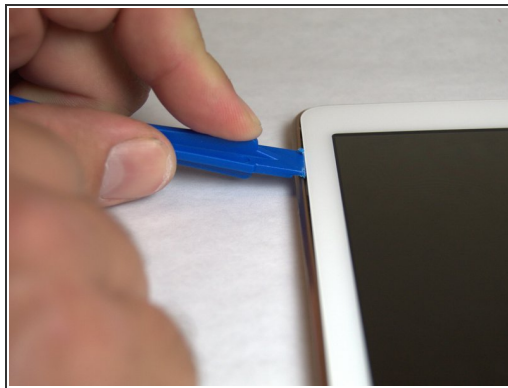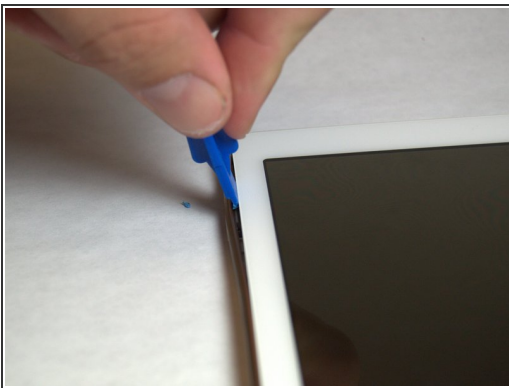

- Place the plastic opening tool in between the outer rim.
- Move the tool in a downward motion to separate the 2 parts.
- Run the tool along the rim to disconnect all connectors holding the outer rim to the back of the device.



## Step 5

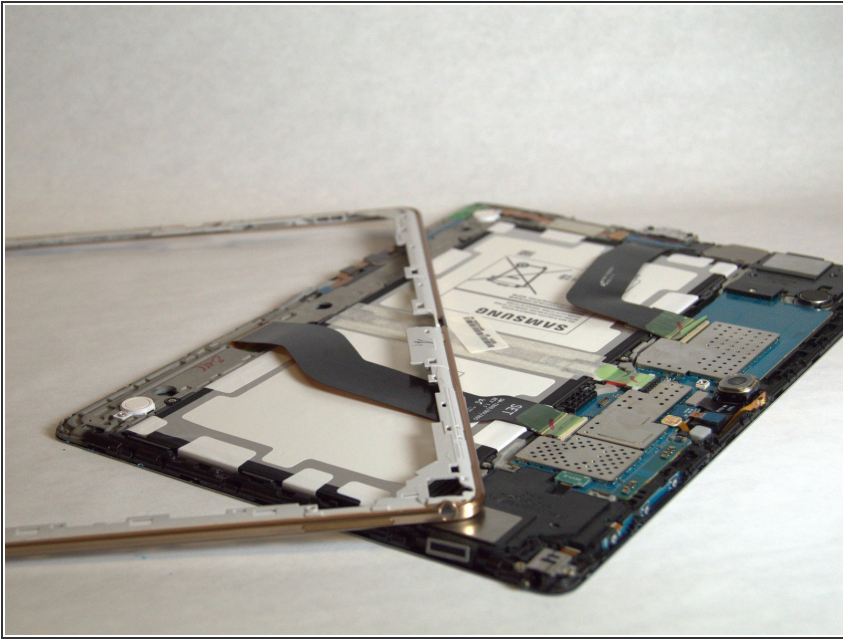

- Repeat this step for all four sides, then remove the rim.

To reassemble your device, follow these instructions in reverse order.