




# Microsoft Lumia 535 Loudspeaker ,Vibra Motor or Camera Light Replacement

Microsoft Lumia 535 Loudspeaker ,Vibra Motor or Camera Light Replacement

Written By: ZFix

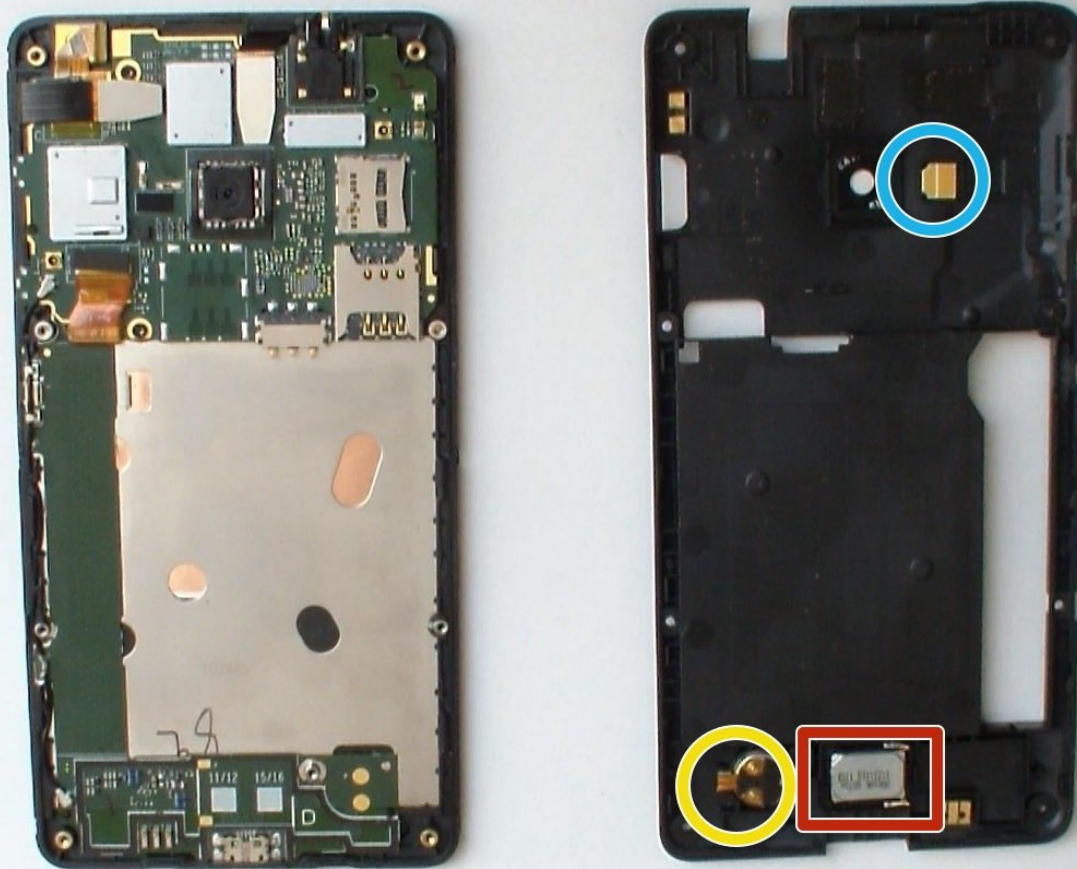

---

## INTRODUCTION

Microsoft Lumia 535

RM-1090 / RM-1091/ RM-1089 / RM-1092

How to disassemble the phone and replace the Loudspeaker or Vibration motor.



### TOOLS:


- [T4 Torx Screwdriver](#) (1)
  - [Tweezers](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Plastic Cards](#) (1)
-

## Step 1 — Back Cover / Rear Case



- Turn off the phone.
- Remove the battery and any SIM and memory cards.

## Step 2

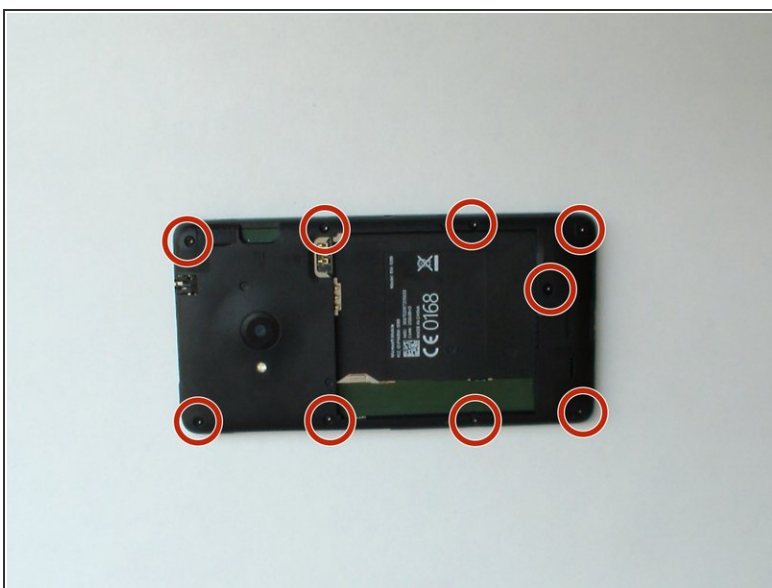


- With a screwdriver Torx T4 remove the 9x screws.

### Step 3



- With a plastic opening tool separate the back cover from the middle frame.

### Step 4 — Loudspeaker and Vibra Motor

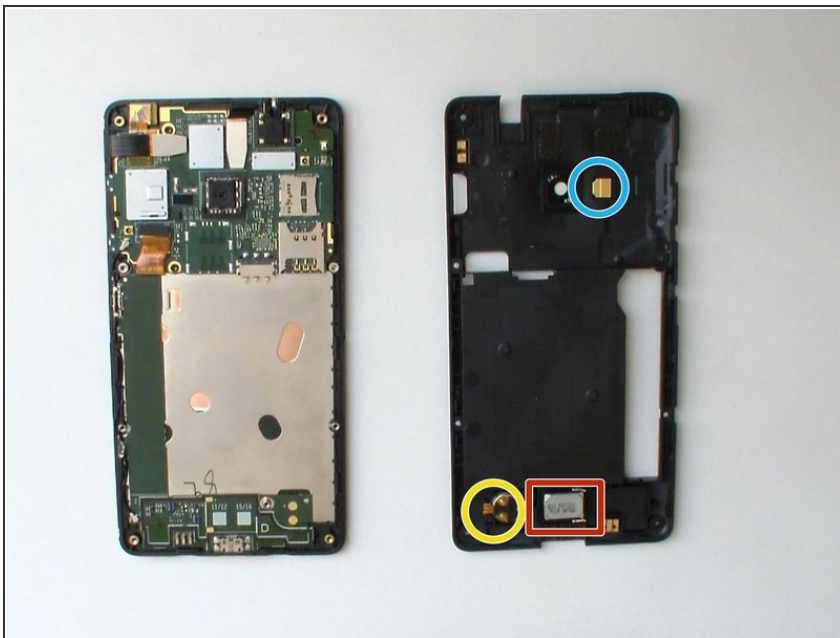

- Loudspeaker
- Vibration motor
- Camera light

To reassemble your device, follow these instructions in reverse order.