



Graco Secure Coverage Nursery Unit Battery Replacement

With this guide, you will be able to replace the battery on both units.

Written By: Rogelio Morales



INTRODUCTION

Use this guide to replace the battery on your Graco Secure Coverage Digital Baby Monitor for nursery unit.

The battery replacement includes the battery replacement.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Nursery Unit Battery



- Remove the 9mm screw from the battery cover of the nursery unit using a Phillips #1 tip screwdriver.

Step 2

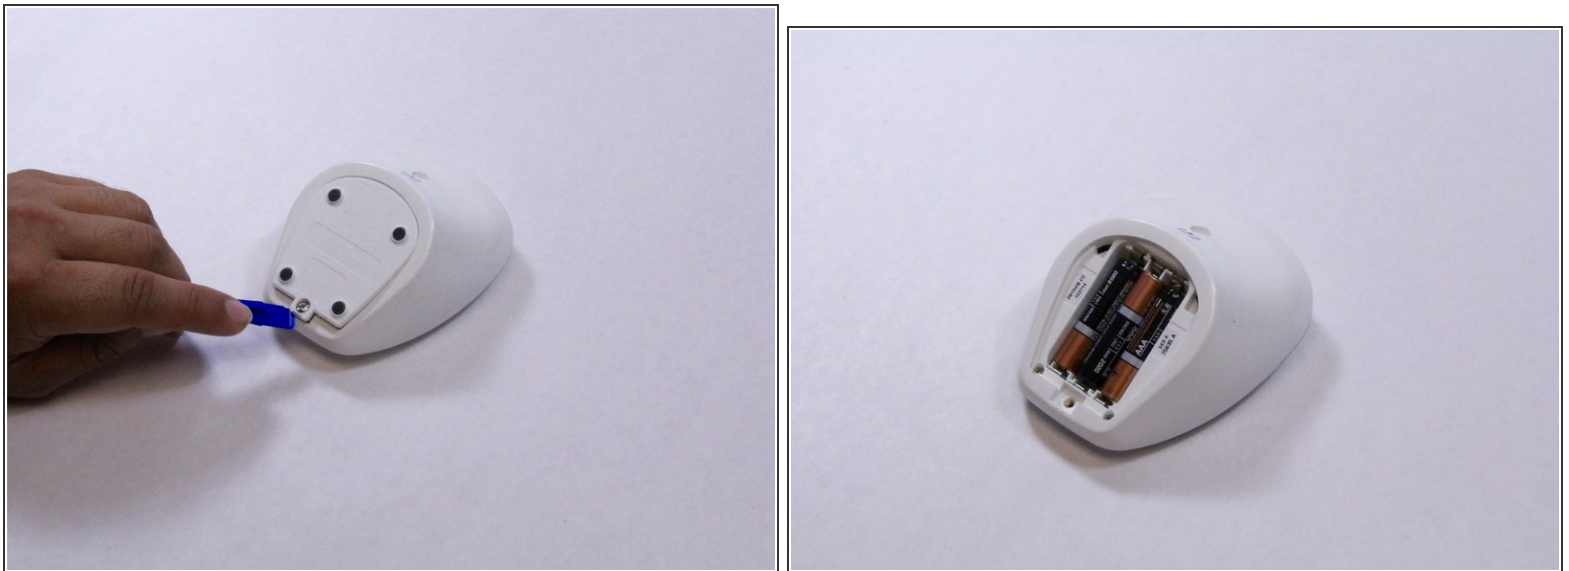

- Using the plastic opening tool, pry and remove the battery cover carefully.
- Remove the batteries using plastic opening tool.
- Replace the batteries.

To reassemble your device, follow these instructions in reverse order.