



# Infant Optics DXR-5 Battery Replacement

The purpose of this guide is to show the steps required to replace the battery of the hand held monitor for the Infant Optics DXR-5.

Written By: Charles Neal



## INTRODUCTION

Ensure that the hand held monitor is off and unplugged prior to starting this guide. No tools are required for replacing the battery.

## Step 1 — Battery



- Press on the blue clip on the back and slide it down.

**i** In the second picture there is a slight gap at the top of the blue clip.

## Step 2




- Pull the blue clip away from the body of the hand held monitor.

## Step 3



- Slide the rear white panel off as shown.

## Step 4

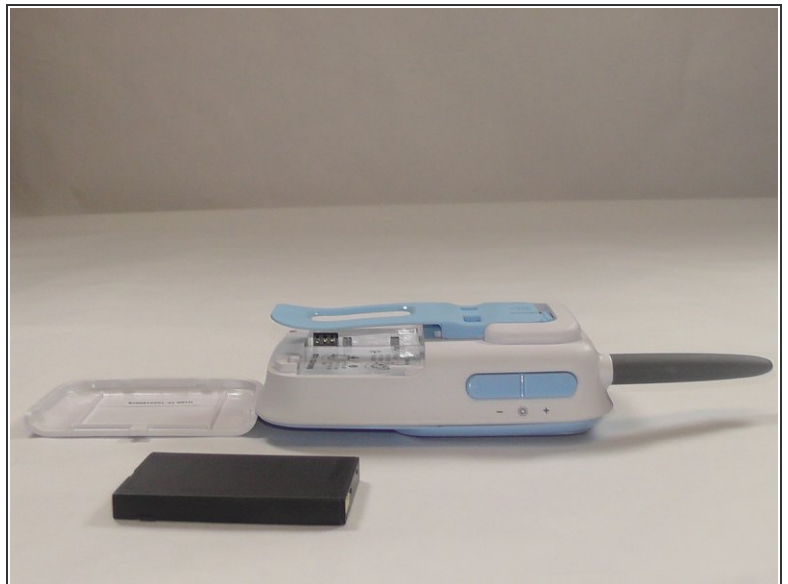

- Remove the battery by pushing in on the right side and then pulling the battery up and out of the body of the hand held monitor.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 04:41:15 AM (MST).

