



Zoomer Dino Boomer Tail Tip Replacement

If the tail tip of Zoomer Dino Boomer falls off, this guide can be used to replace it.

Written By: Lauren Mannix



INTRODUCTION


This guide will assist the reader in replacing the tip of Zoomer Dino Boomer's tail.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Tail Tip

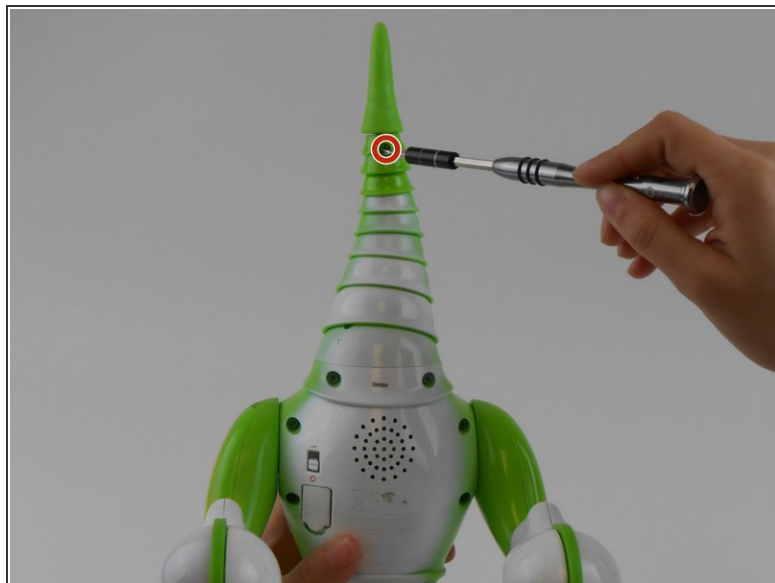



- Remove the 9.4 mm Phillips #0 screw from the bottom of the tail of Zoomer Dino Boomer.

Step 2



- Use the spudger to pry open the two ridges on the last segment of the tail.

Step 3

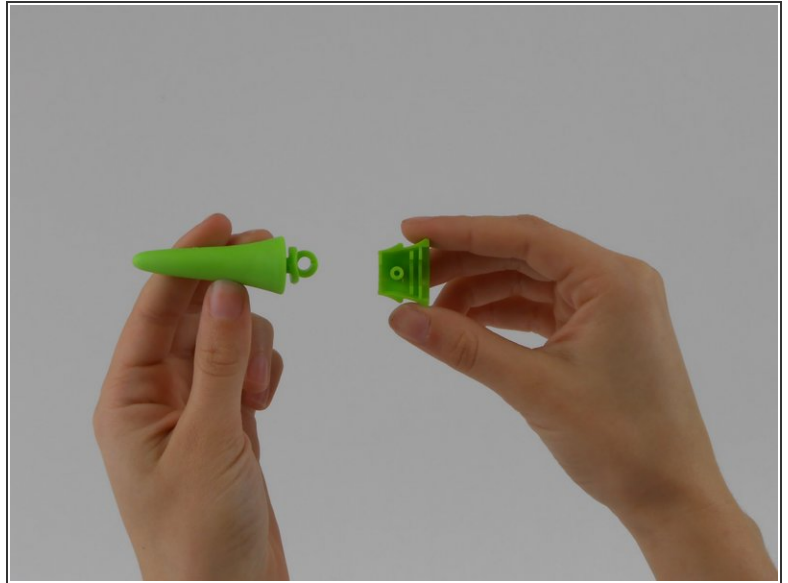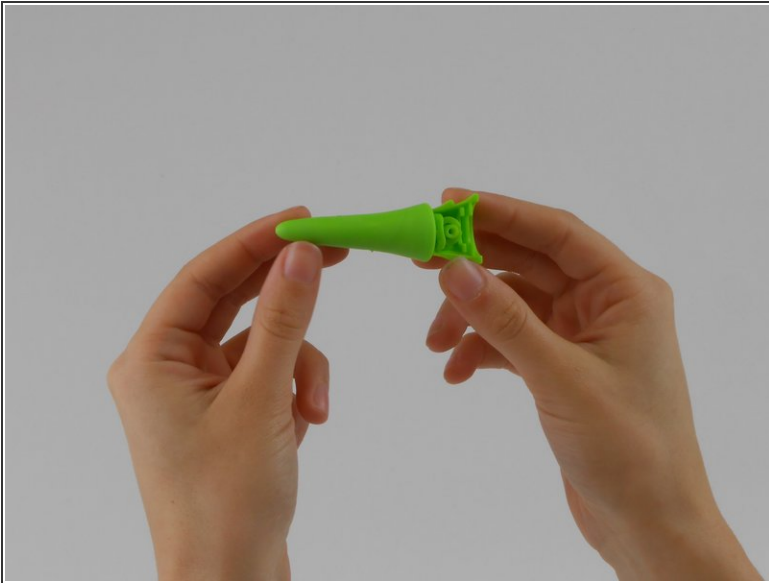

- Remove the rubber tail tip from the plastic connector.

To reassemble your device, follow these instructions in reverse order.