




Sony Vaio Tap 11 Battery Replacement

If your device no longer takes a charge,...

Written By: Alexander Bridges

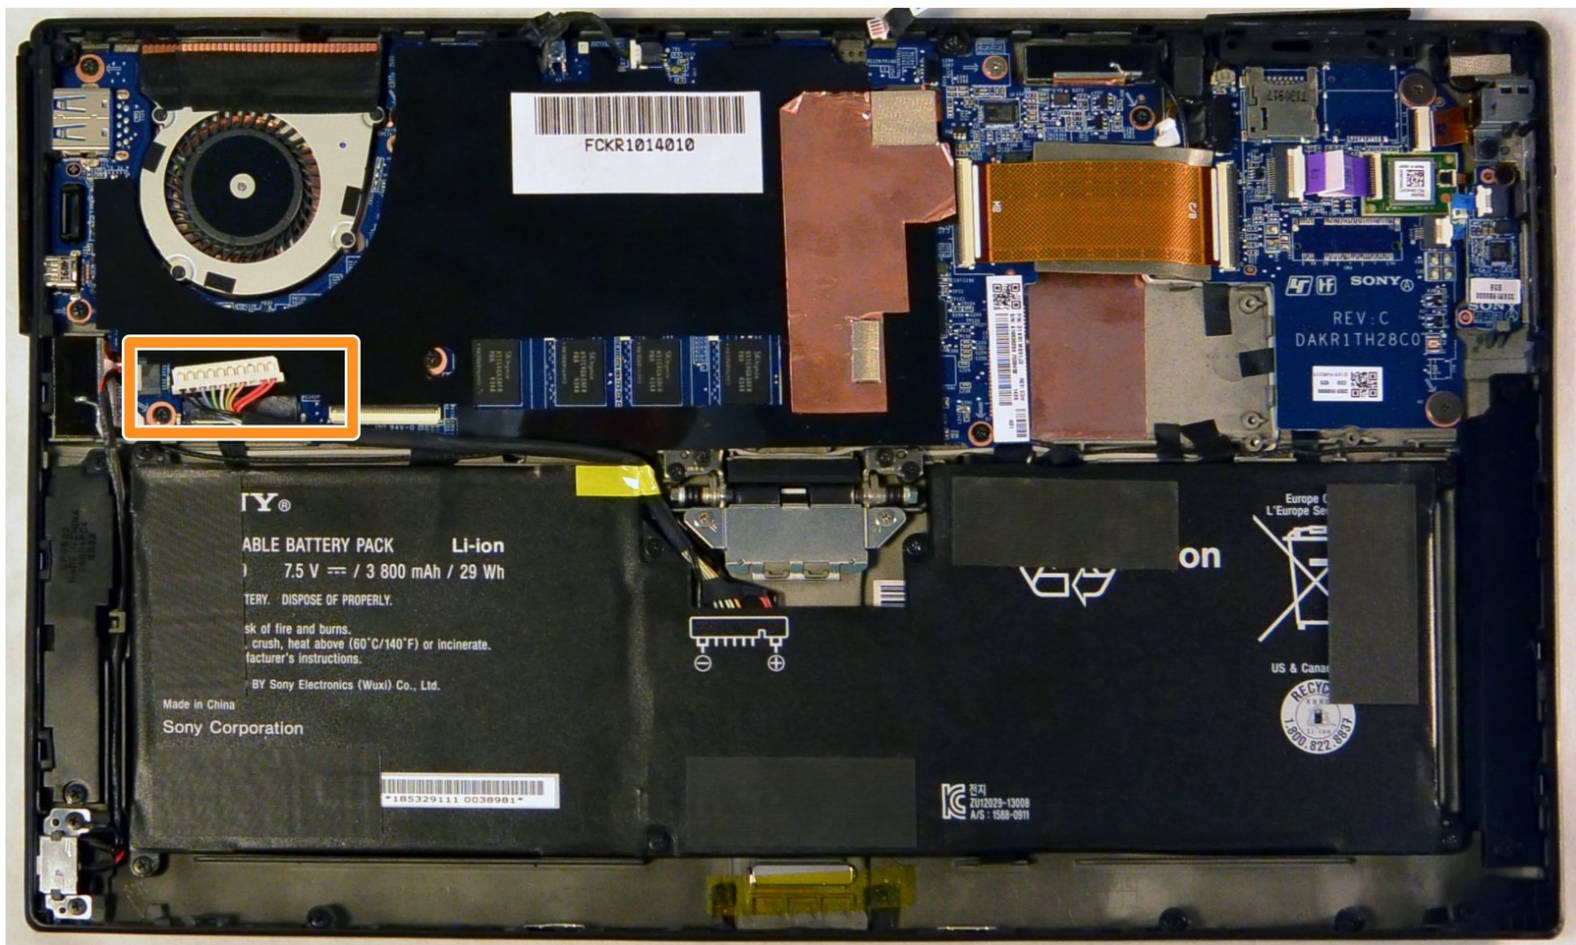

INTRODUCTION

If your device no longer takes a charge, replacing the battery may breathe new life into the tablet.



TOOLS:


- [Phillips #000 Screwdriver](#) (1)
 - [Suction Handle](#) (1)
-

Step 1 — Screen Assembly




- Begin by opening the HDMI/USB port cover on the left edge.
- Remove the three #000 headed, 3 mm long screws located underneath the port cover.

Step 2

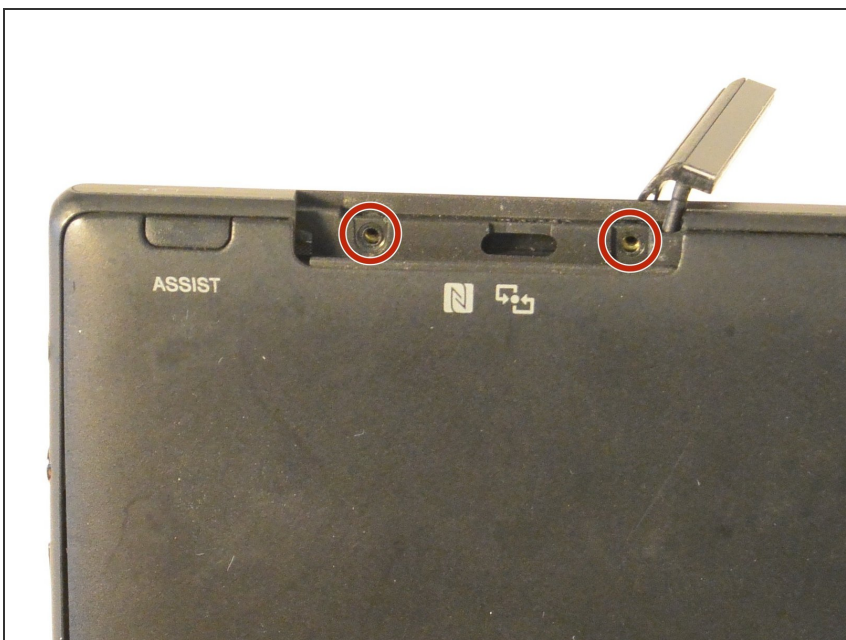

- Locate and open the Micro SD slot on the top side of the device.
- Remove the two screws located beneath the cover.

Step 3

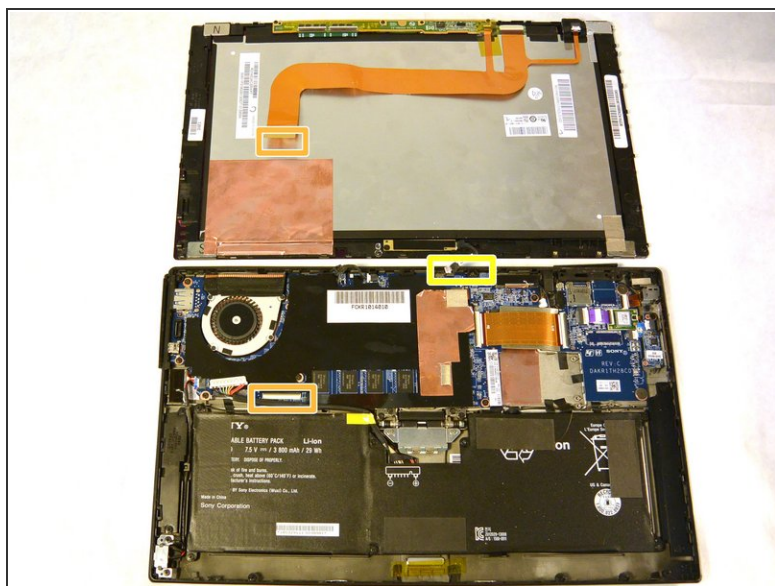


- Attach the suction cup to the top right area of the screen.
- Pull to separate the screen from the rest of the device.

⚠ Be aware of the front camera cable that is still connected to the rest of the device.


- Detach the display ribbon cable.

Step 4 — Battery

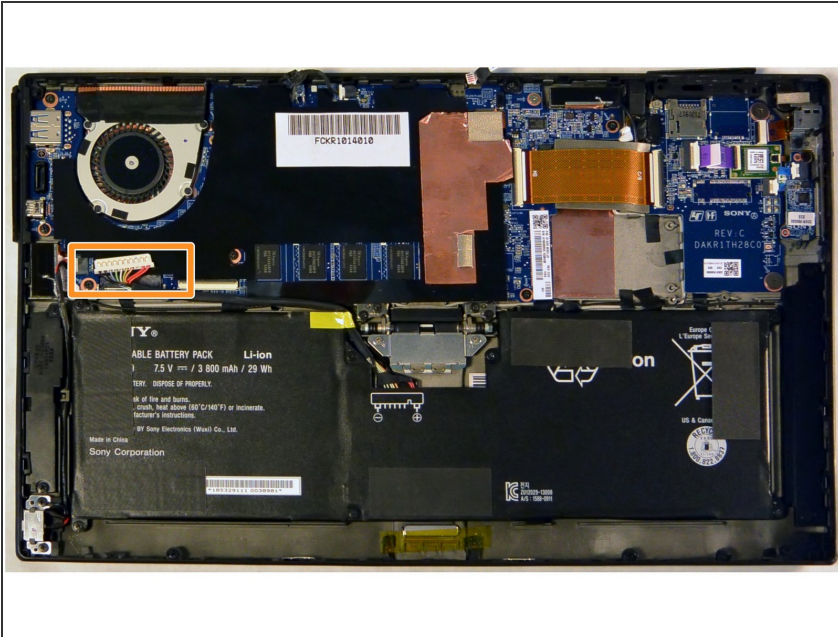

- Disconnect the battery from the motherboard by pulling out the cable below the fan.

Step 5

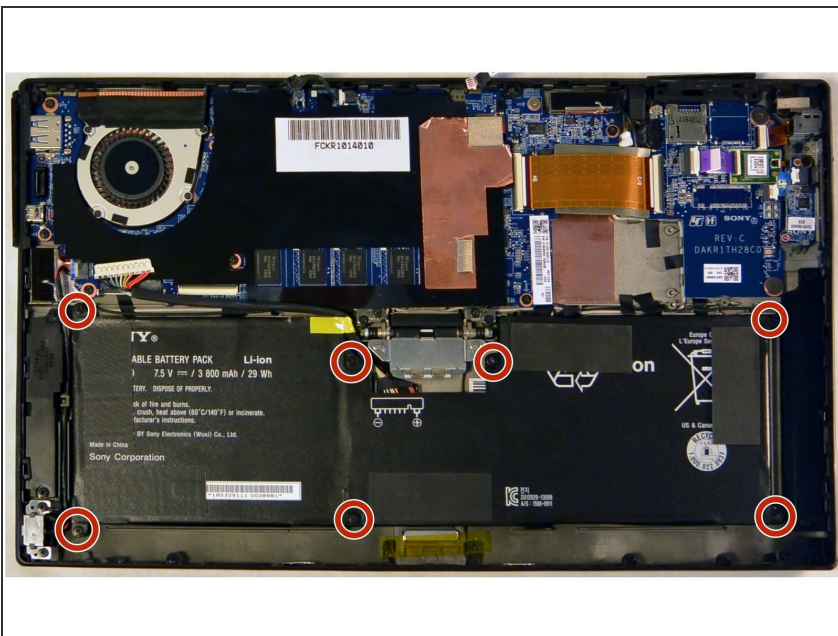

- Remove the seven 3 mm Phillips #000 screws that hold the battery in place.
- Carefully remove the battery from the back assembly.

To reassemble your device, follow these instructions in reverse order.