



# Vtech Touch and Swipe Baby Phone Power Switch Replacement

The power switch may become sensitive or even unresponsive. This guide will show you how to realign the switch.

Written By: tellocordova



---

 **TOOLS:**

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Battery



- Using a Phillips #1 screwdriver, remove the 4.8mm screw on the battery cover by twisting the screwdriver counter-clockwise.

## Step 2




- Remove the two AAA batteries by pulling on one end of the battery and lifting it straight out.

### Step 3



- ☑ When reassembling, align the notch on the battery panel with the slot on the phone.

### Step 4 — Power Switch

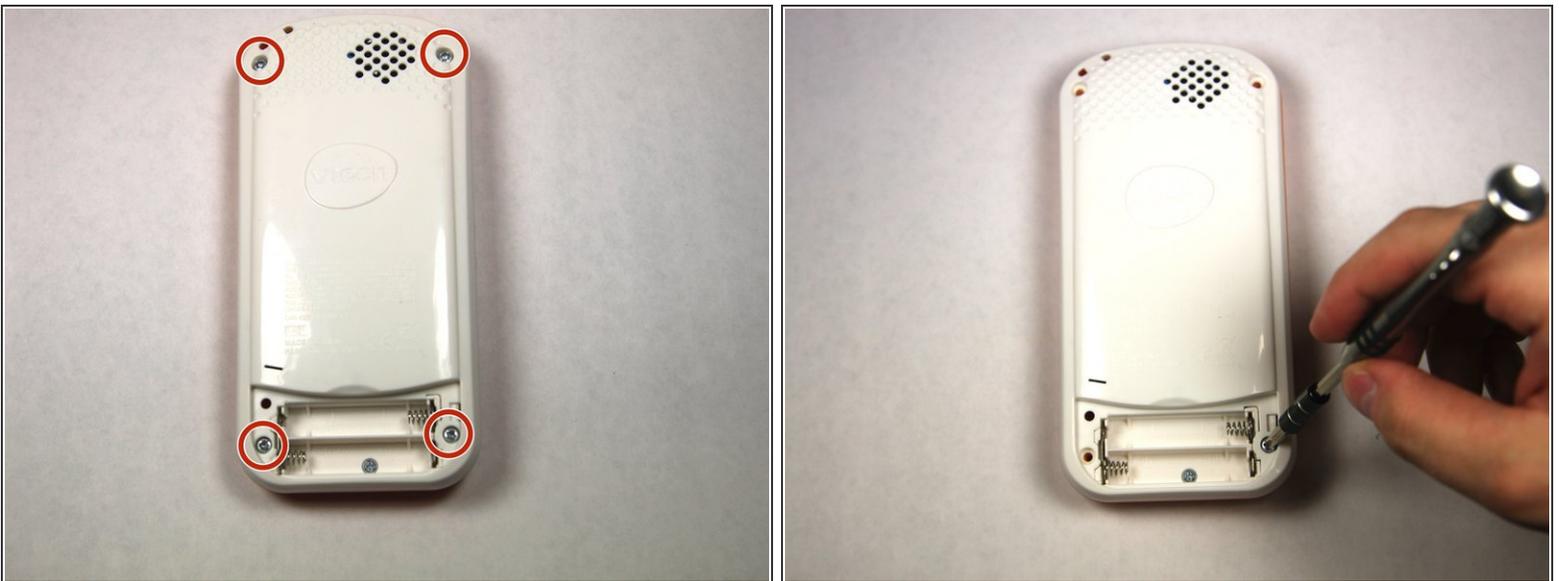

- Remove 4 13.8mm screws holding the device back using a Phillips #1 screw driver.

## Step 5



- Lift directly up to remove the switch and lay the wire down to the side.
- Once the switch has been taken out you can remove the switch's casing.

To reassemble your device, follow these instructions in reverse order.