



VTech Safe And Sound DM221 Speaker Replacement

VTech Safe And Sound Digital Audio Monitor DM221 Speaker Replacement

Written By: Krystal



INTRODUCTION

Follow this repair guide to find out how to replace the speaker with a functional one.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Speaker



- Remove the battery cover.

Step 2



- Unplug the battery from its connector and remove.

Step 3



- Using the Phillips #00 screwdriver, unscrew the two 5.0 mm Phillips #00 screws at the bottom of the monitor.

Step 4



- Separate the back half of the device from the front using the metal spudger.

Step 5




- Remove the two 5.0 mm Phillips #00 screws at the top of the device which holds the antenna at the top of the motherboard.
- This will allow the removal of the silver handle.

Step 6



- Remove the “TALK” button to get access to remove the motherboard.

Step 7

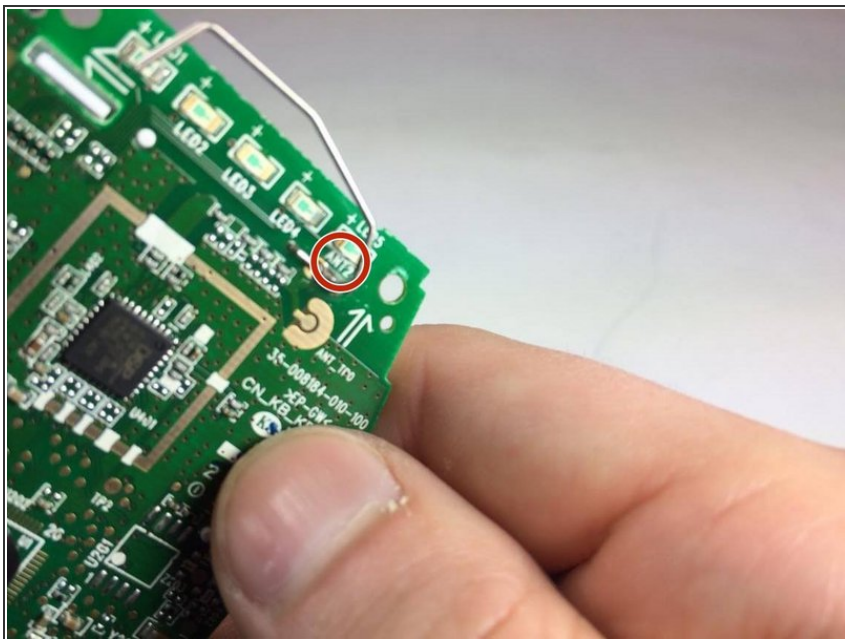


- Push down on the antenna, located on the top of the motherboard.

Step 8



- Gently remove the motherboard away from the monitor.
- ⚠ Be careful not to disconnect the red wire.

Step 9

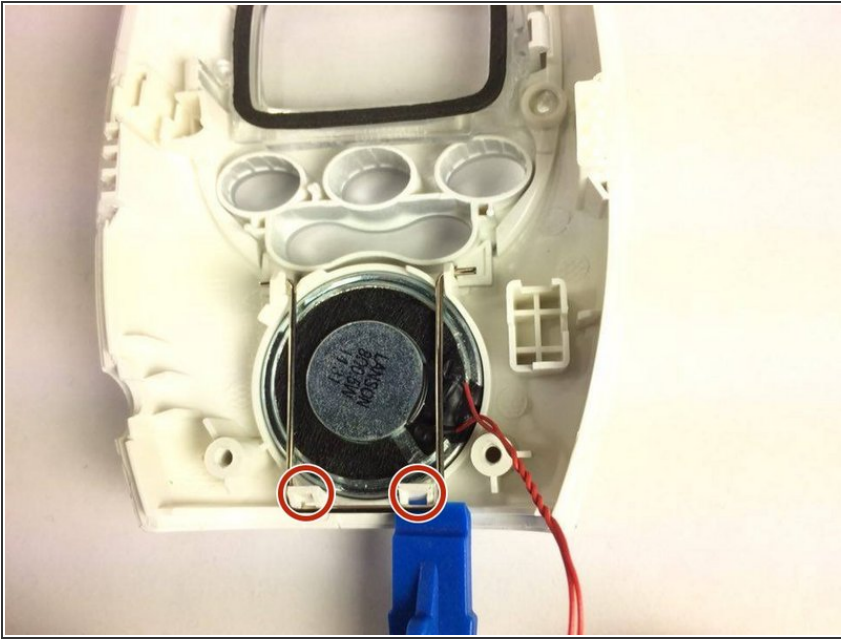

- Use the plastic spudger to push the two white plastic tabs, at the bottom of the device, up to release the metal retaining clip.

To reassemble your device, follow these instructions in reverse order.