



Removing the Back Panel

This guide will help you safely access the...

Written By: James Bailey



INTRODUCTION

This guide will help you safely access the inside of your Lenovo A8 without fear of damaging any of the components or the exterior.




TOOLS:

Metal Spudger (1)

Tweezers (1)


Phillips #000 Screwdriver (1)

Step 1 — Removing the Back Panel

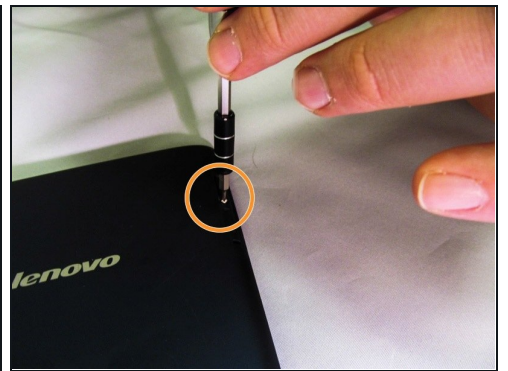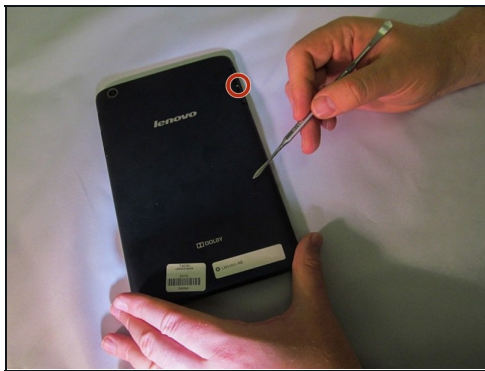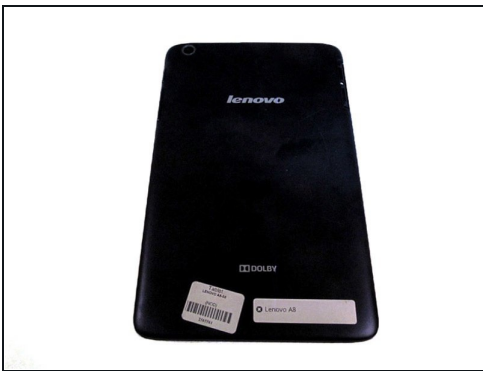

- Place the tablet face down on a soft, stable surface that will protect the screen.
- Next, Scrape off the seal over the screw in the back of the tablet with a Metal Spudger.
- Use the Phillips #000 Screwdriver to remove the M1.4 × 2.5 screw.
 - ⓘ If the seal covering the screw has already been removed, please proceed to the next step in the process.
 - ⓘ As the screw is small, you may wish to extract it using a pair of [tweezers](#).

Step 2

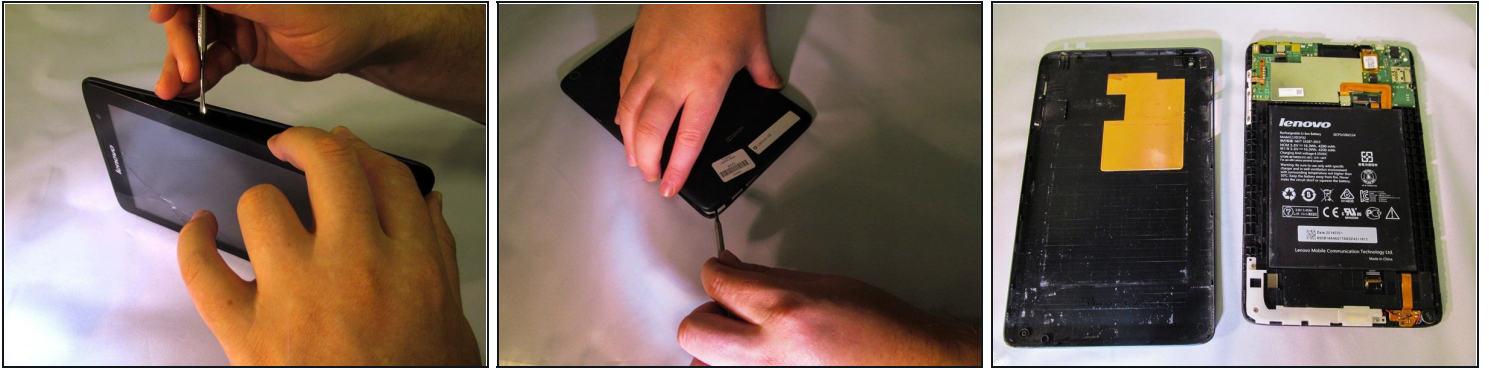

- Starting on the side, work your way around the the tablet to pop off the back cover. You will want to utilize a metal Spudger for this.
 - ① Some force may be required initially to pry the back cover off.
 - ① Note that the button tabs for this device are loose inside the case and will fall out when opening.
-

To reassemble your device, follow these instructions in reverse order.