



Lenovo Tab 2 A8 Front-Facing Camera Replacement

Front-facing camera isn't working? This guide will show you how to switch it out with a new one.

Written By: Tim Gales



INTRODUCTION

This guide illustrates the procedure to remove the front-facing camera of your device.

TOOLS:

- [Metal Spudger](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Removing the Back Panel




- Place the tablet face down on a soft, stable surface that will protect the screen.
- Next, Scrape off the seal over the screw in the back of the tablet with a Metal Spudger.
- Use the Phillips #000 Screwdriver to remove the M1.4 × 2.5 screw.
 - ⓘ If the seal covering the screw has already been removed, please proceed to the next step in the process.
 - ⓘ As the screw is small, you may wish to extract it using a pair of tweezers.

Step 2



- Starting on the side, work your way around the the tablet to pop off the back cover. You will want to utilize a metal Spudger for this.
 - ⓘ Some force may be required initially to pry the back cover off.
 - ⓘ Note that the button tabs for this device are loose inside the case and will fall out when opening.

Step 3 — Front-Facing Camera

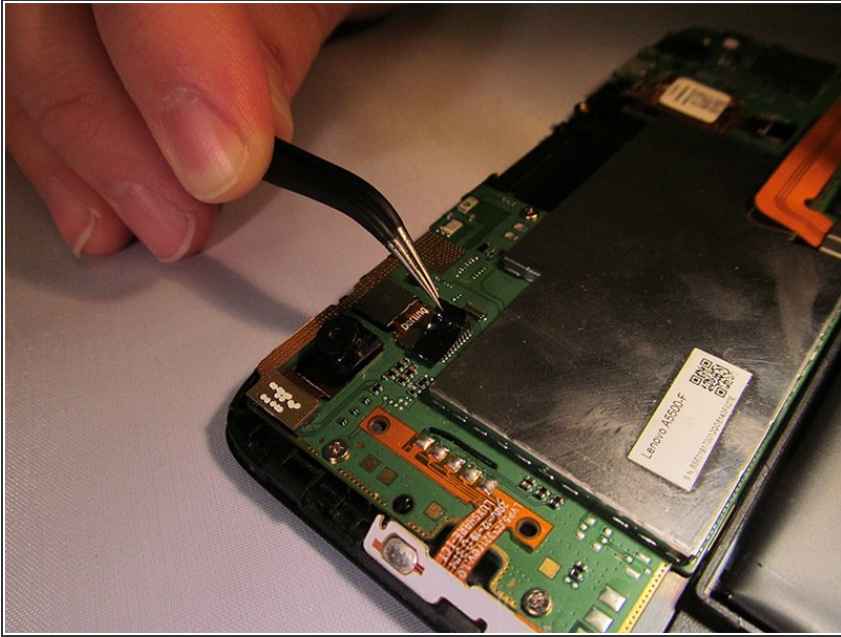

- Using tweezers, peel off the anti-static sticker from the camera connection port.


Step 4



- Lift the camera out of its socket in the motherboard. Then, using tweezers to grasp the camera connector, carefully pull the connector horizontally out of the port.

i Be aware that the camera connector will be firmly lodged in the port. When successfully removed, the top side of the port pops up.

Step 5

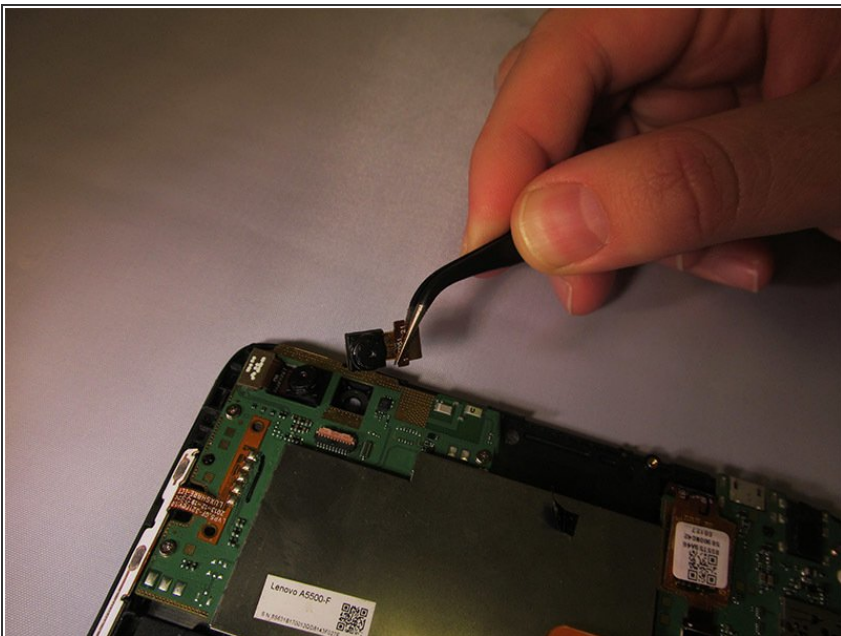

- Using tweezers to grasp the camera connector, lift the camera out of its socket.

To reassemble your device, follow these instructions in reverse order.