



# TDK Life on Record Trek Max A34 Battery Replacement

Replacing the battery of your TDK Life on Record Trek Max A34.

Written By: Kayla



---

## INTRODUCTION

If your device will not turn on after charging then your battery is is most likely defective. If this is the case, your device will require a battery replacement.

---



### TOOLS:

- [Metal Spudger](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Battery



- Flip your device upside down so the battery cover is facing upwards.
- Using the Torx T6 screwdriver, remove all seven 6 mm Torx screws that are located along the perimeter of the battery cover.

## Step 2



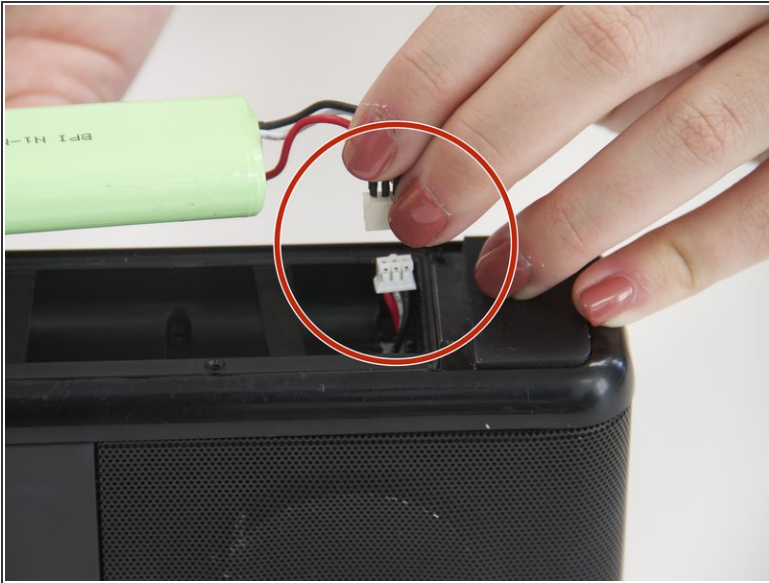
- Use the metal spudger prying tool to gently pry off the battery cover.
- The battery should now be exposed.

## Step 3





- Starting from where the wires are connected, gently pull the battery out of the device.

## Step 4



- Unplug the battery from the device by detaching the wires at the white connection box.

 Detaching the wires may require some force.

 Be careful not to rip the wires out of the device or the battery.

## Step 5



- The battery is now separated from the device and may be replaced with a new battery.

To reassemble your device, follow these instructions in reverse order.