


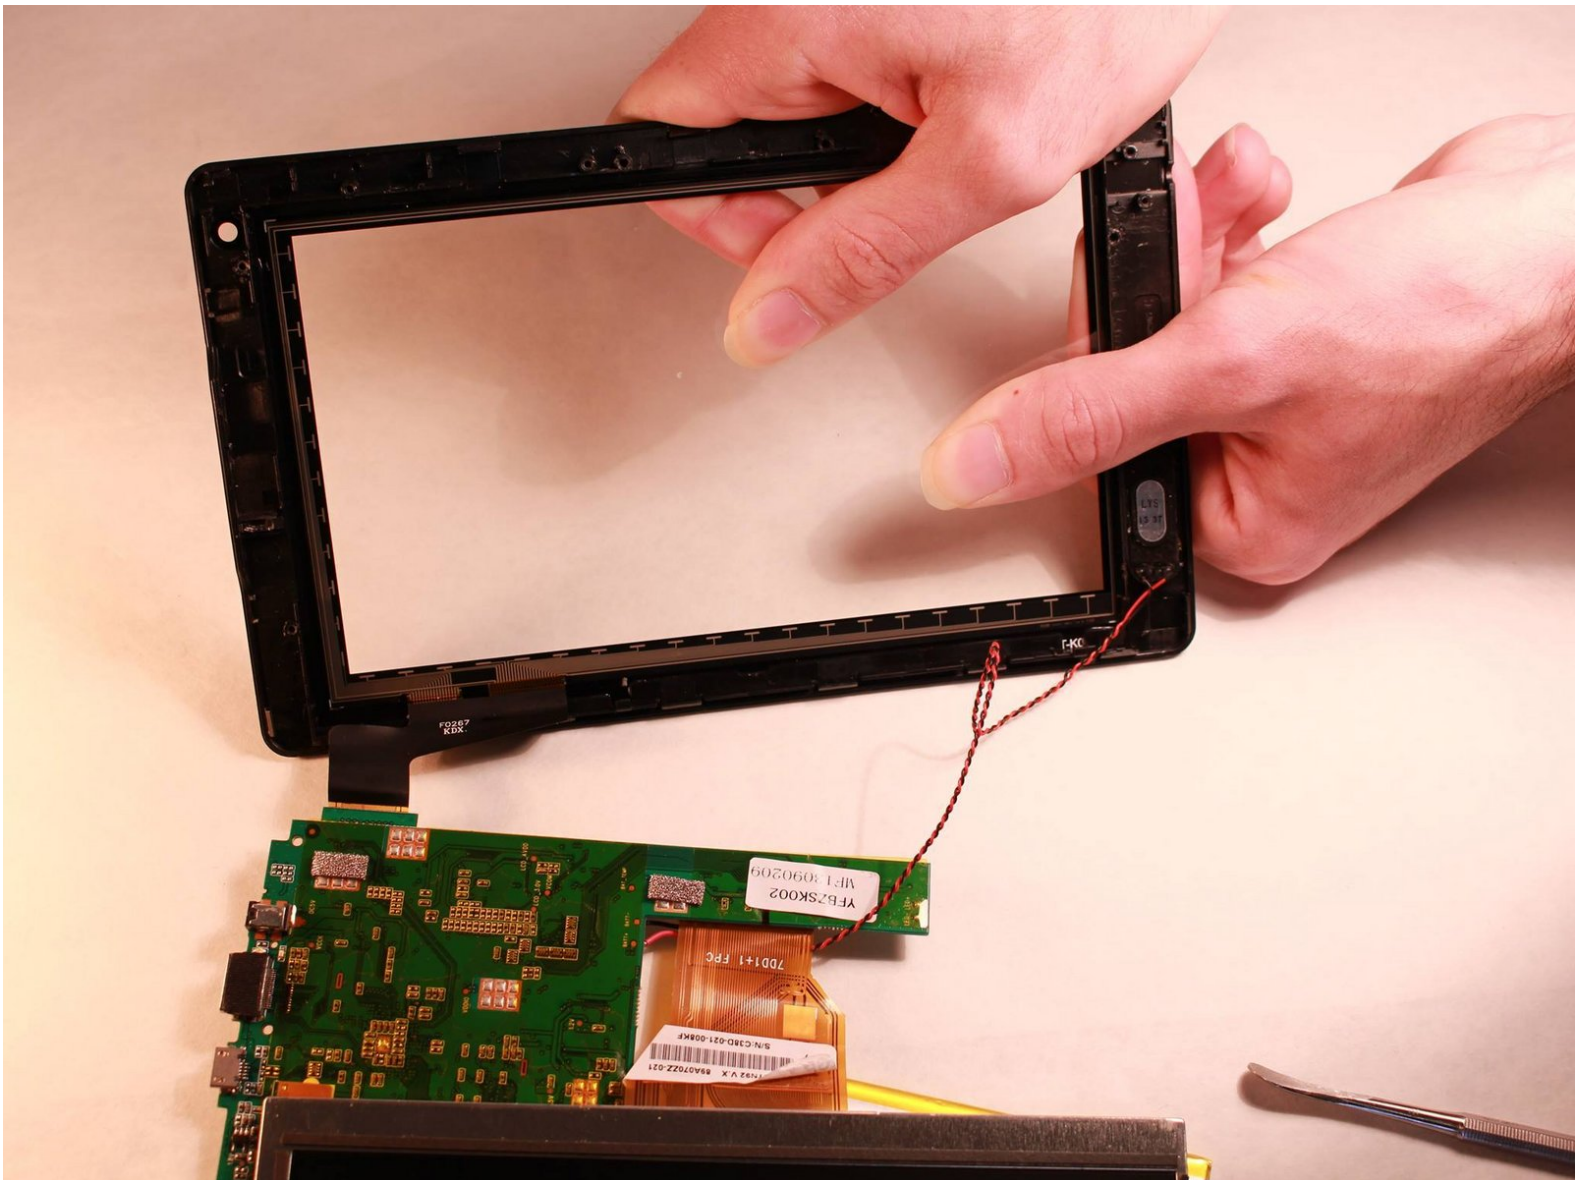

Ematic Genesis 2 Screen Replacement

Follow this guide to replace the battery in the Ematic Genesis 2 tablet.

Written By: Brandon Key



INTRODUCTION

This repair guide will teach you how to replace the battery in the Ematic Genesis 2 tablet.



TOOLS:

- [Small Phillips Head Screwdriver](#) (1)
- [Small Pointed Metal Spudger](#) (1)
- [Metal Spudger](#) (1)



PARTS:

- [Replacement Ematic Genesis 2 Screen](#) (1)

Step 1 — Screen




- With your fingers, carefully pry off the back plastic casing. Starting at the corners is usually the easiest.

Step 2




- Remove all four screws surrounding the battery with a Phillips Head Screwdriver.
- Carefully remove the battery from the device using the Metal Spudger tool to gently separate the battery by wedging it between the device and the battery.

Step 3

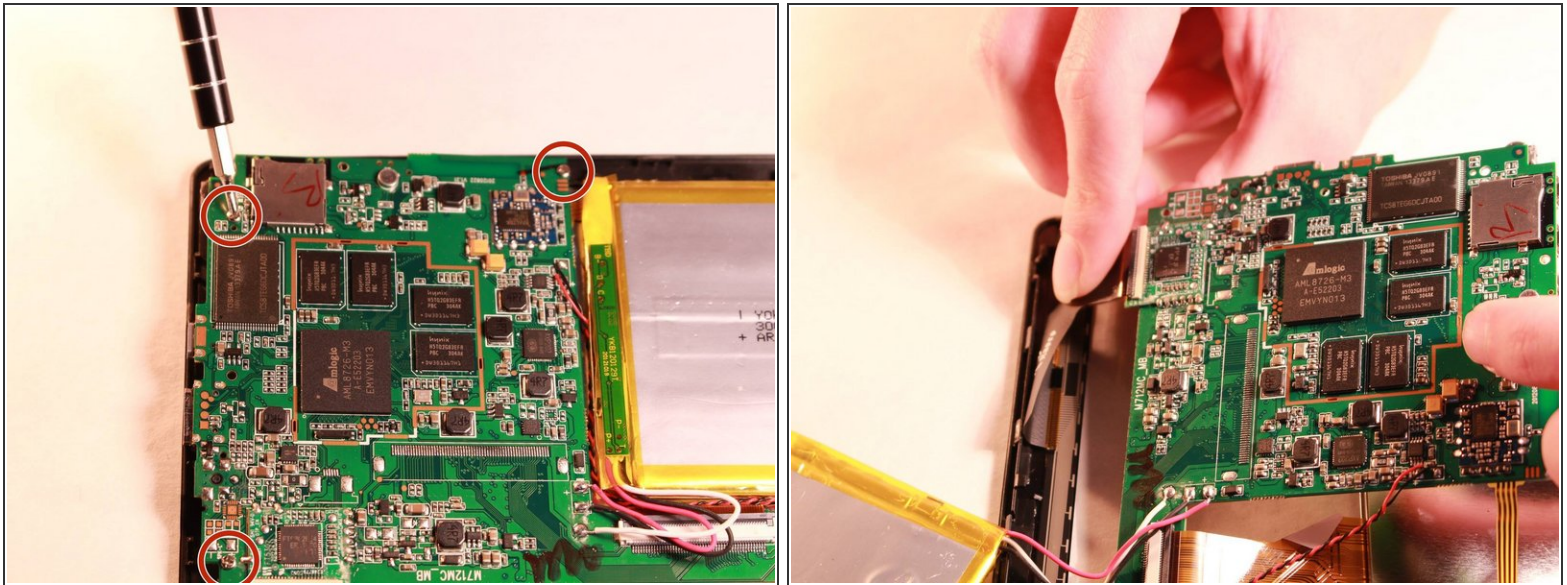


- Remove the three screws surrounding the circuit board using the Phillips Head Screwdriver.
- Remove the circuit board from the device by unclipping the copper flexible PCB ribbon cable from the circuit board.

Step 4

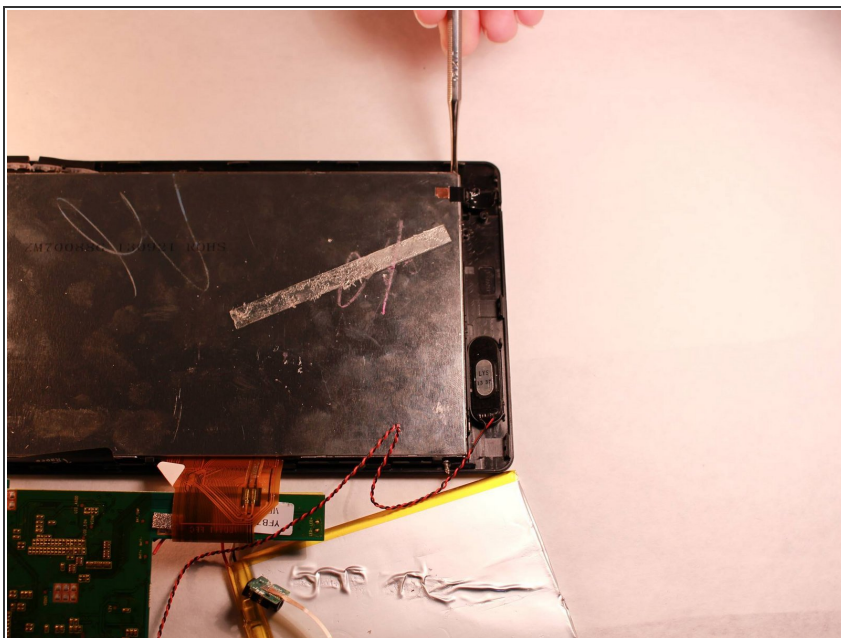

- Use the Small Pointed Metal Spudger to separate the LED screen from the front screen by gently wedging the spudger between the screen and the device.

Step 5

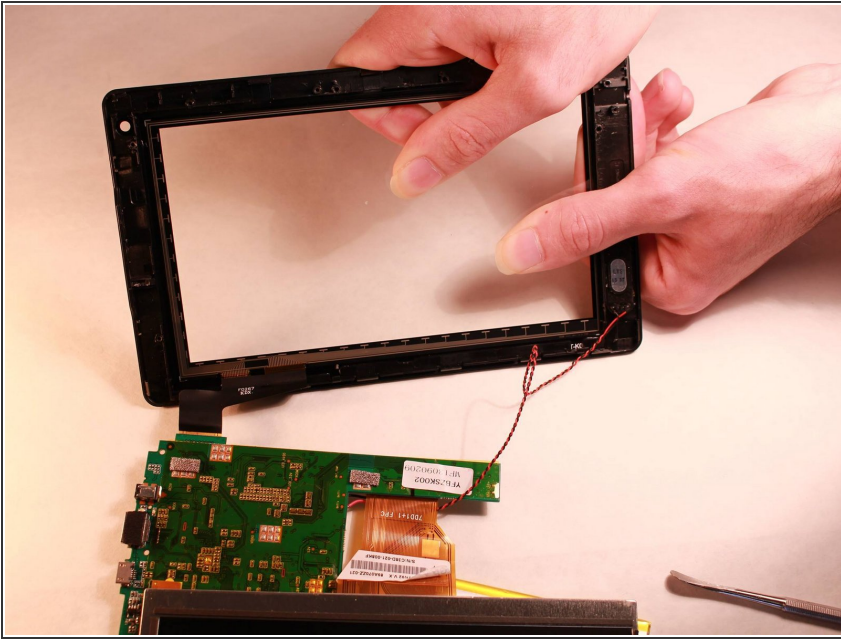

- Remove the glass from the front casing by using the metal spudger to break it free from the device. (It's held together by glue.)
- Install the new screen.

To reassemble your device, follow these instructions in reverse order.