




# HP LaserJet 1160 or 1320 Left Side Cover Replacement

Replace the left side cover of an HP LaserJet 1160 or 1320 laser printer.

Written By: jdp23

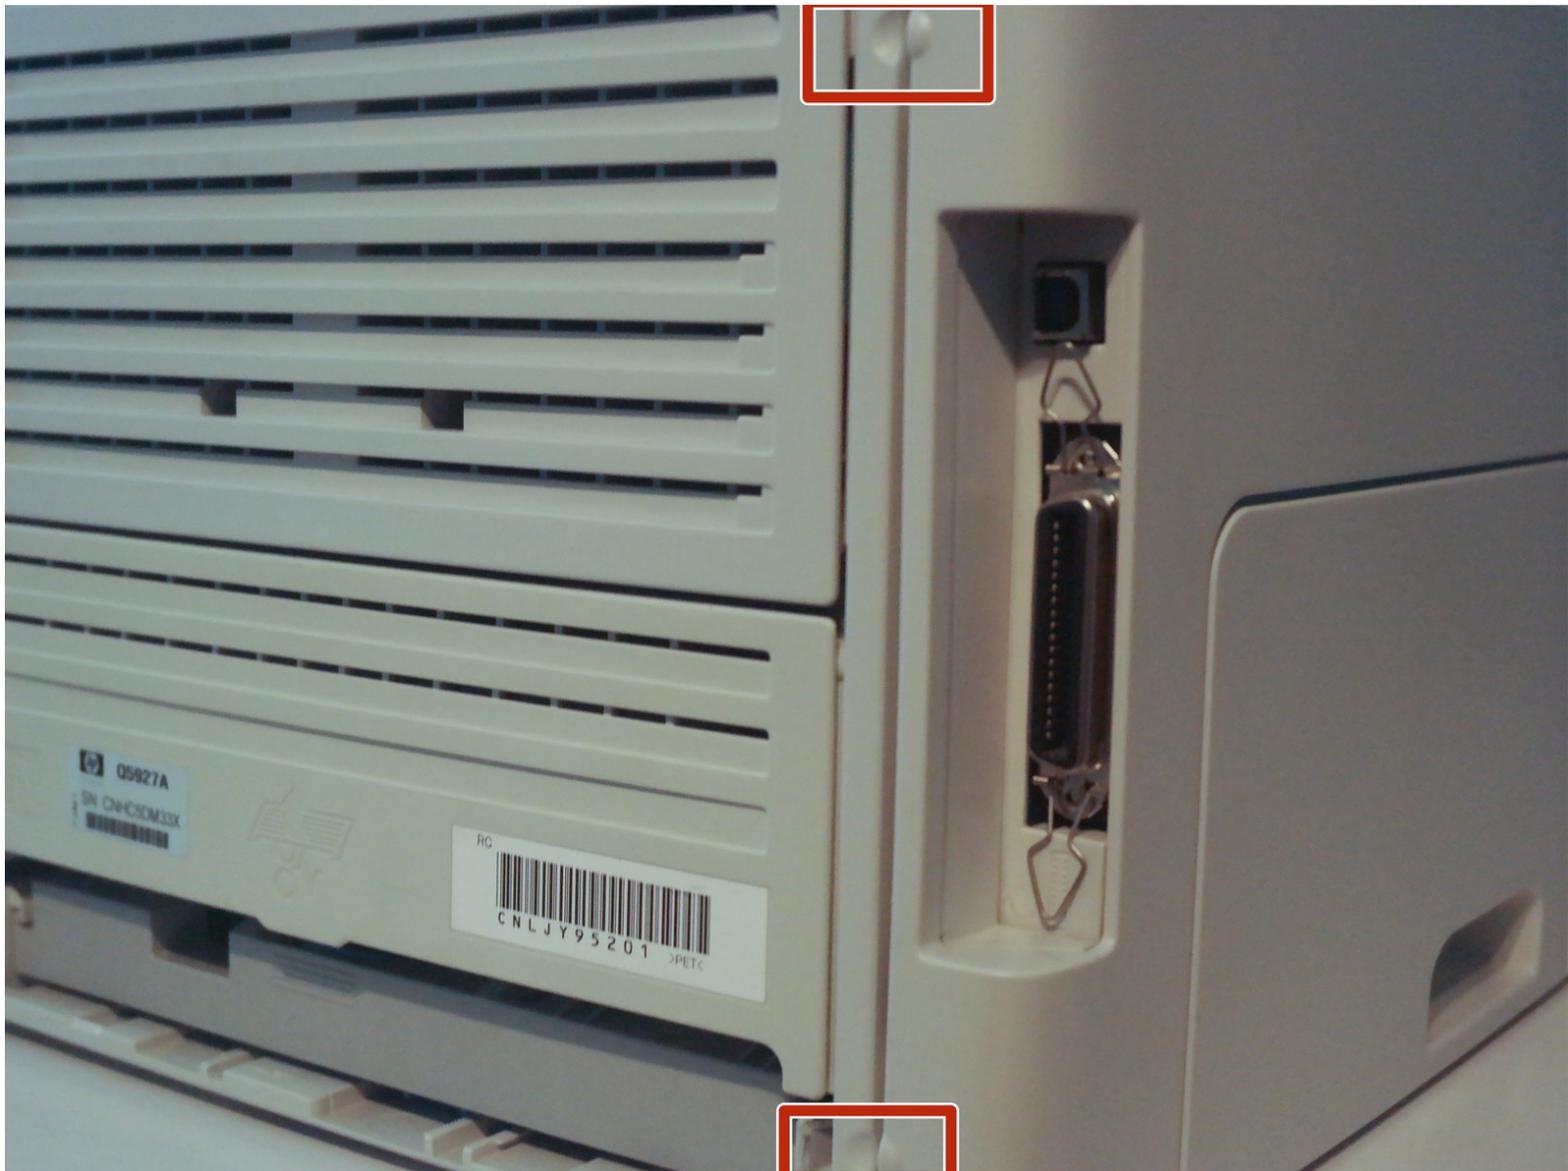



## PARTS:

- [HP LaserJet 1160 or 1320 Left Side Cover](#) (1)
-

## Step 1 — Left Side Cover



- Pull on the two tabs on the back of the printer to release the left side cover.
- Remove the cover by rotating it towards the front of the printer.

To reassemble your device, follow these instructions in reverse order.