



Repairing Sony Xperia L Volume Control Button

The guide will help you attach the detached volume control/zoom button.

Written By: Ruchita



TOOLS:


- [iFixit Opening Tools](#) (1)
-

Step 1 — Open the phone case



- The Xperia L model
- Gently open the phone case.
- The phone body, back case and the detached volume control button.

Step 2 — Adjust the plastic notches using the plastic opening tools.

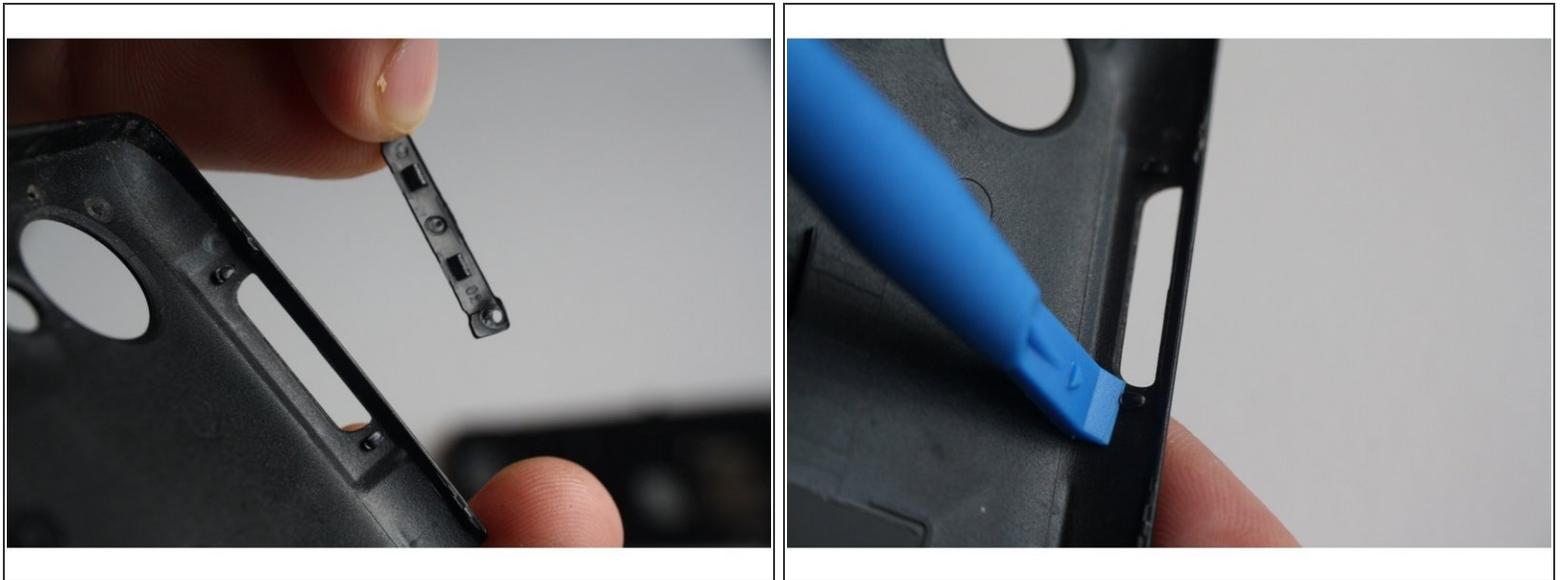

- Using the plastic opening tools in the iFixit kit, pull up the flattened plastic notches that will hold the volume control button in place.
- You can see the notches on the back case and the holes in the volume control button that snap fit in them.

Step 3 — Place the button and snap it to the back case using the raised notches.

- Place the volume control button back in the slot.
- Adjust the holes on the button in a way that they snap to the raised notches on the back panel.
- Press down the raised plastic notches using the back of the plastic opening tool from the kit.

Step 4 — Snap the back case to the phone body.

- The volume control button is now attached in its slot.
- Reassemble the phone back by snapping the back case to the phone body.
- The volume control/zoom button is good to use!

To reassemble your device, follow these instructions in reverse order.