




Hipstreet Titan Plus Camera Replacement

If your camera is not working, this guide will walk you through the process of replacing it in this device.

Written By: Kari Cannon

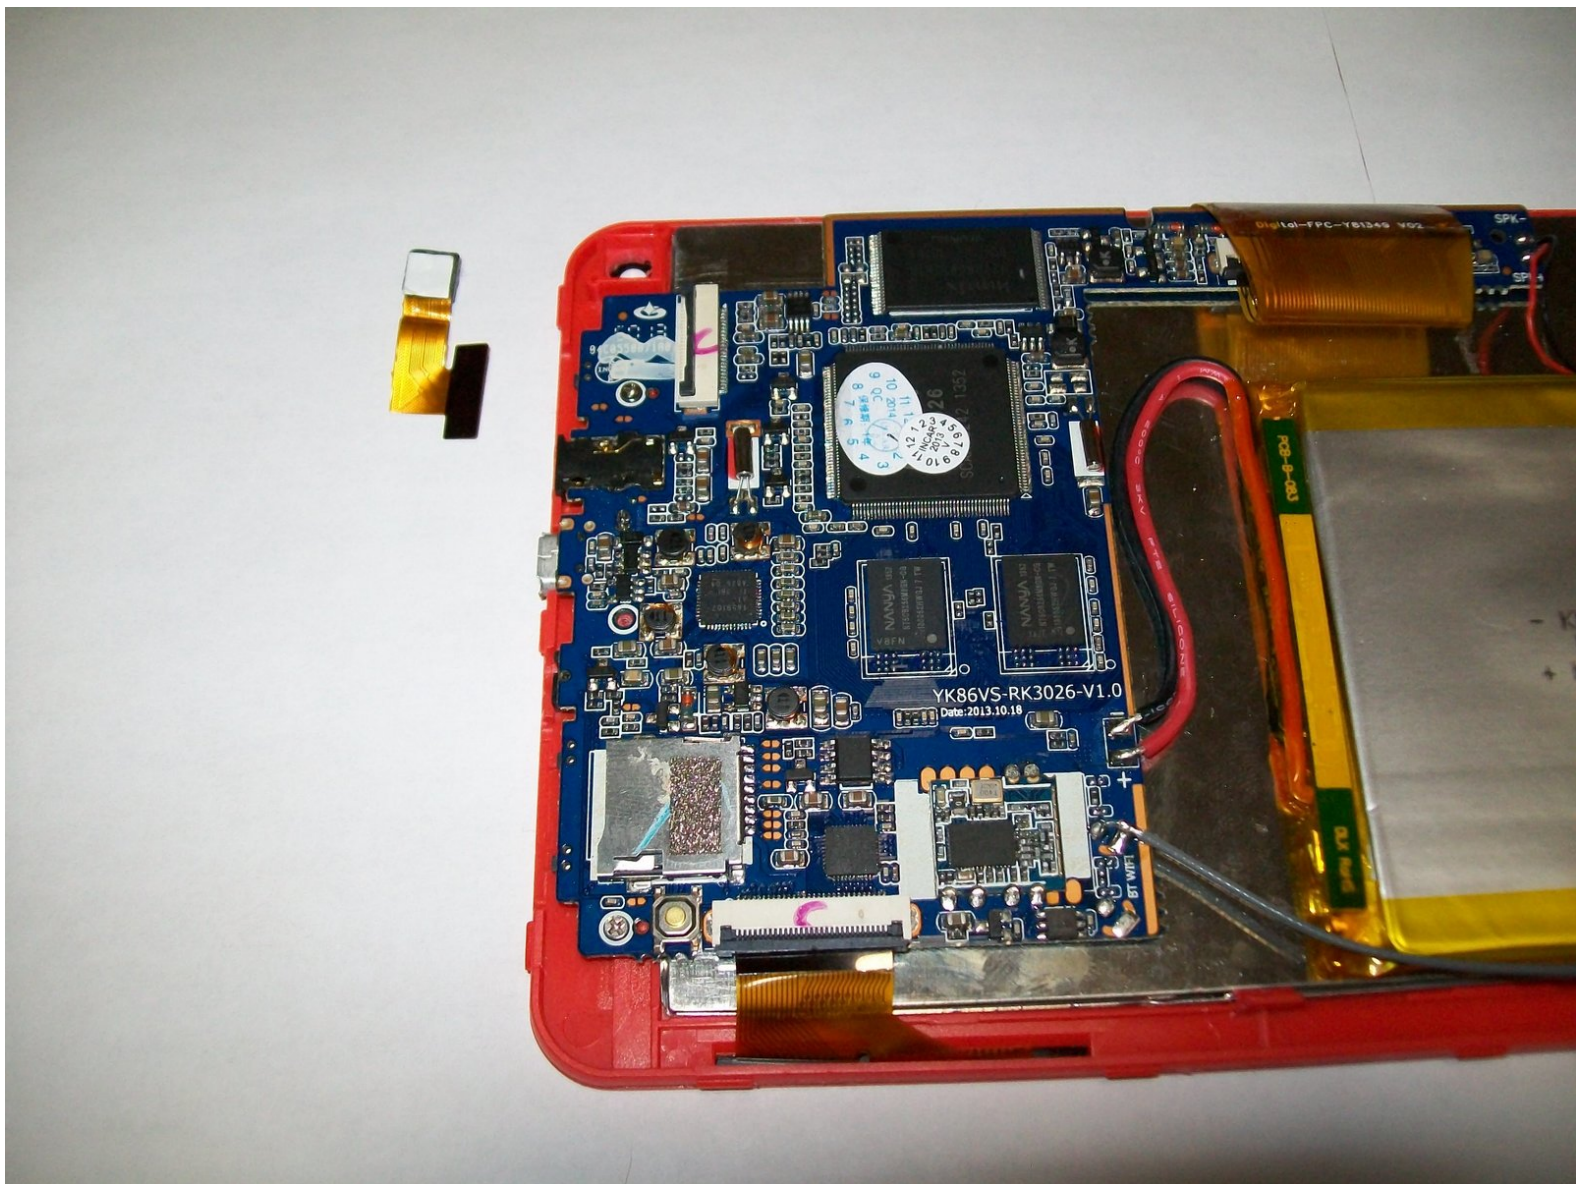

INTRODUCTION


This camera replacement guide demonstrates how to remove the necessary components to access the camera. Replacing the camera is a simple three step process using the necessary tools.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Camera

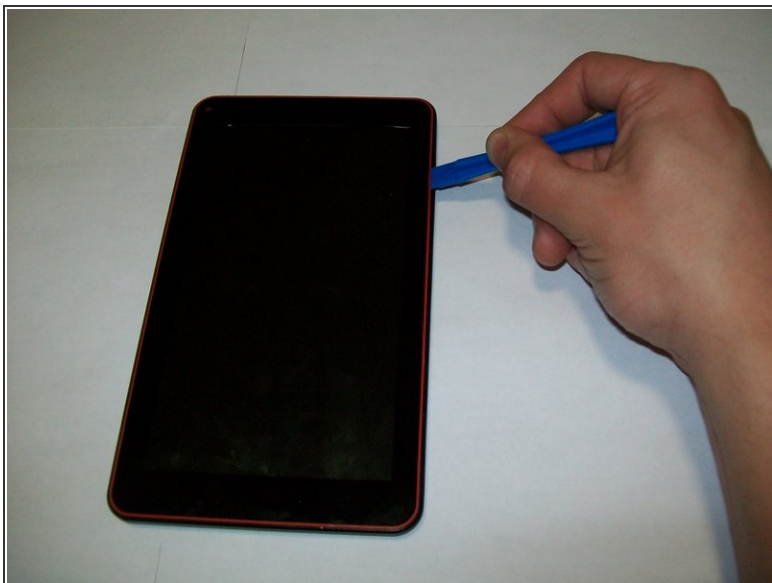



- Use the plastic opening tools to pry open the back case of the device.

Step 2



- Use tweezers to remove the black adhesive strips from the wires. Set aside

Step 3

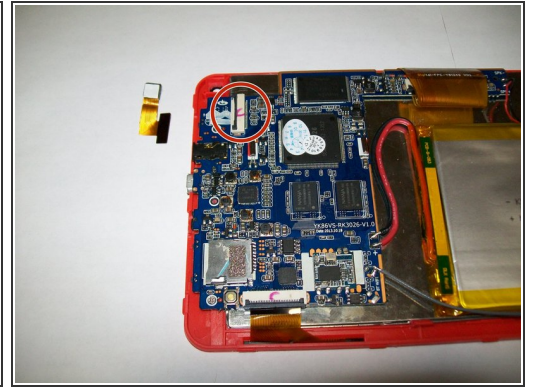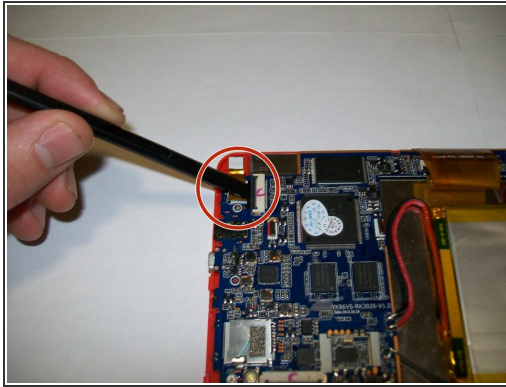

- Use a spudger to undo the black clip connecting the camera wires to the motherboard.

To reassemble your device, follow these instructions in reverse order.