



Coolpix S01 USB Cover Replacement

Written By: Fernando Ochoa



TOOLS:

[iFixit Opening Tool](#) (1)

[Precision Tweezers Set](#) (1)


[Phillips #000 Screwdriver](#) (1)

Step 1 — USB Cover



- First make sure the camera is powered off.
- Use the Hex and PH000 tool to remove the 2 mm screw from the left side of the camera.
- Next remove the 2 mm screw from the right side of the camera.


Step 2

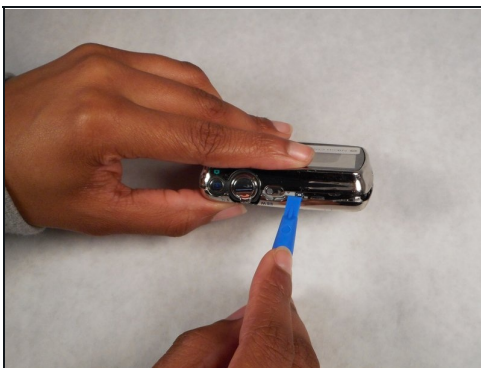

- Remove the 3mm screw from the bottom of the camera.
- Once you have the 2mm and 3mm screws out, gently pull the sides up with the smallest plastic opening tool. This will reveal the inside of the camera.

 Be sure to remove the battery before continuing your repair.

Step 3

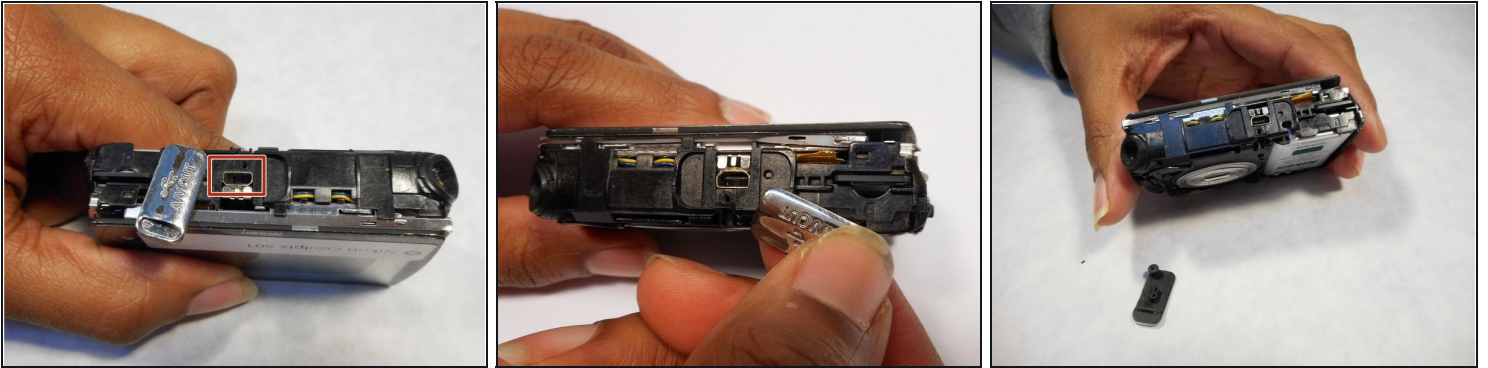

- On the bottom of the camera, locate the USB port.
- Gently slide the USB cover off of the camera with your fingers or [tweezers](#).
- You can replace the USB cover by purchasing one from a local electronics store or online at [iFixit.com](https://www.ifixit.com).

To reassemble your device, follow these instructions in reverse order.