



JBL Charge 2 Plus Passive Radiators Replacement

This guide will tell you on how to replace the passive radiators on the JBL Charge 2+.

Written By: John Reynolds



 **TOOLS:**

- [Metal Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Passive Radiators




- Starting from the front side bottom left corner, use the nylon or metal spudger to lift the grille up from each of the four corners.
- Follow the previous instruction to remove the back grille.

Step 2



- Unscrew the two .5 mm screws that hold the sub woofer in place.
- Repeat the last step for the two screws on the back side.

Step 3

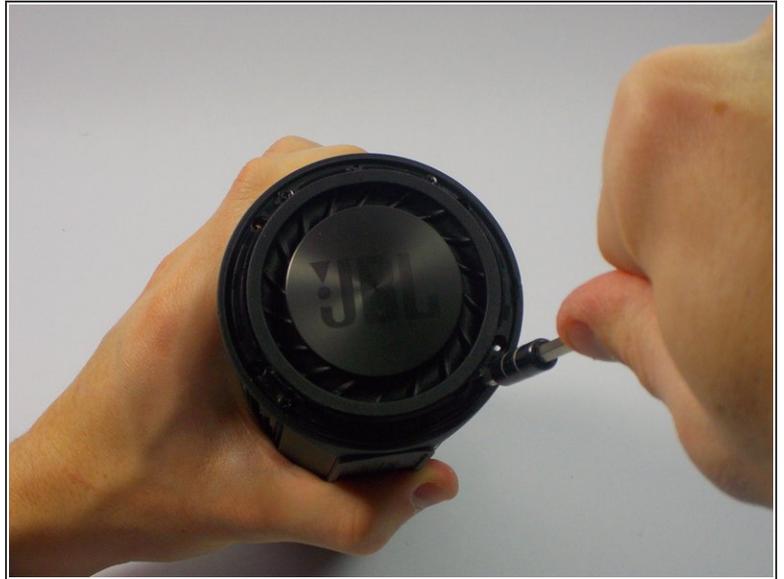

- Remove the four screws that hold the passive radiator in place

Step 4



- Pop the Passive Radiator off.

Step 5



- Repeat Step 2, 3 and 4 for the other passive radiator.

To reassemble your device, follow these instructions in reverse order.