



HTC Desire Battery Replacement

Replace non functioning battery in your HTC Desire.

Written By: William Gildehaus



INTRODUCTION

Follow this guide to replace the battery in your HTC Desire



TOOLS:

- [Spudger](#) (1)



PARTS:


- [HTC BTR6275B Battery](#) (1)
-

Step 1 — Battery



- Insert flat end of spudger into slot on the top of phone to pry off the back plate.

Step 2

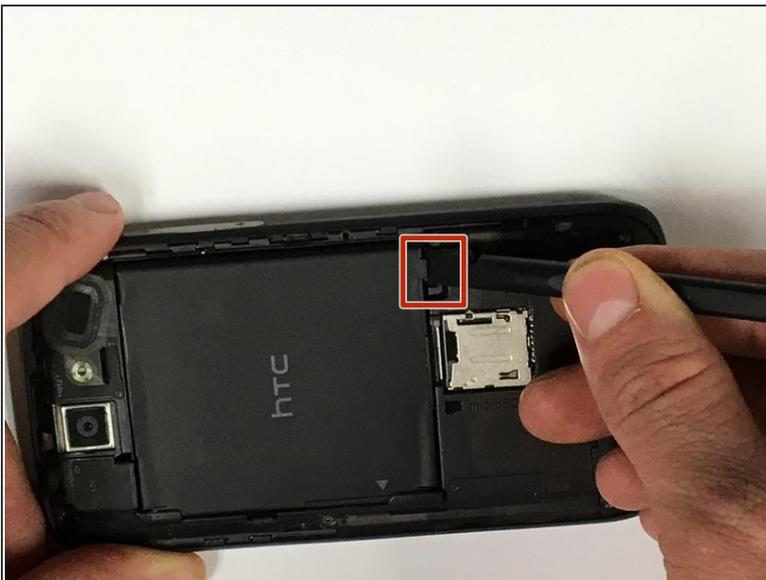

- Use flat edge of spudger to lift the bottom right corner of the battery.
- Lift the battery out of the phone.

To reassemble your device, follow these instructions in reverse order. Make sure the the arrow on the battery is pointing to the bottom left when inserting a new one.