


Fan Replacement

Written By: Felice Suglia

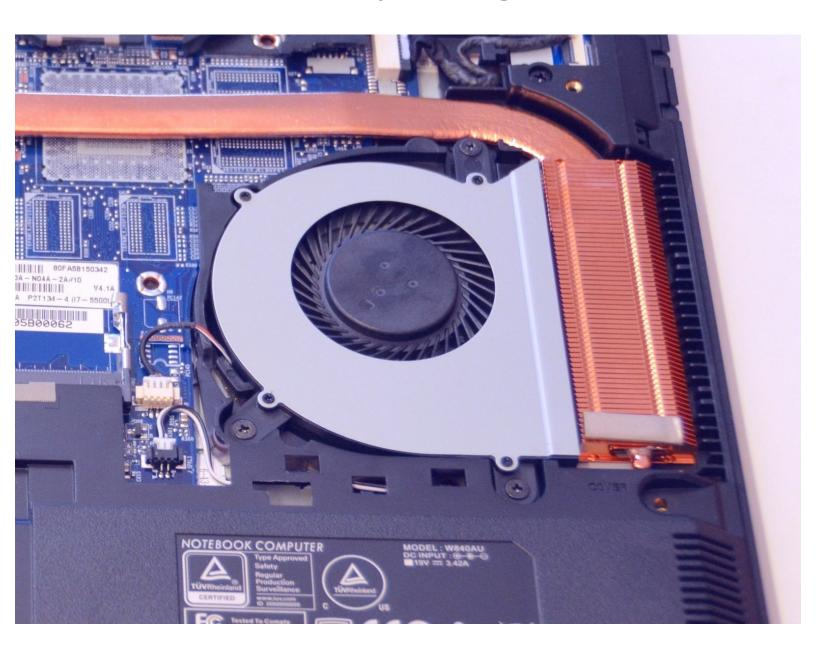



• Phillips #0 Screwdriver (1)



PARTS:

- New Item (1)

Step 1 — Battery







- Unlock the battery latch on the right.
- Unlock the battery lock on the left.
- Remove the battery pack from its slot.

Step 2 — Access to Components 2








- Using the Philips # 0 screwdriver, unscrew the 2 screws of the top cover
- Check the marks indicating the direction in which the cover must be removed.
- Remove the bottom cover by removing it in the direction of the markers.

Step 3

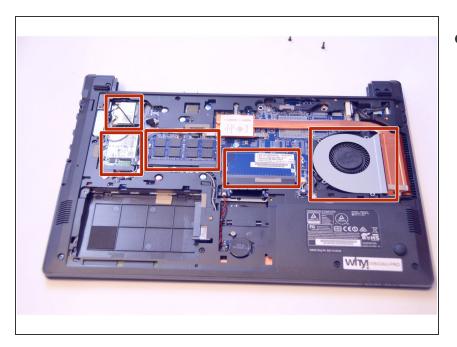

 Then appear the other components of the Laptop.

Step 4 — Fan







- Here is the fan.
- Disconnect the power cable from this one.
- Unscrew the screws that hold it in place.

Step 5



Gently lift the fan out of its slot.

To reassemble your device follow the following instructions in reverse order