


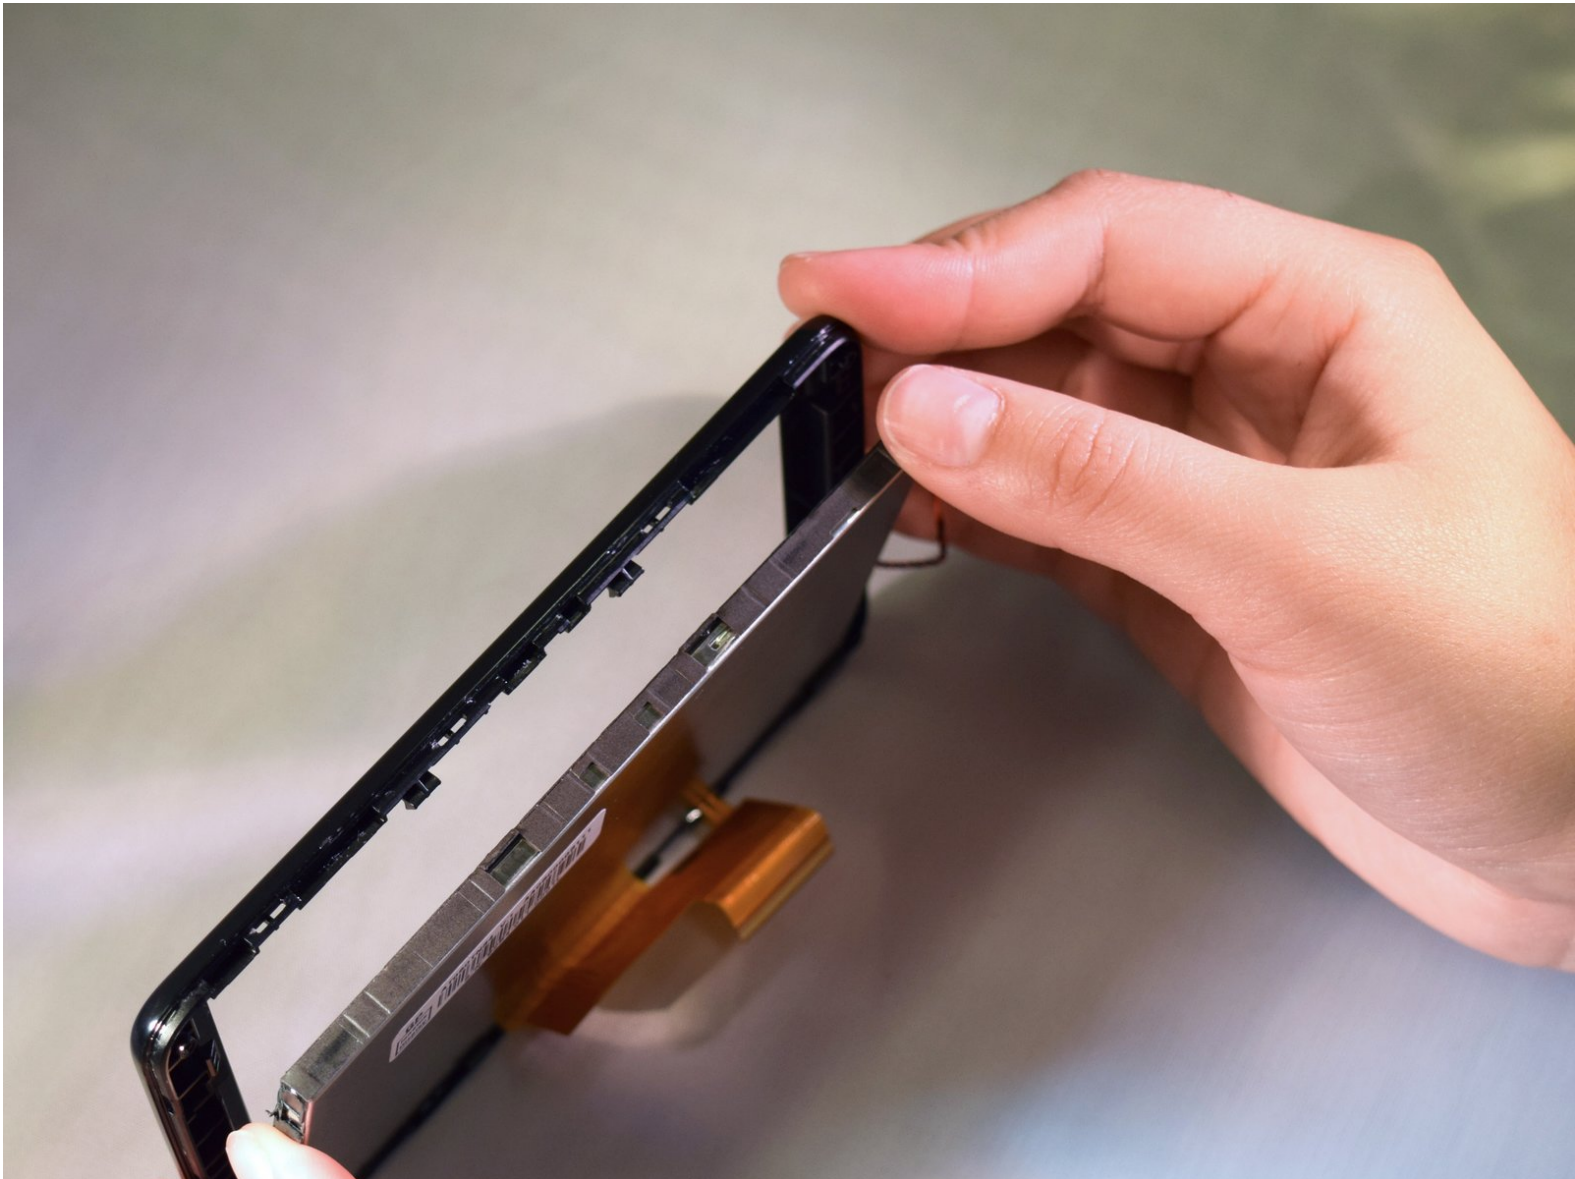

Garmin Nuvi 2595LMT LCD Screen Replacement

This guide will walk you through replacing the LCD Screen of your Garmin Nuvi 2595LMT.

Written By: Taylor DeWitt



INTRODUCTION

Use this guide to replace the LCD Screen of your Garmin Nuvi 2595LMT GPS.



TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:


- [Replacement Garmin Nuvi 2595LMT LCD Screen](#) (1)

Step 1 — Garmin Nuvi 2595LMT Back Cover Replacement




- Place the device on the workspace so the screen is facing downward.

Step 2

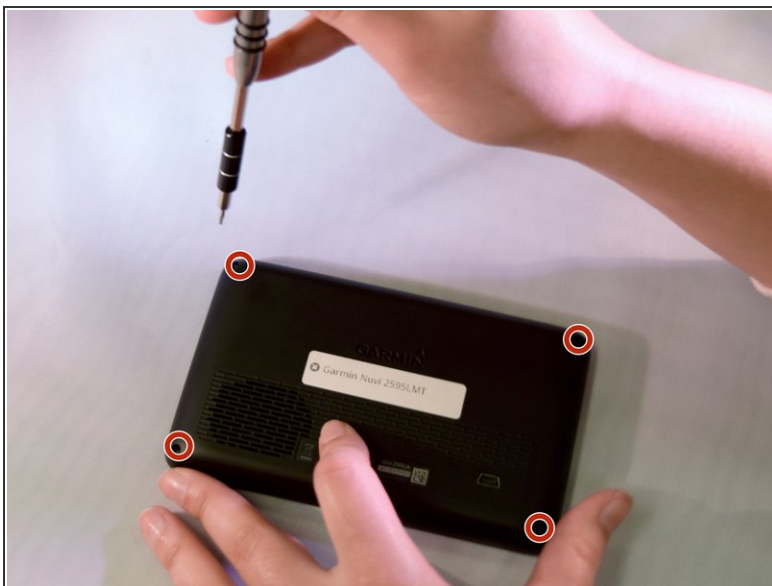


- Using the t5 screwdriver from the iFixit Pro Tool Kit, remove all four 5.6mm screws placing them safely on the table.

Step 3

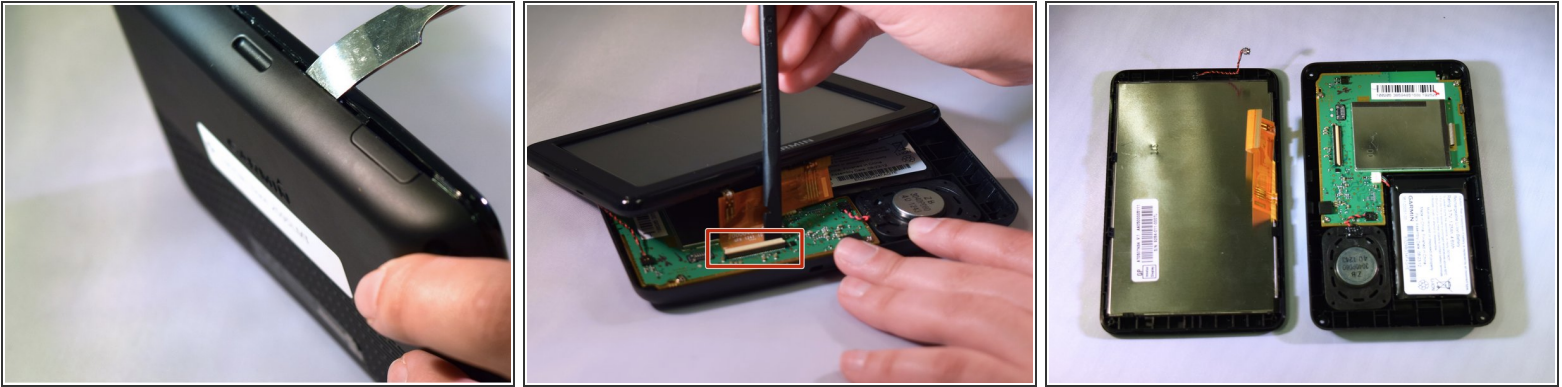

- Grab a spudger from tool kit.
- Pry open sides of Nuvi gently with spudger (do not rip apart).
- Use plastic opening tool to pry ribbon slowly from white plastic bar.
- Separate the two pieces and place them on the table

Step 4 — LCD Screen

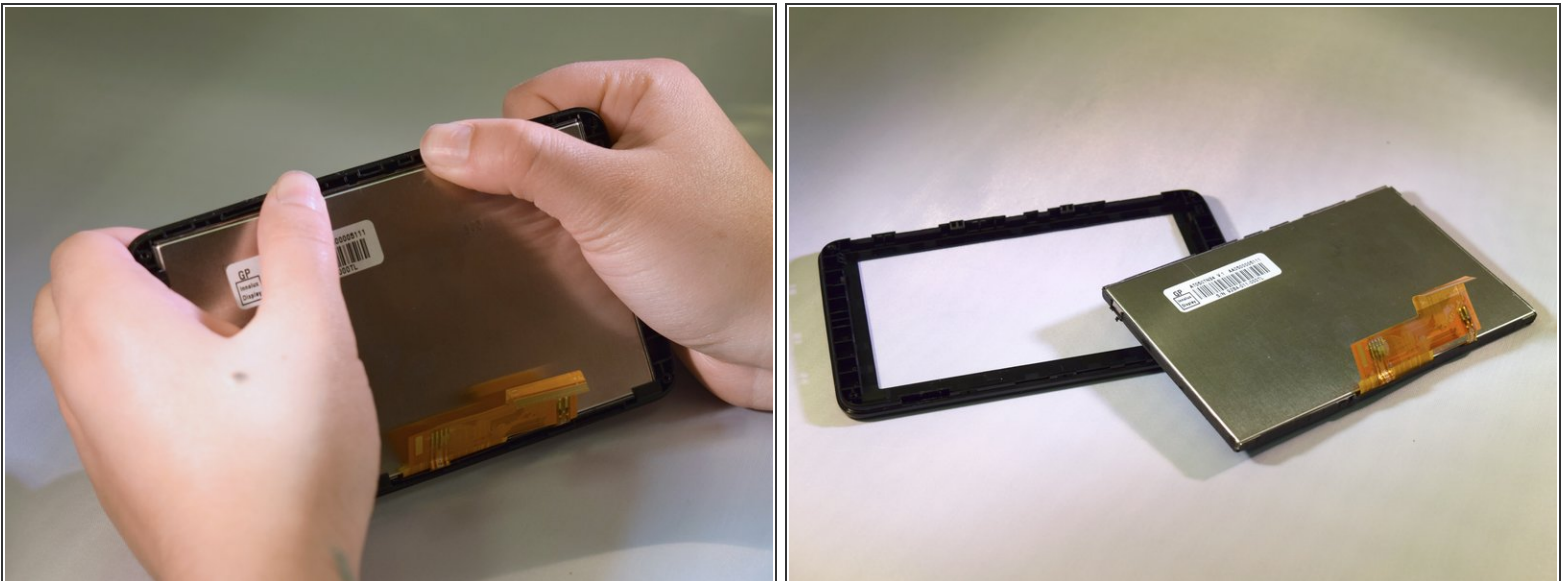

- Grabbing the top half of the Nuvi, remove the screen from the tabs holding it in place using thumbs.
- Place screen on table.

Step 5



- Place new screen in proper position, with the ribbon facing downward.

To reassemble your device, follow these instructions in reverse order.