


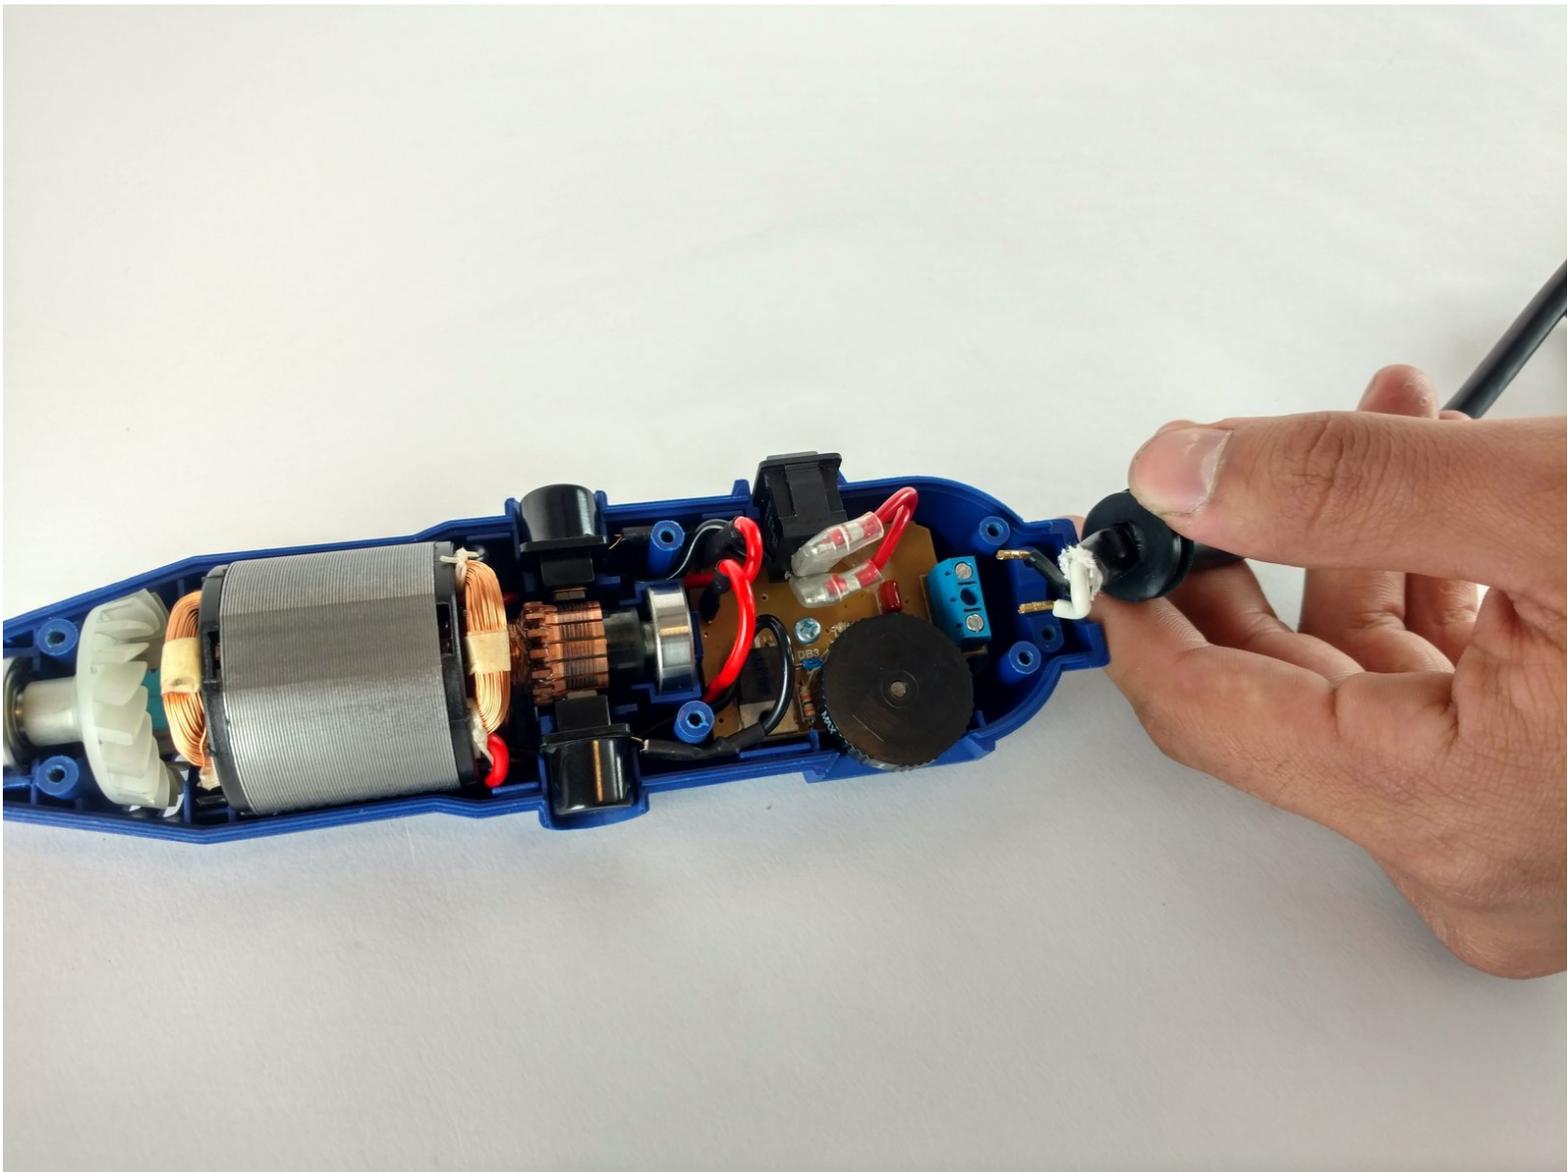

Wen 2307 Power Cable Replacement

Replace the main power cable when it is damaged.

Written By: Sergio Palacio



INTRODUCTION

If your device is not powering on your power cable may be damaged. If it needs to be replaced this guide will show you how.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-

Step 1 — Front Panel



- Unscrew the locking sleeve.

Step 2



- Remove the hanging clip.

Step 3




- Unscrew the six 8mm PH2 screws.

Step 4




- While pressing the spindle lock button, unscrew the collet nut and remove it along with the brass collet.

Step 5

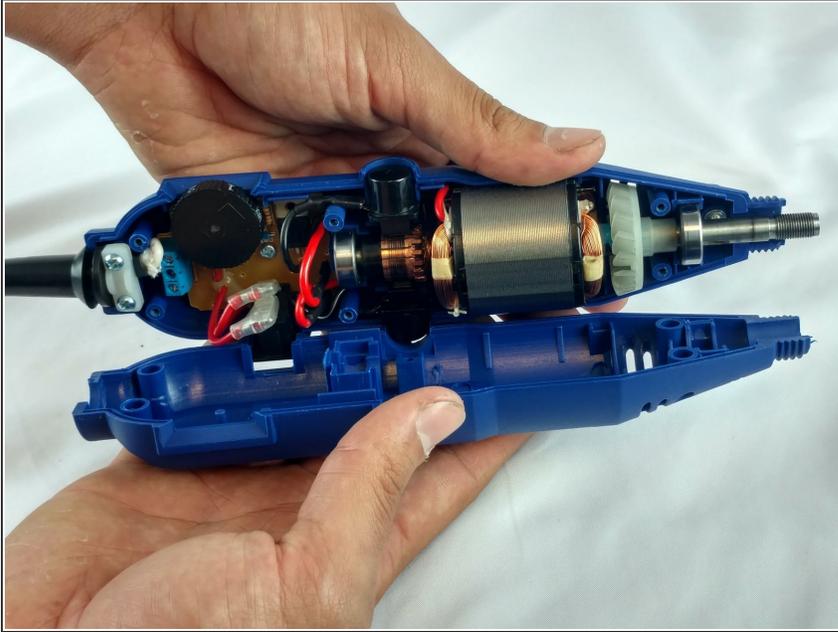


- To remove the front panel, pry the device apart while holding the device with the other hand.
- ⓘ The front panel should come out easily.

Step 6 — Power Cable

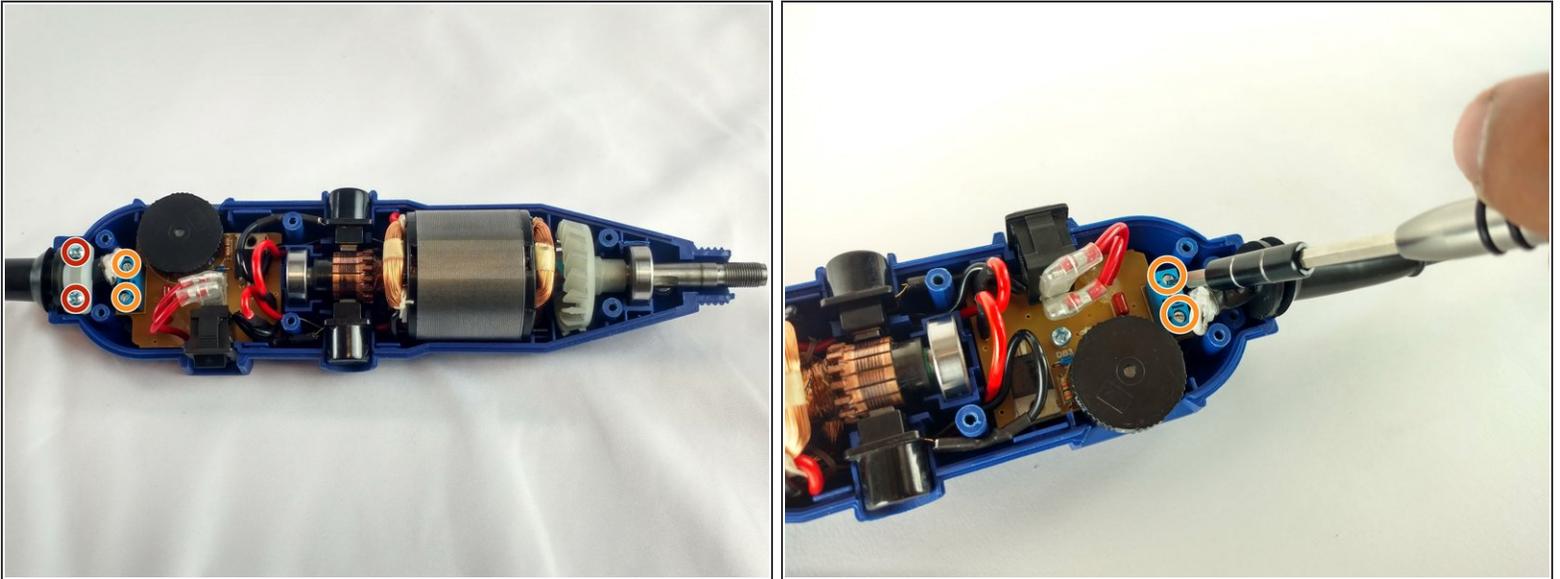


- Identify the screws.
 - Unscrew the two 3mm phillips PH2.
 - ⓘ Don't forget to put them appart from the ones unscrewed before.
 - ⓘ Don't forget to put them appart from the ones unscrewed before.
 - Phillips PH2
 - Flathead 2.5mm

Step 7

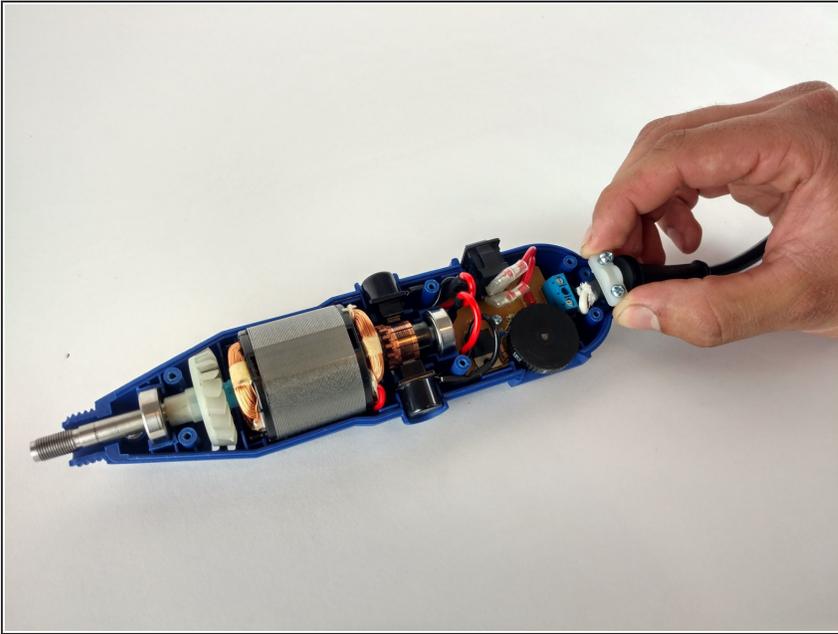


- Remove the PCB carefully.

Step 8

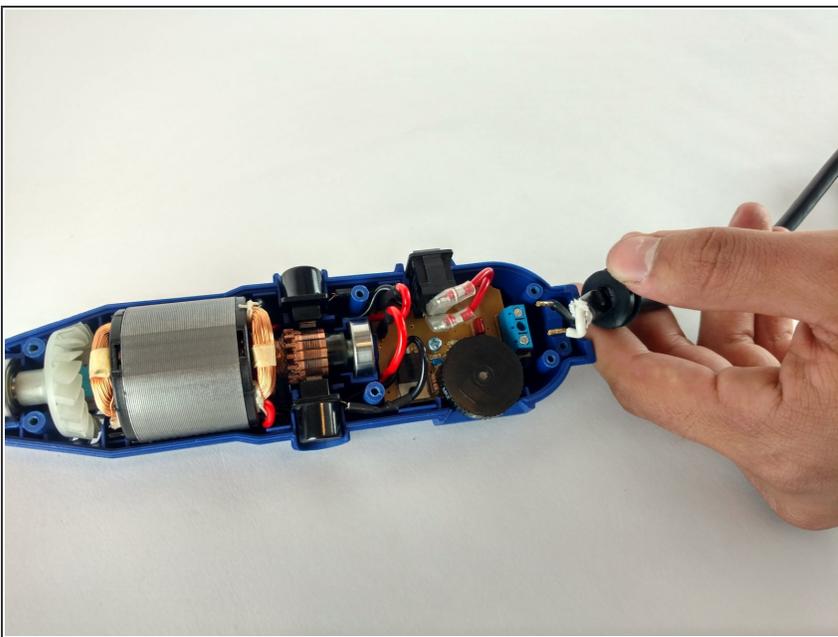

- Pull out the power cable connectors.

Step 9

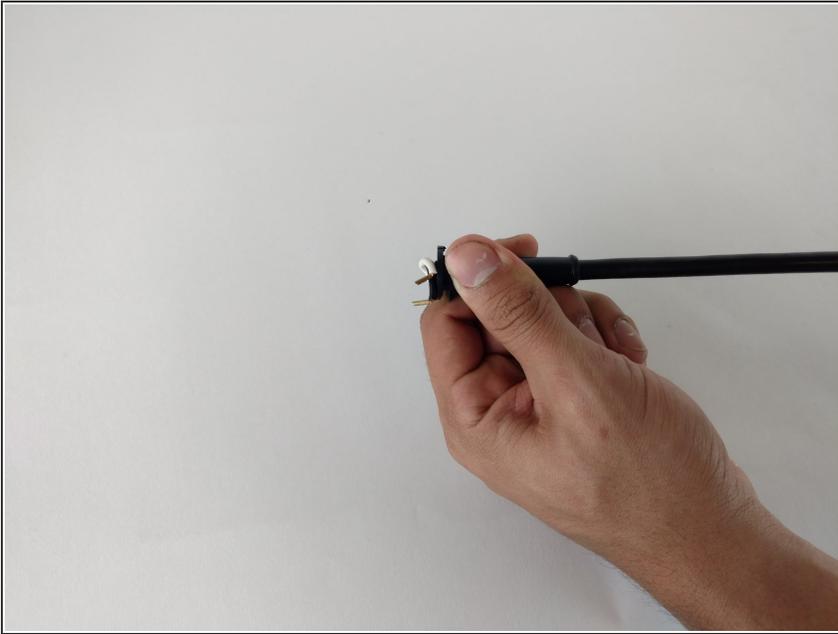

- Pull out the cord sleeve for the new cable replacement.

To reassemble your device, follow these instructions in reverse order.