




# VTech CS6719-2 Circuit Board Replacement

This is a prerequisite guide for taking the back of the phone as well as the circuit board.

Written By: Benjamin Field

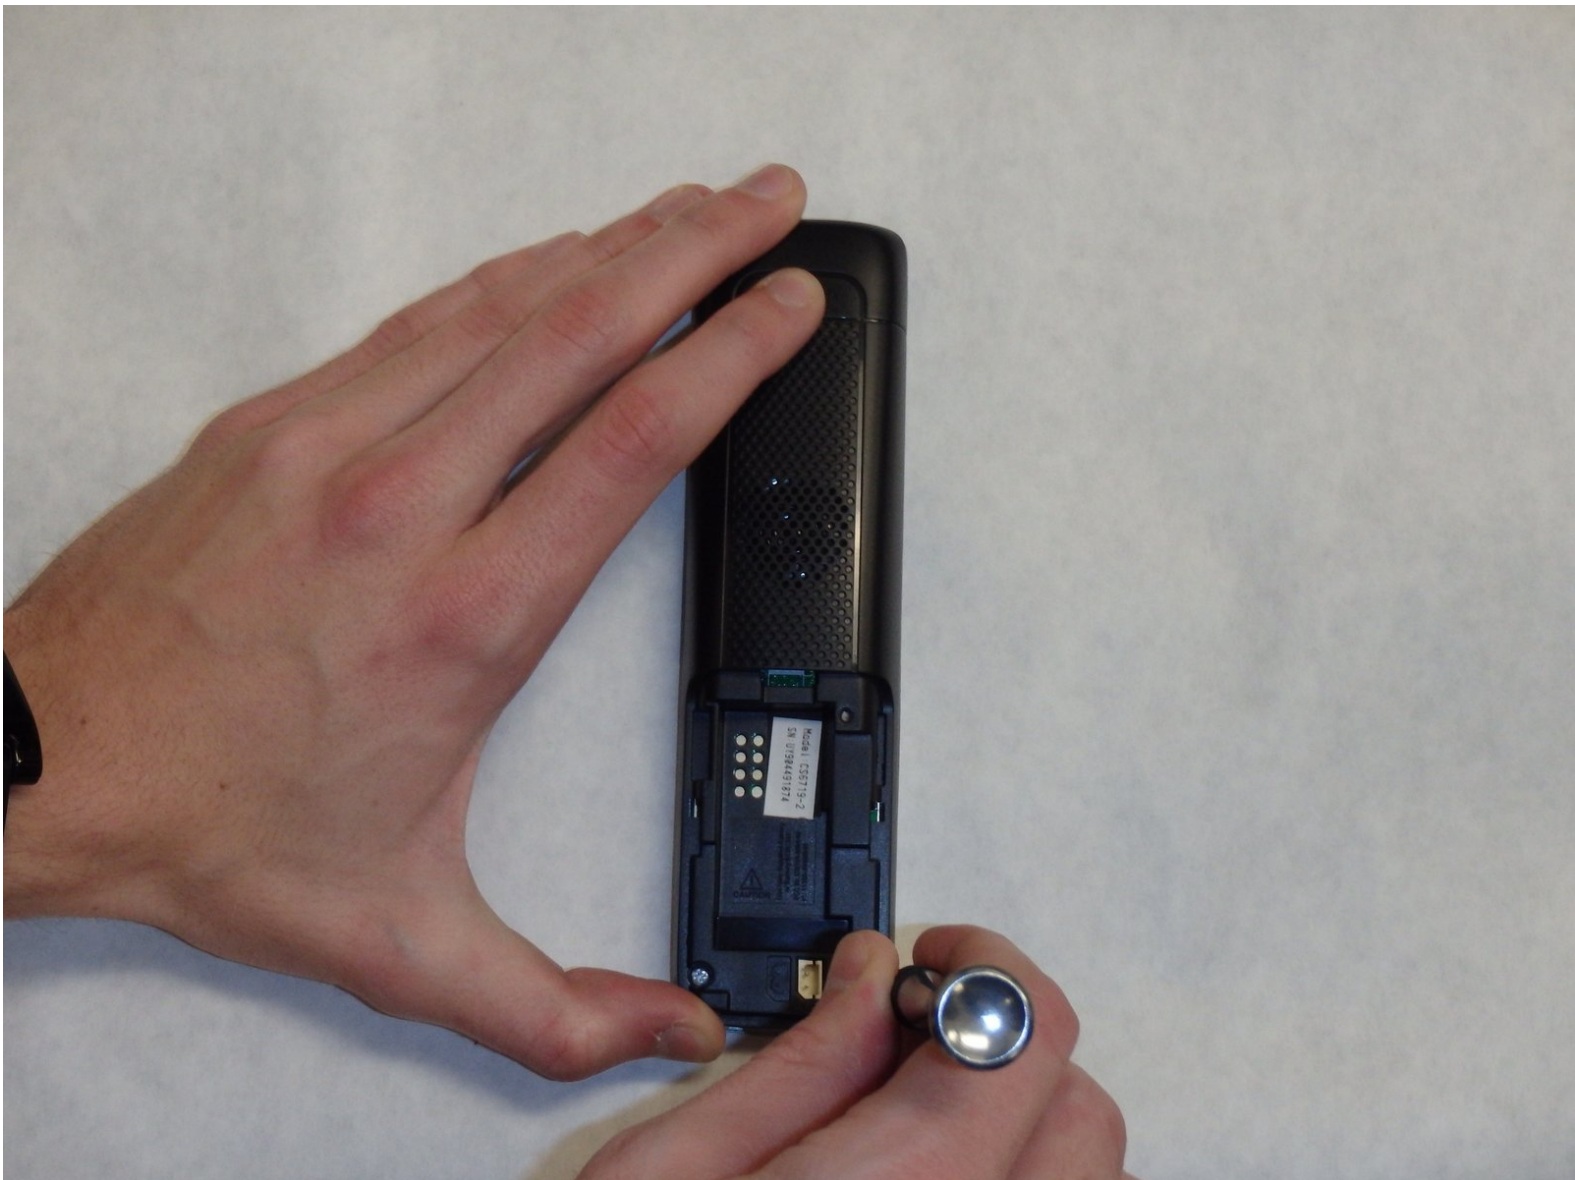

## INTRODUCTION

During this guide, the back of the phone will be taken off by using the spudger. Then the circuit board will be detached by unscrewing two screws.



### TOOLS:


- [Heavy-Duty Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery




- Push down on the battery cover in the direction of the arrow located on the back of the phone.

## Step 2

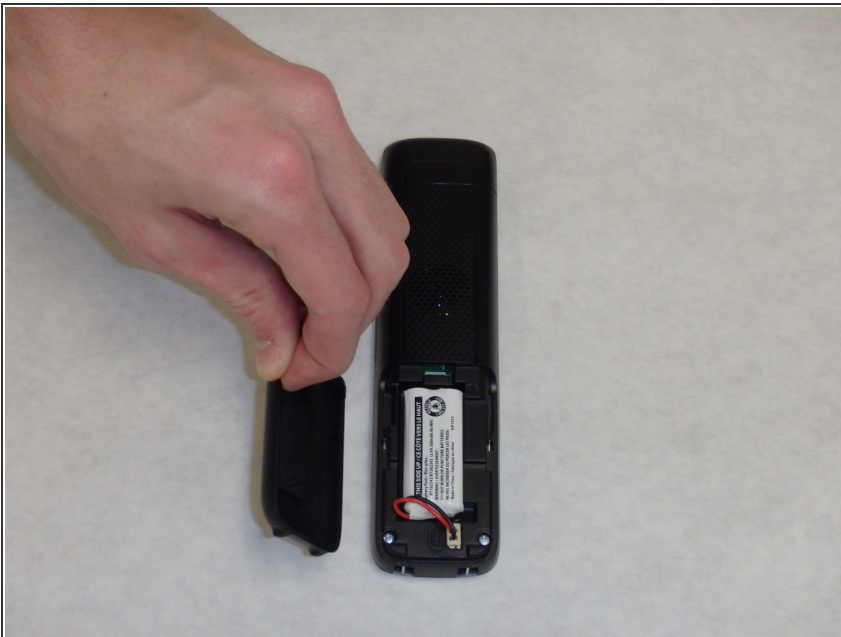


- Pull the battery cover off of the back of the phone.

## Step 3

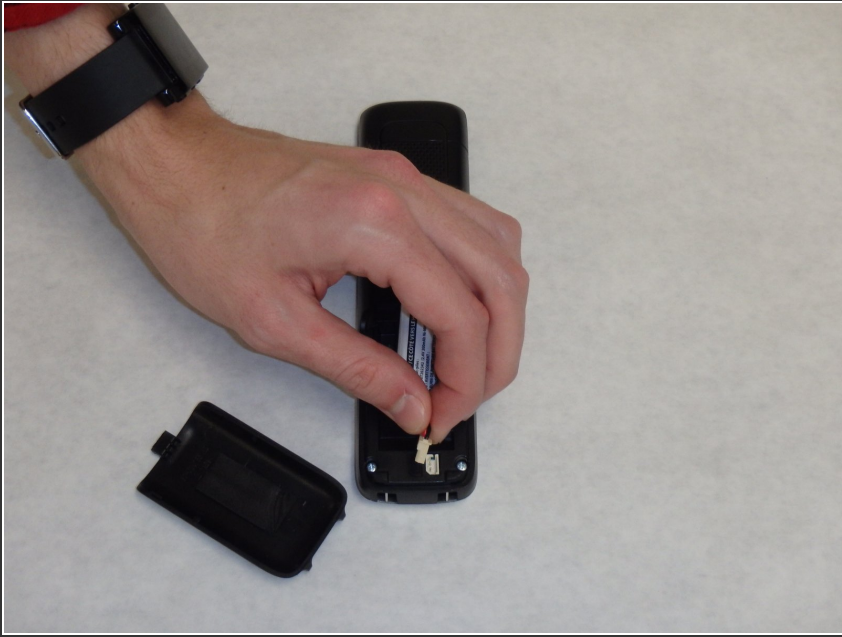

- Unplug the battery input cable.


## Step 4

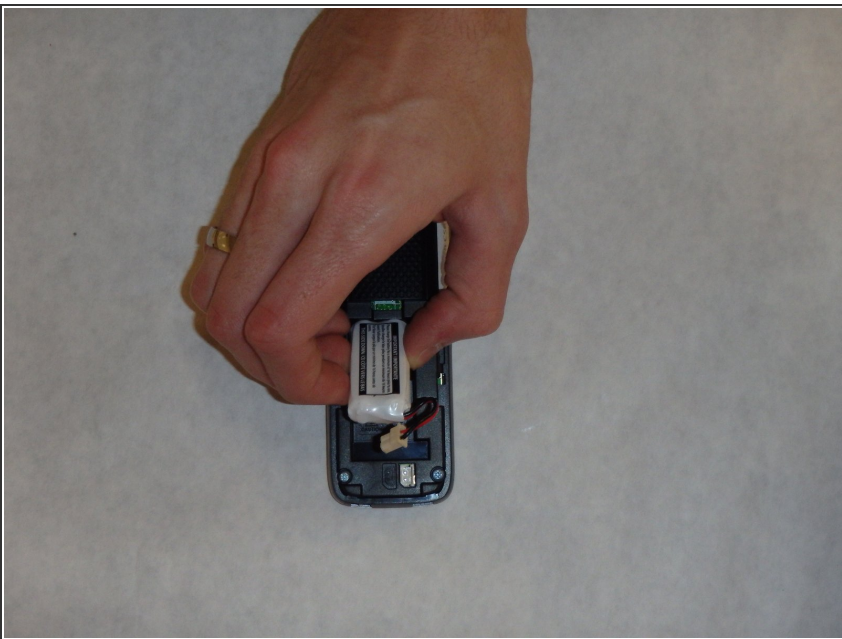

- Lift the battery out of the back of the phone.




## Step 5 — Circuit Board

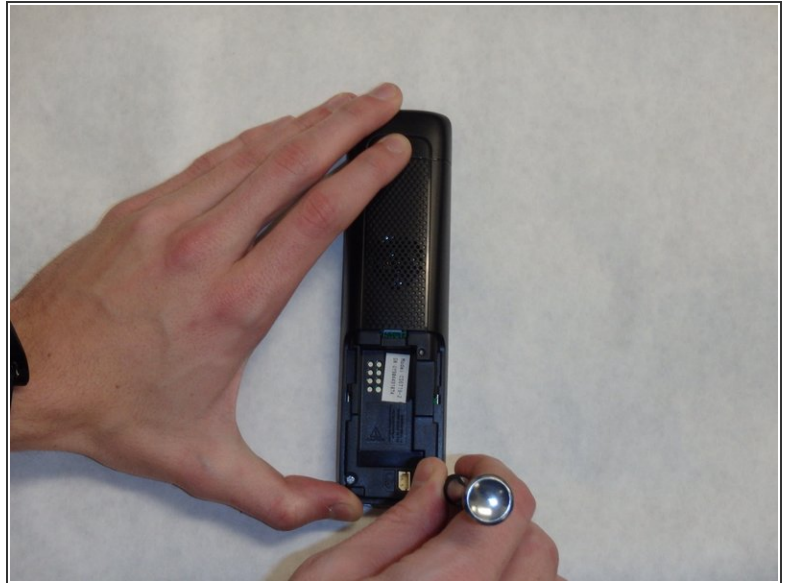



- Remove the two 9mm screws on the back side with a Phillips #0 screwdriver.

## Step 6

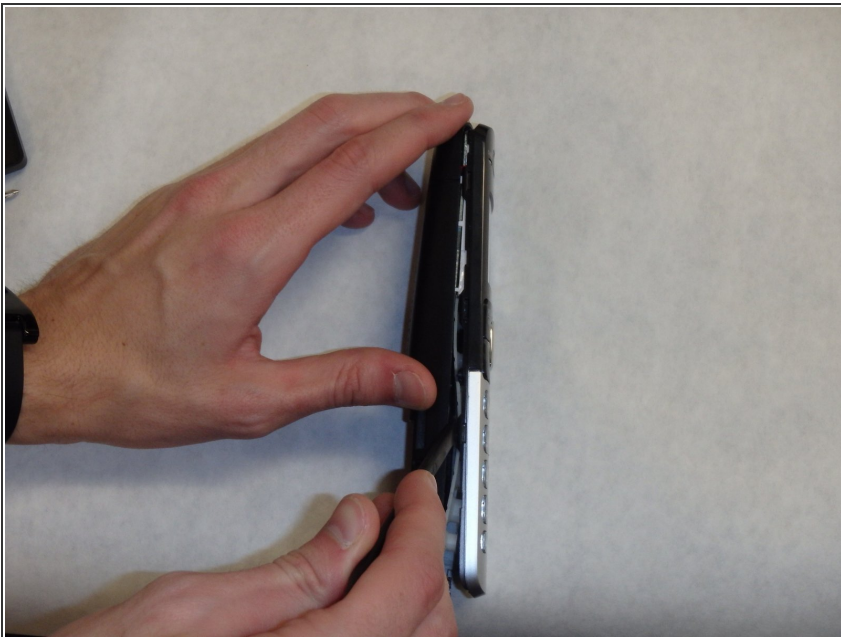

- Use the plastic opening tool and spudger to pry the back side of the phone off.

## Step 7

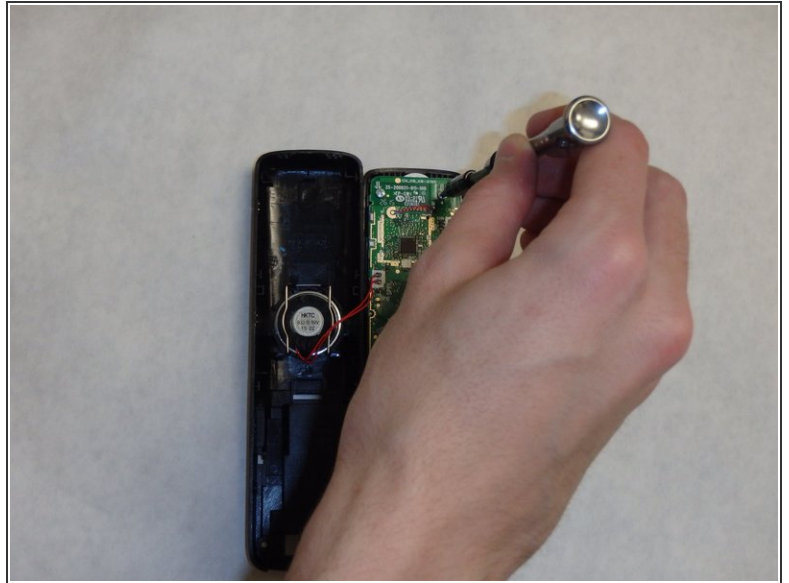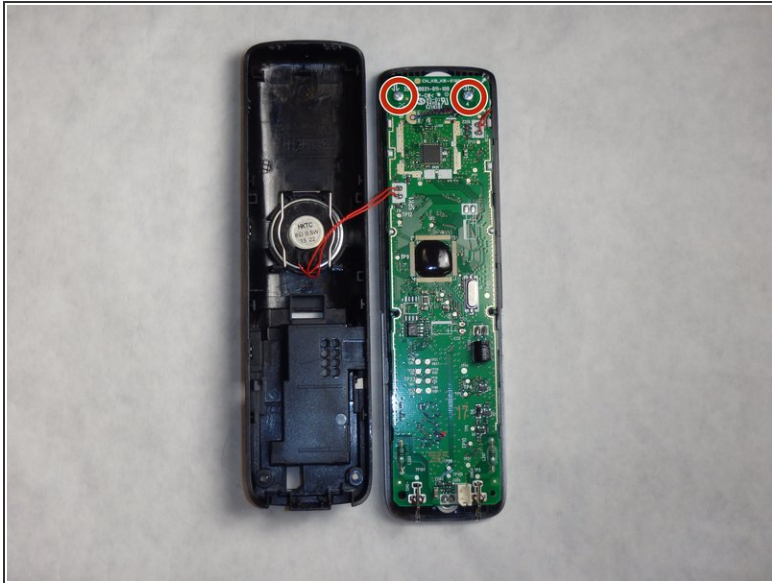

- Remove the two 9mm screws located inside the back cover at the top.

To reassemble your device, follow these instructions in reverse order.