


# Photive Rain Battery Replacement

Use this guide to replace a failed battery in...

Written By: abcdef ghijk

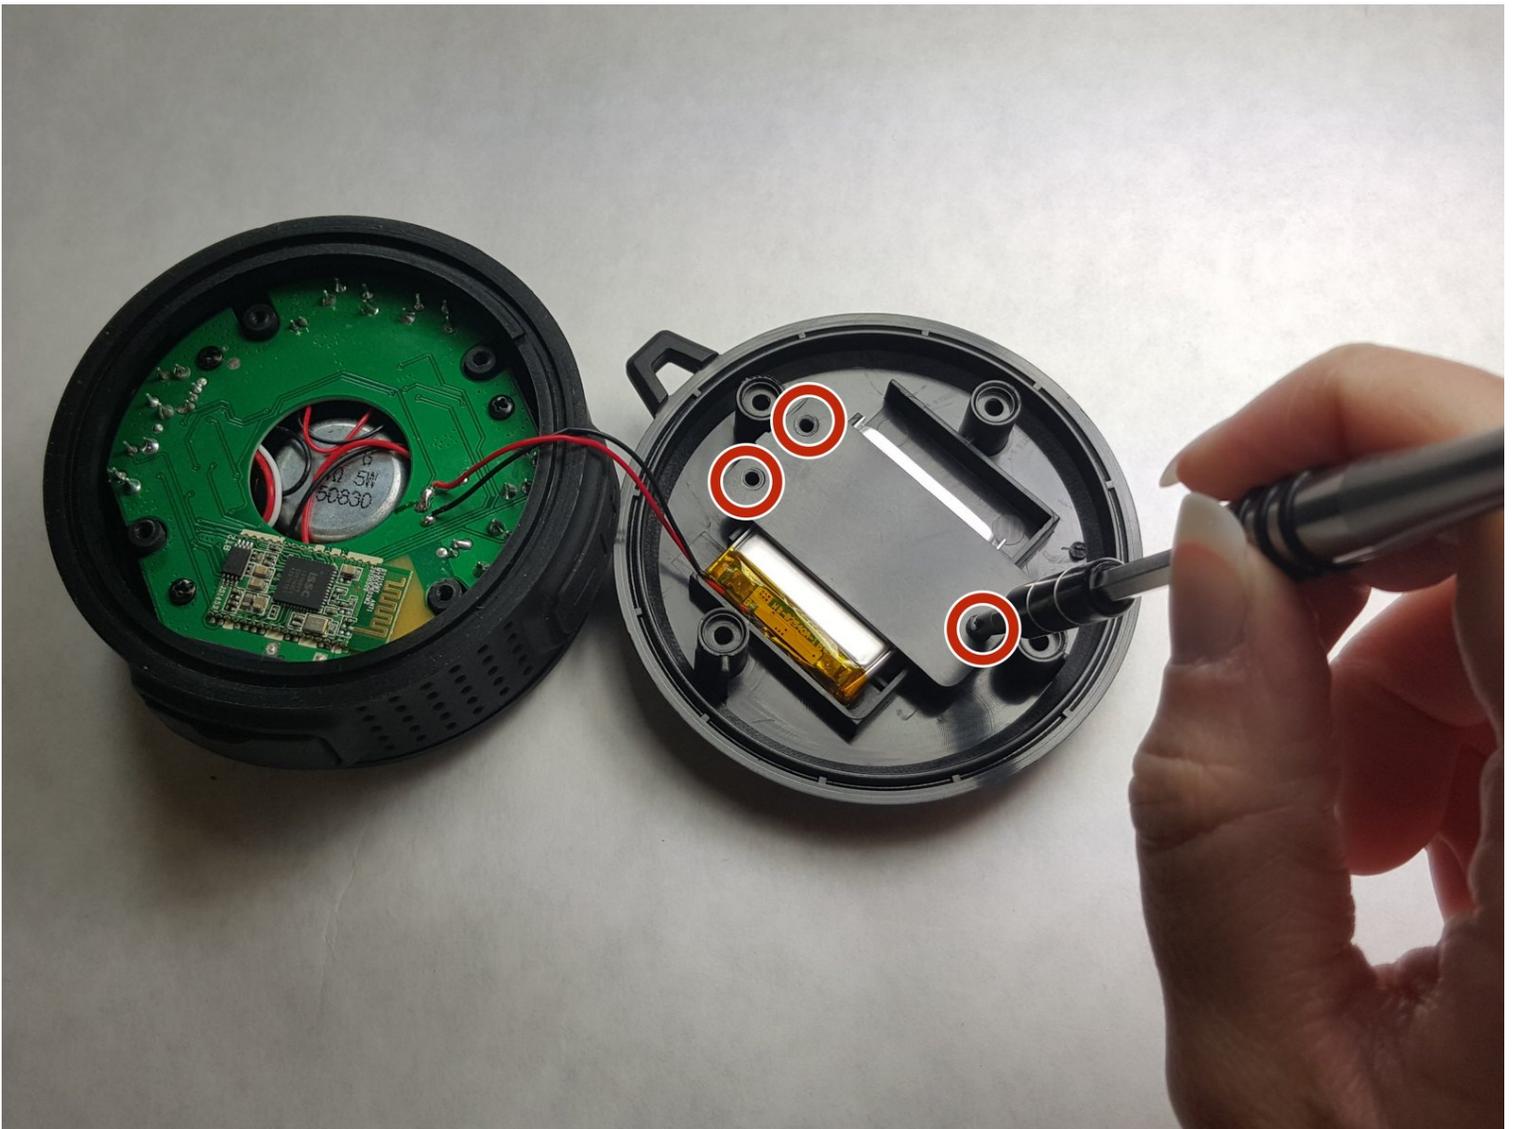

# INTRODUCTION

Use this guide to replace a failed battery in the Photive Rain.

## TOOLS:

Tournevis cruciforme #1 (1)

Soldering Iron (1)

Solder Wick Braid (1)

## Step 1 — Back Panel




-  Turn the speaker off before disassembling.
- Remove the suction cup from its groove by twisting and turning it.

## Step 2



- Remove the four 8.5 mm screws from the back panel of the speaker by using the Phillips #1 Screwdriver.
- Remove back panel

## Step 3 — Battery

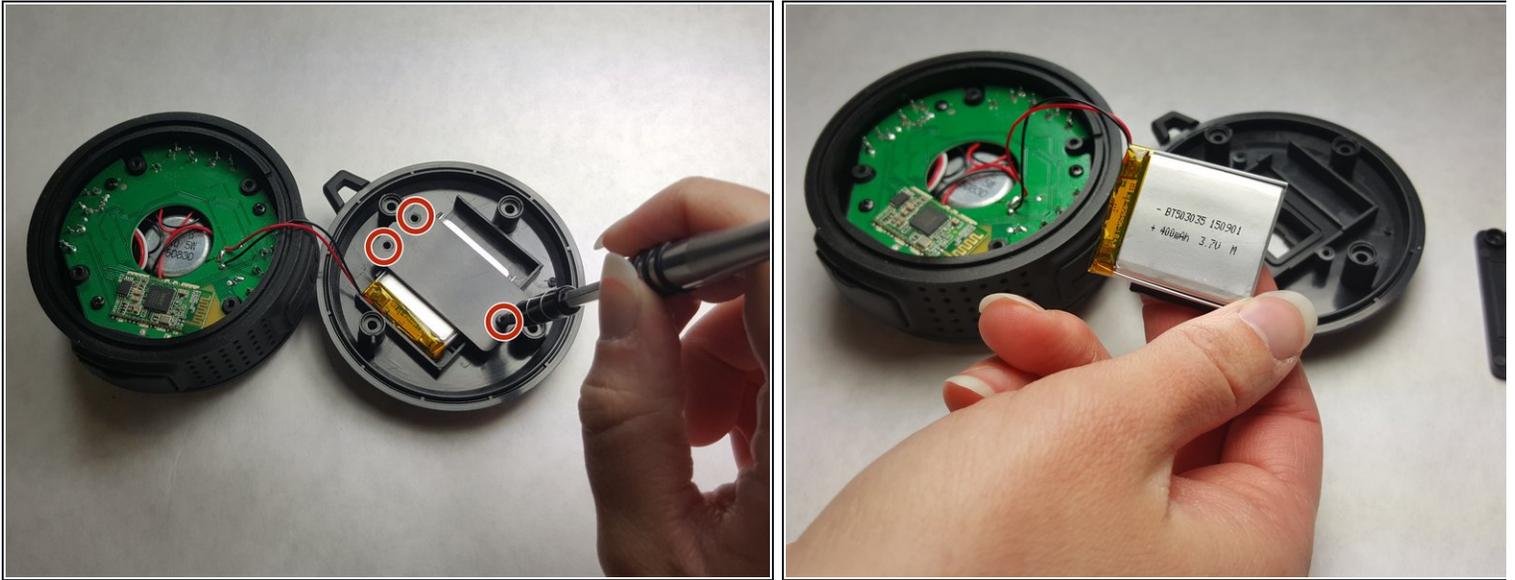

- Remove the plastic cover in front of the battery slot.
  - Unscrew all the 8.5mm screws that hold the cover to the slot.
- Separate the battery from the back panel as shown in photograph 3.

**⚠ Caution: manipulation of the device while the battery is still connected to the motherboard may result in electric shock.**

## Step 4



- Remove the battery from the motherboard.
  - Use a soldering pen to remove the solder connecting the battery wires to the motherboard.
- ⓘ Click here to access the [iFixit Soldering Guide](#). This will provide a safe and instructive manual on the usage of soldering pens.

To reassemble your device, follow these instructions in reverse order.