



# Zoomer Jurassic World Indominus Rex Tail Tip Replacement

A quick guide to replace the tip of the Zoomer Jurassic World Indominus Rex's Tail

Written By: Luke Selby



---

## INTRODUCTION


The mighty Indominus Rex, like any predator, has his own weaknesses. This time, the tip of his tail has broken! Let's get to work.



### TOOLS:



- [Phillips #1 Screwdriver](#) (1)
  - [Heavy-Duty Spudger](#) (1)
-

## Step 1 — Tail Tip

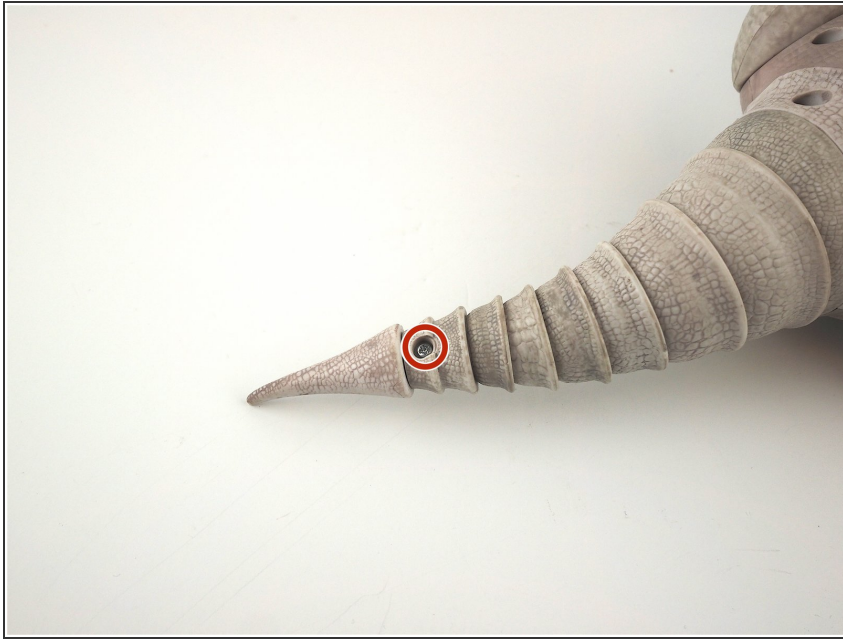

- ① Lay the toy on its back in order to have direct access to the screw holding the tail together.
- Remove the 9.4mm phillips screw from the tip of the tail.

## Step 2

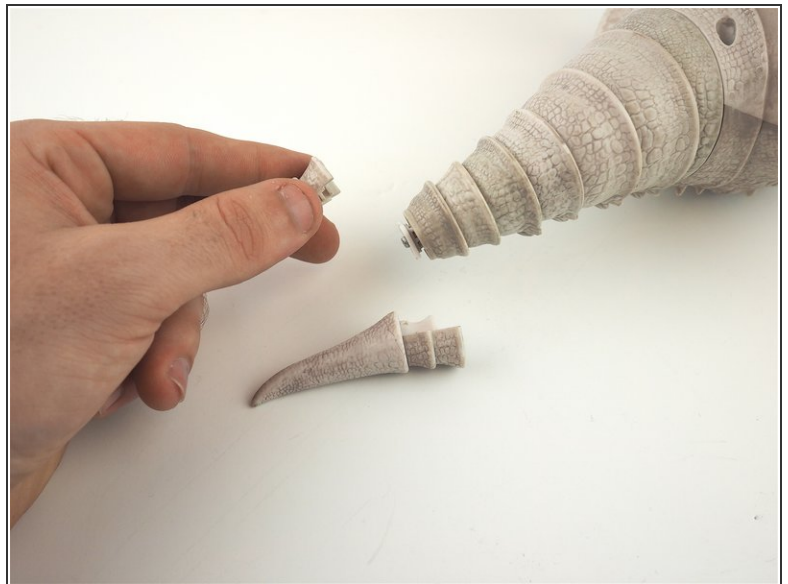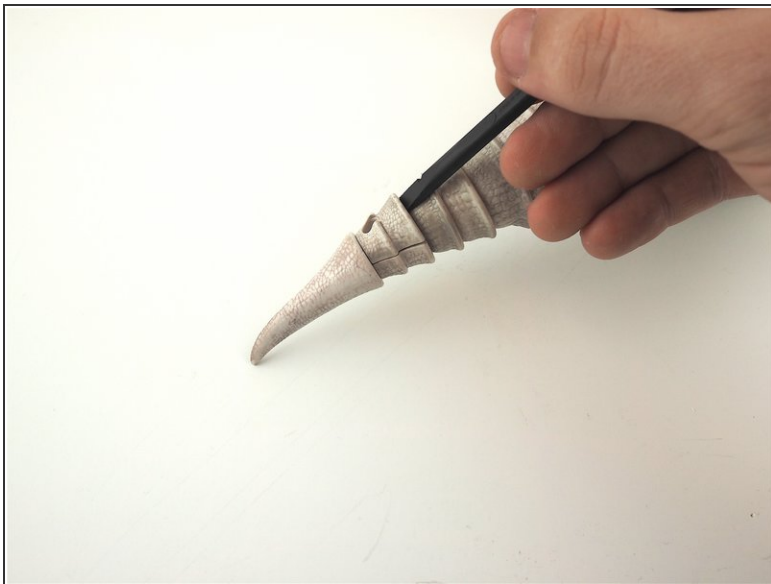

- Use a spudger to pry apart the pieces of the tail, and gently remove the two pieces of the tip for replacement.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 04:59:33 AM (MST).

