




Tagital T9X Speaker Replacement

Replace the speaker on the Tagital T9X tablet.

Written By: Adam Bamforth

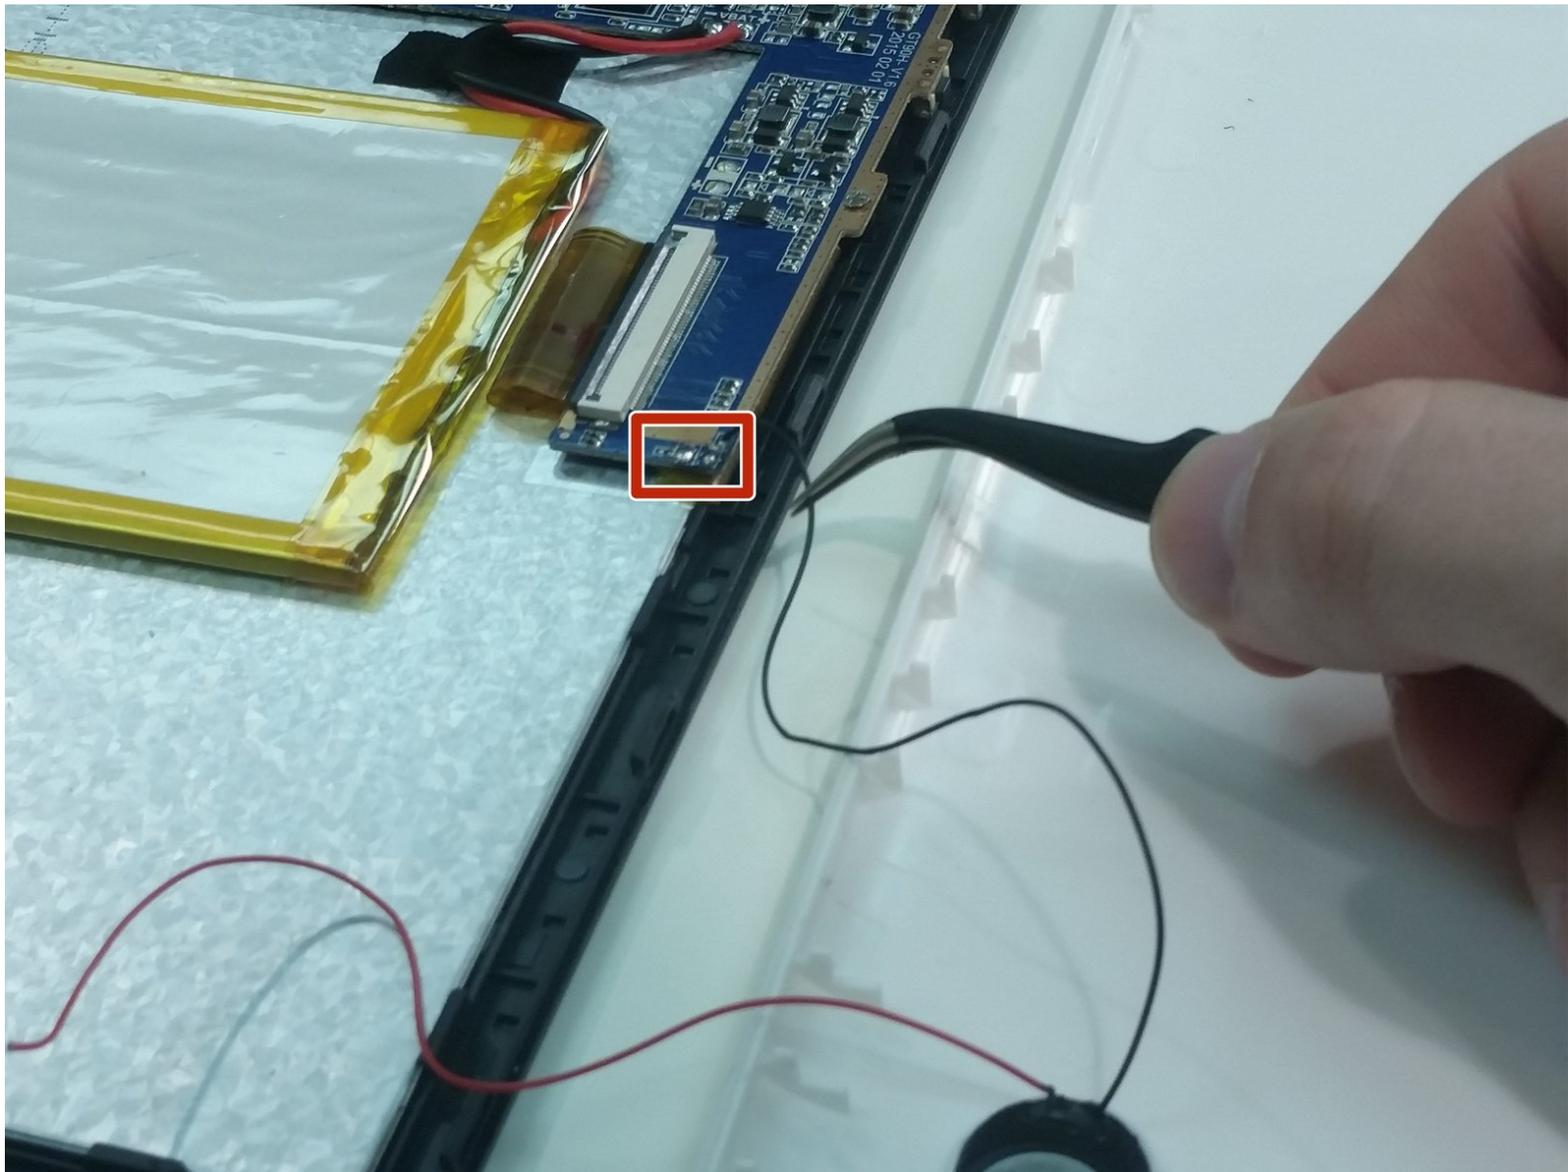

INTRODUCTION

Use this guide to replace the speaker in your Tagital T9X.

TOOLS:

- [64 Bit Driver Kit](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Cover



- With the tablet turned off, remove the two 5mm Phillips head screws from the top of the tablet.


⚠ These screws are extremely easy to lose. Be sure to store them in a safe place.

Step 2




- Use a 1 cm wide plastic opening tool to remove the back panel. Go around the entire back panel to ensure safe removal.
- The power, return, and volume buttons are not firmly secured to the panel; it is likely they will fall off in the process of removing the panel.

Step 3 — Speaker

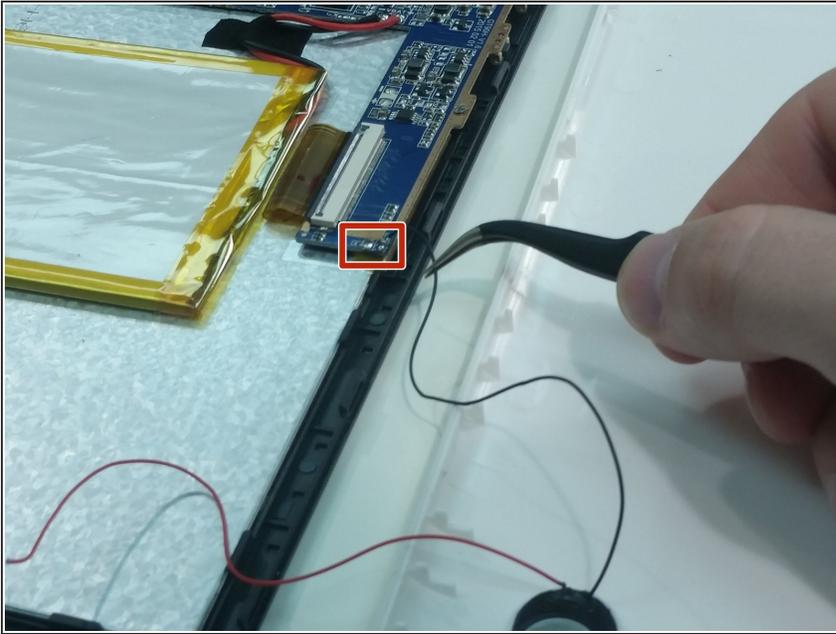

- Detach speaker wires from motherboard.
- ⓘ The wires are fragile and may break off while handling them.

Step 4

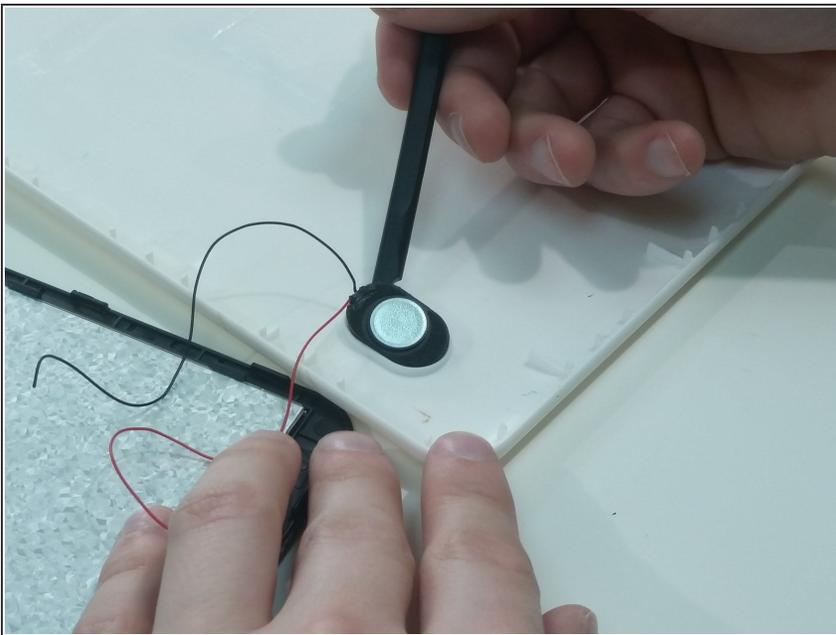

- Use the plastic spudger to remove speaker from the back panel.

To reassemble your device, follow these instructions in reverse order.