




Microsoft Surface Pro 4 SSD Drive Replacement

Removing SSD Drive or Replacing SSD Drive.

Written By: StacyAnn Brown

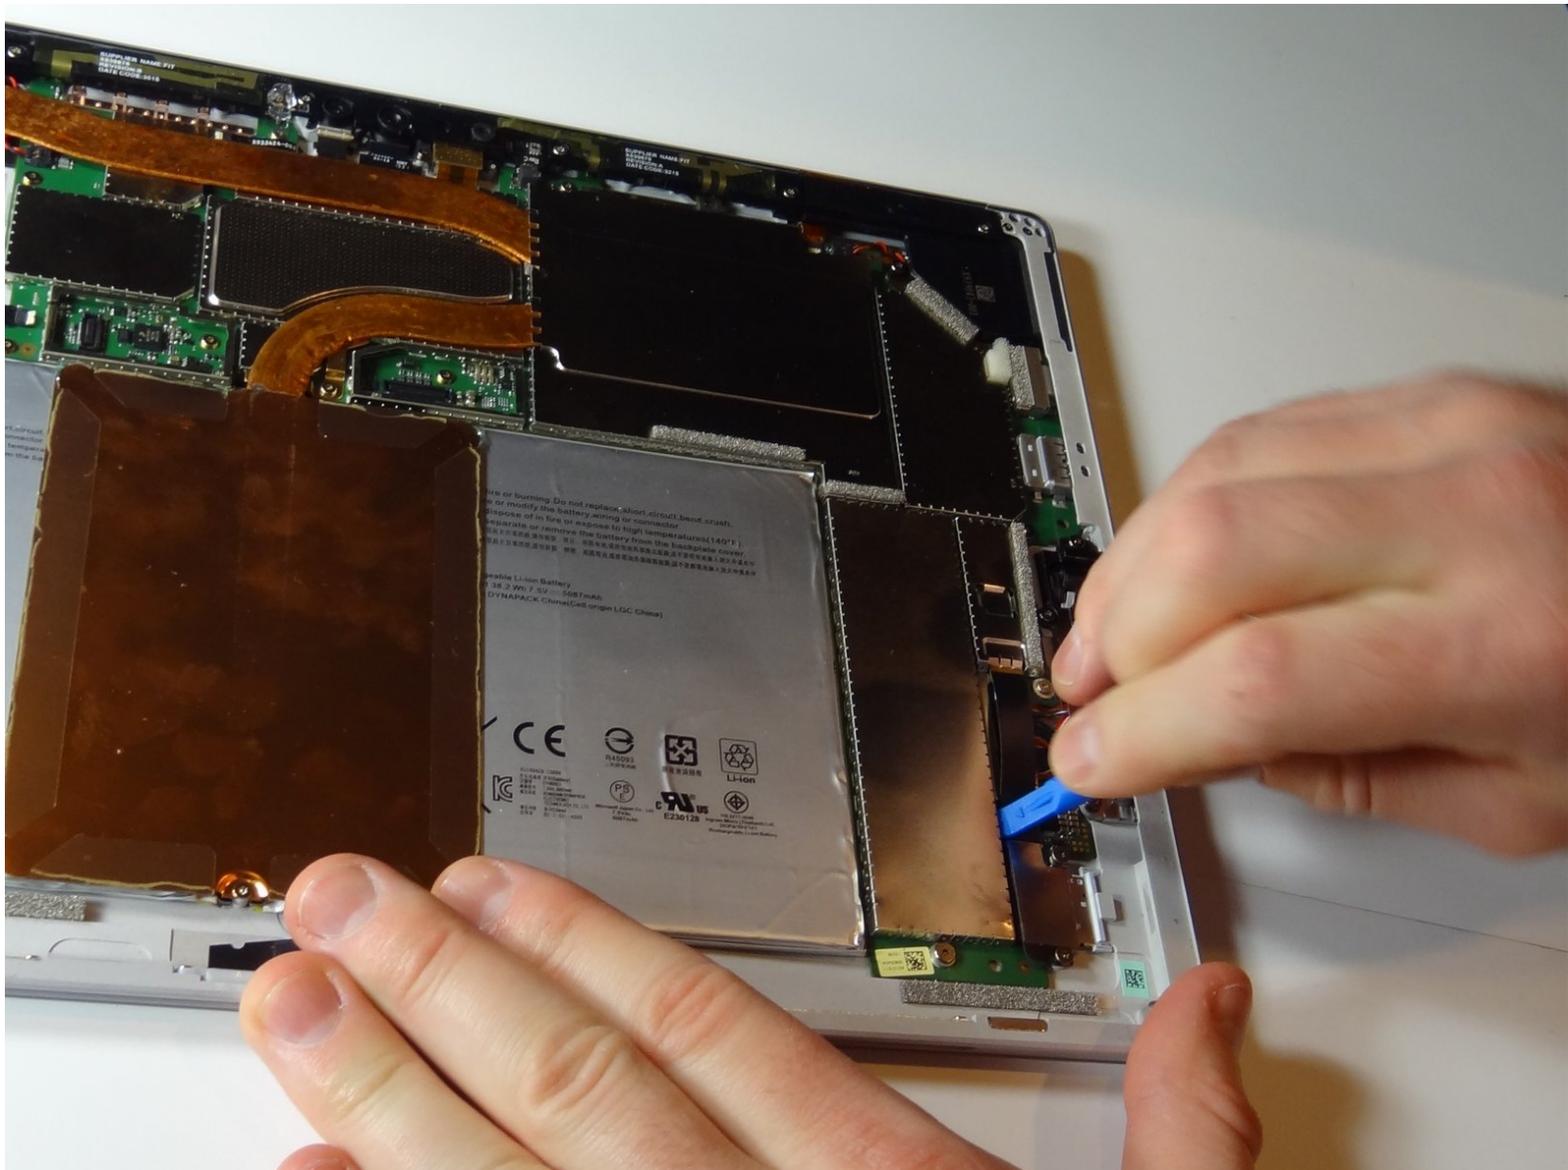

INTRODUCTION

The Surface Pro 4 comes equipped with an M.2 Samsung SSD. Here's how to replace it if it fails or if you want to upgrade.


TOOLS:

- [Small Plastic Spudger](#) (1)
- [Tesa 61395 Tape](#) (1)
- [Microfiber Cleaning Cloths](#) (1)
- [Heat Gun](#) (1)
- [Isopropyl Alcohol](#) (1)
- [iFixit Opening Picks \(Set of 6\)](#) (1)
- [iFixit Opening Tool](#) (1)
- [Suction Handle](#) (1)
- [T4 Torx Screwdriver](#) (1)
- [Spudger](#) (1)

PARTS:

- [1 TB Crucial P5 3D NAND PCIe M.2 SSD](#) (1)
- [Surface Pro 4 Adhesive Strips](#) (1)

Step 1 — SSD Drive

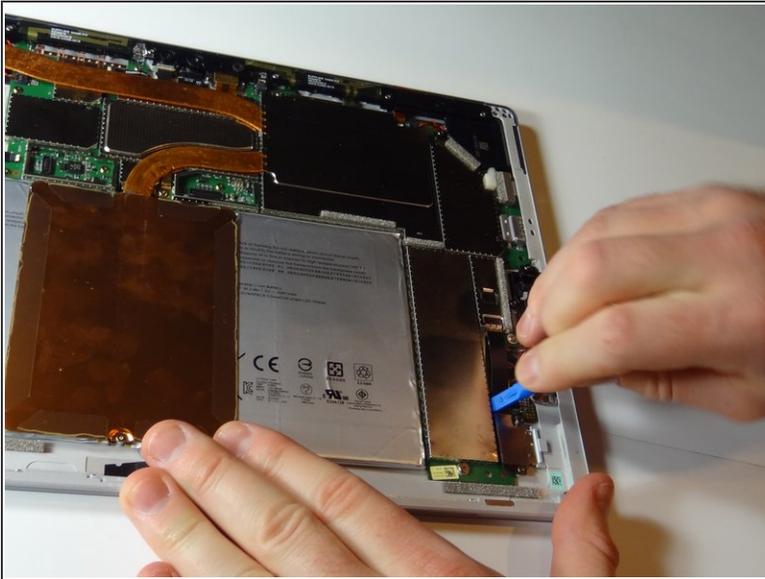


- Use a blue plastic opening tool to pry around the edges of the metal shield covering the SSD drive.

Step 2



- Remove the 1.0 mm Torx T4 screw holding down the SSD drive.

Step 3

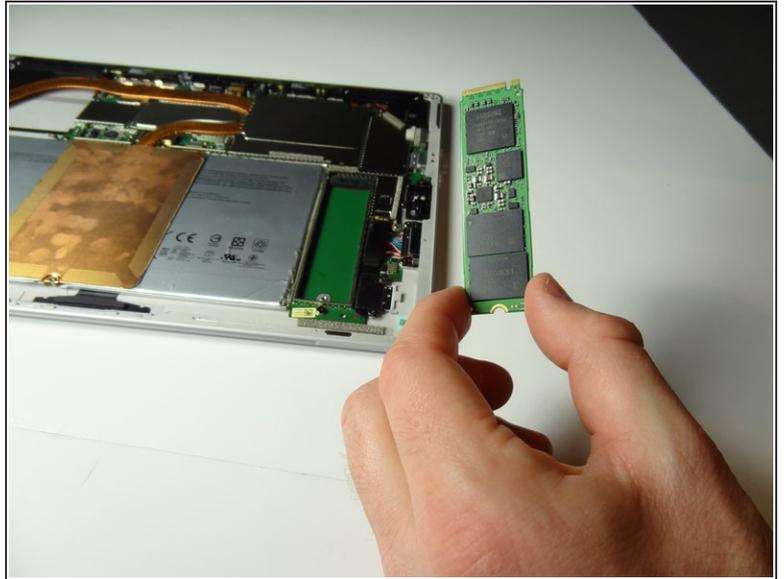

- Use a blue plastic opening tool or spudger to lift the SSD drive slightly and grasp it with your fingers. Pull the drive down towards yourself to remove it from the device.

To reassemble your device, follow these instructions in reverse order.