

Electrohome EAAC475 Battery Replacement

This guide will show how to replace the battery the electrohome EAAC475.

Written By: Ruolin Cai



INTRODUCTION

The life of the battery will reduce and it won't work after a certain amount of time using the device. Therefore, it is always good to check the battery first before taking it apart.

This guide is to inform the reader how to remove and replace battery in an electrohome EAAC475 safely when a battery problem occurs.



TOOLS:

Phillips #1 Screwdriver (1)



PARTS:

CR2032 Lithium Battery (1)


Step 1 — Battery





- Remove the 10 mm Phillips #1 screw from the battery cover.
- Remove the battery cover.

Step 2

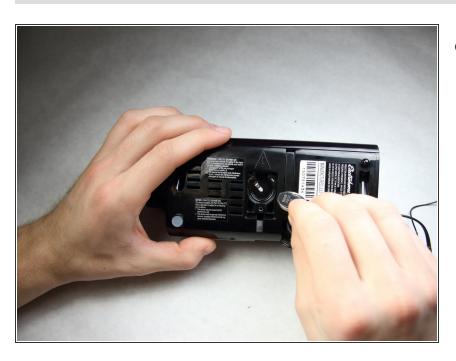

Remove the flat lithium battery.

To reassemble your device, follow these instructions in reverse order.